


Service Manual

Portable Stereo CD System

Radio Cassette

*1  DOLBY B NR


*2 **MASH**
multi-stage noise shaping

COMPACT
disc
DIGITAL AUDIO

RX-DT75

Colour



(K) Black Type

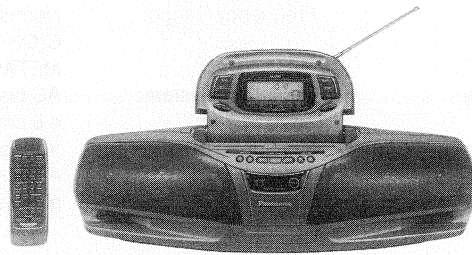

Areas

Suffix for Model No.	Area	Colour
(EB)	Great Britain	(K)
(EG)	Europe and Germany	

With Useful Troubleshooting for Mechanism Block

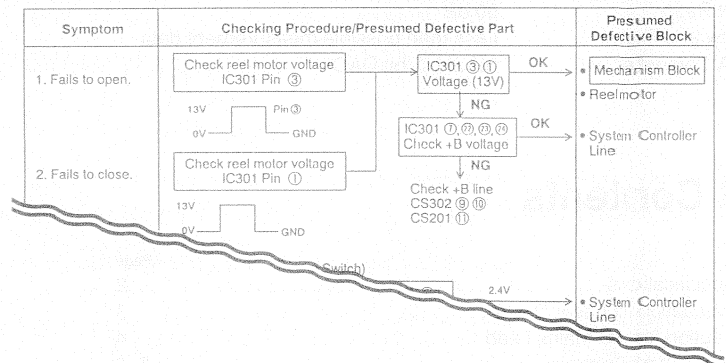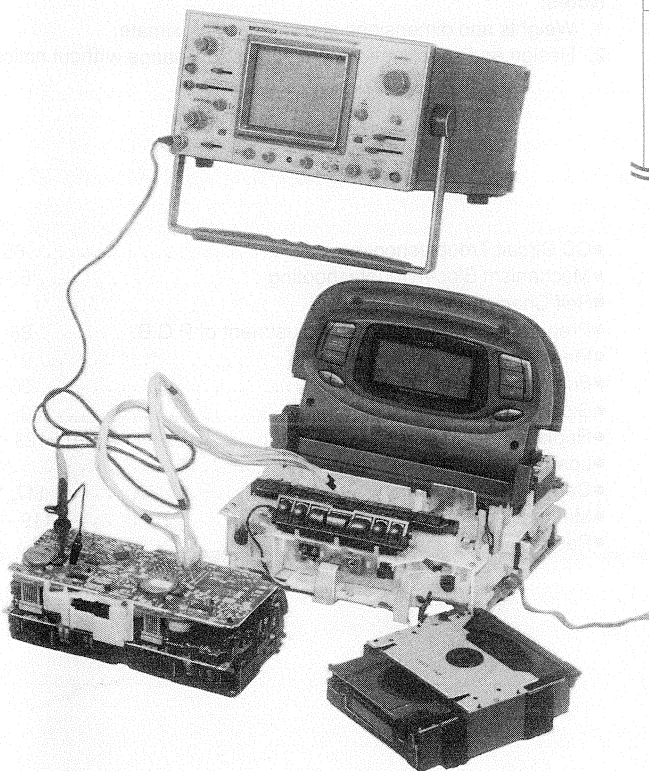

■ **Contents**

	Page
1. Preparation	67
2. Main Block of Mechanism Control P.C.B.	67
3. Object and Description	67
4. Summary of Troubleshooting Guide	68
5. Electrical Block Troubleshooting	69~72
6. Mechanism Block Troubleshooting	73, 74
7. Trouble Examples (Cassette Deck)	74
8. Mechanism Block Operation	75~78
9. Time Chart	79~84

TAPE DECK: AR-1 MECHANISM SERIES TRAVERSE DECK: RAE0113Z MECHANISM SERIES

■ Specifications

General:

Power Requirement:	AC; 230~240 V, 50 Hz Battery; 15 V (Ten R20/LR20, UM-1 batteries) Memory Back-up for Computer/Clock; 6 V (Four R6/LR6, UM-3 batteries)
Power Consumption:	57 W
Power Output:	70 W (PMPO)
Speaker:	Woofer; 8 cm PM Dynamic speaker 2.7Ω Midrange; 8 cm PM Dynamic speaker 8Ω Tweeter; 1.4 cm Ceramic speaker
Inputs:	MIX MIC; 2.5 mV, 200~600Ω, Ø3.5 AUX; 200 mV/47 kΩ, Ø3.5 (STEREO)
Outputs:	HEADPHONES; 32Ω, Ø3.5 CD OUT; 1 V, Ø3.5 (STEREO)
Dimensions:	680 (W)×192 (H)×284 (D) mm (Top panel closed)
Weight:	7.9 kg without batteries

CD Player:

Sampling Frequency:	44.1 kHz
Decoding:	16-bit linear
Beam Source:	Semiconductor laser (wavelength 780 nm)
No. of Channels:	2 channels, stereo
Frequency Range:	20~20,000 Hz
Dynamic Range:	90 dB
S/N Ratio:	90 dB
Wow and Flutter:	Less than possible measurement data
D/A Converter:	MASH (1 bit DAC)

Radio:

Frequency Range:	FM; 87.5~108.0 MHz LW; 144~288 kHz MW; 522~1611 kHz
Intermediate Frequency:	FM; 10.7 MHz LW/MW; 459.0 kHz
Sensitivity:	FM; 4.4 μV/0.5 mW H.P. output (-3 dB Limit Sens.) LW/MW; 56 μV/m/0.5 mW H.P. output (Max.)

Tape Recorder:

Frequency Range:	Normal; 30~16,000 Hz CrO ₂ ; 30~17,000 Hz METAL; 30~18,000 Hz
Recording System:	AC bias, AC erase
Tape Speed:	4.8 cm/s
Monitor System:	Variable sound monitor
Track System:	4-track 2-channel stereo recording and playback

***1Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation. "Dolby" and the double-D symbol are trade marks of Dolby Laboratories Licensing Corporation.**

***2MASH is a trademark of NTT.**

Notes:

- Weights and dimensions shown are approximate.
- Design and specifications are subject to change without notice.

■ Contents

	Page	Page
●Specifications	2	
●Precaution of Laser Diode	3	
●Caution for AC Mains Lead	4	
●Location of Controls	5, 6	
●Concerning the Top Panel	7	
●Common Operations	7, 8	
●Setting the Clock	9	
●Having Fun with a Microphone	10	
●Using the External Units	11	
●Concerning the Remote Control	11	
●Menu Operations	12~14	
●Handling Precautions for Traverse Deck	15	
●Disassembly Instructions	15~30	
●Replacement of Main Parts	31~36	
●Reassembly Instructions	37~41	
●Schematic Diagram	42~55	
●Printed Circuit Board Diagram	56~62	
●Wiring Connection Diagram	63, 64	
●CD Circuit Troubleshooting		65, 66
●Mechanism Block Troubleshooting		67~84
●Self Check Function		85
●Preparations for Check and Adjustment of P.C.B.		86~90
●Measurements and Adjustments		91~95
●Function of IC Terminals		96~99
●Block Diagram		100~106
●Replacement Parts List		107~114, 116, 123, 124
●Loading Unit Parts Location		115
●Cabinet Parts Location		117, 118
●Mechanism Parts Location		119~122
●Packaging		124

CAUTION:
THIS PRODUCT UTILIZES A LASER.
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

■ Precaution of Laser Diode

CAUTION: This product utilizes a laser diode with the unit turned "on", invisible laser radiation is emitted from the pick up lens.

Wave length: 780 nm
Maximum output radiation power from pick up: 100 μ W/VDE

Laser radiation from the pick up lens is safety level, but be sure the followings:




1. Do not disassemble the optical pick up unit, since radiation from exposed laser diode is dangerous.
2. Do not adjust the variable resistor on the pickup unit. It was already adjusted.
3. Do not look at the focus lens using optical instruments.
4. Recommend not to look at pick up lens for a long time.

ACHTUNG: Dieses produkt enthält eine laserdioden. Im eingeschalteten zustand wird unsichtbare laserstrahlung von der lasereinheit abgestrahlt.

Wellenlänge: 780 nm
Maximale strahlungsleistung der lasereinheit: 100 μ W/VDE

Die strahlung an der lasereinheit ist ungefährlich, wenn folgende punkte beachtet werden:

1. Die lasereinheit nicht zerlegen, da die strahlung an der freigelegten laserdioden gefährlich ist.
2. Den werksseitig justierten einstellregler der lasereinheit nicht verstellen.
3. Nicht mit optischen instrumenten in die fokussierlinse blicken.
4. Nicht über längere zeit in die fokussierlinse blicken.

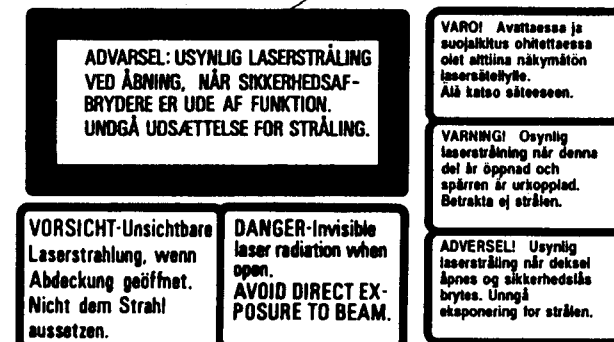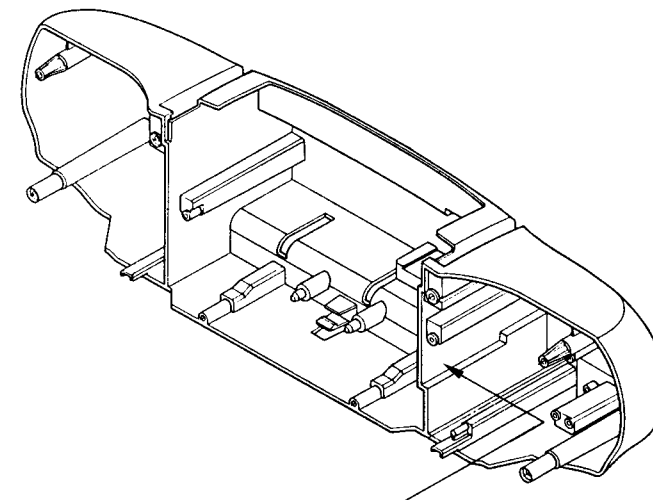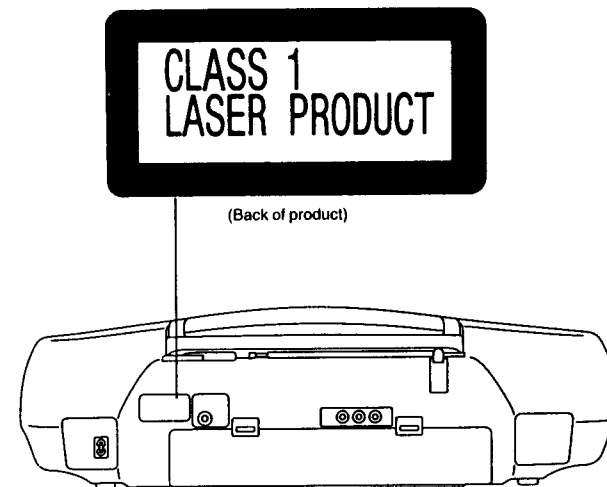

■ Caution for AC Mains Lead [(EB) area only]

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.


Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.


A replacement fuse cover can be purchased from your local dealer.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

Under no circumstances should either of these wires be connected to the earth terminal of the three pin plug, marked with the letter E or the Earth Symbol .

Before use

Remove the connector cover as follows.

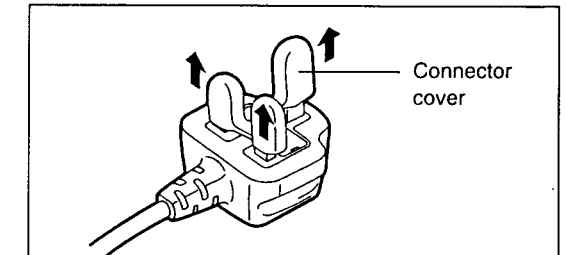


CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY.

THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

How to replace the fuse

1. Remove the fuse cover with a screwdriver.

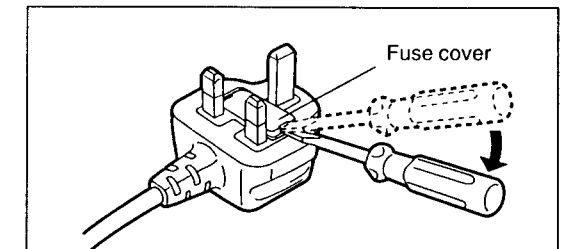

If a new plug is to be fitted please observe the wiring code as shown below.

If in any doubt please consult a qualified electrician.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:


Blue: Neutral

Brown: Live


As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK.

2. Replace the fuse and attach the fuse cover.

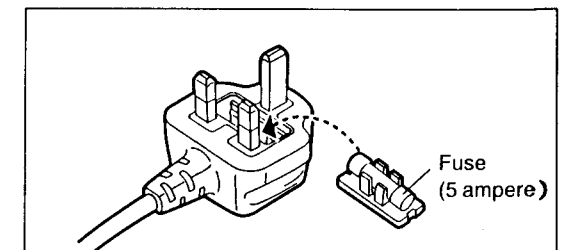


Location of Controls

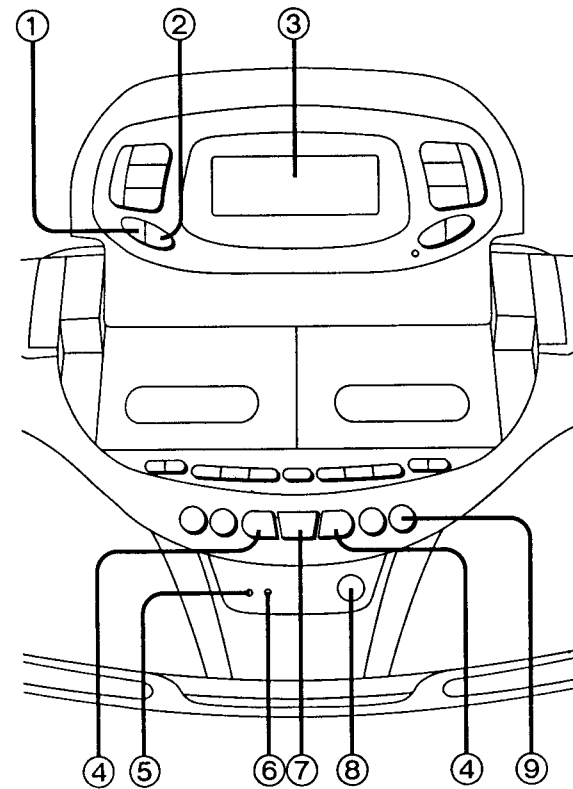

Basic controls

No.	Name
①	Timer button (TIMER)
②	Preset equalizer button (PRESET EQ)
③	Display section
④	Volume buttons (VOL -, VOL +)
⑤	Power/battery check indicator (POWER/BATT)
⑥	Standby indicator (STANDBY \downarrow) When the unit is connected to the AC mains supply, this indicator lights up in standby mode and goes out when the unit is turned on.
⑦	Power "STDBY \downarrow (AC)/ON" switch [POWER, STDBY \downarrow (AC)/ON] Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
⑧	Remote control signal sensor (SENSOR)
⑨	Top panel open/close button (TOP PANEL OPEN/CLOSE)

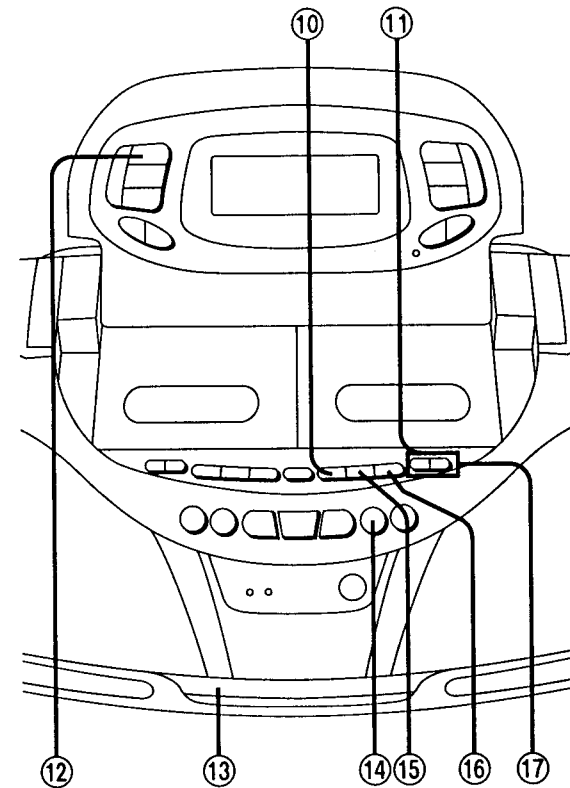


Tuner controls

No.	Name
⑩	Tuner/band button (TUNER/BAND)
⑪	Tuning buttons (TUNING/CD \leftarrow /K<, >/R+)


CD controls

No.	Name
⑫	Auto CD record button (AUTO CD RECORD)
⑬	CD tray
⑭	CD tray open/close button (CD OPEN/CLOSE)
⑮	Play/pause button (\triangleright / \square)
⑯	CD stop/clear button (\square /CLEAR)
⑰	Skip/search buttons (TUNING/CD \leftarrow /K<, >/R+)

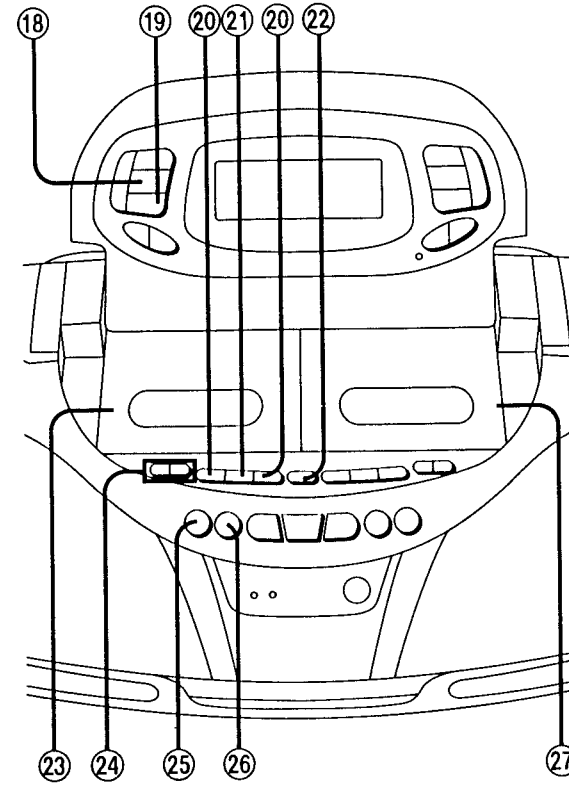

Deck controls

No.	Name
⑱	Tape edit button (TAPE EDIT)
⑲	Rec pause button (REC PAUSE)
⑳	Playback button (\triangleleft REV, FWD \triangleright)
㉑	Tape stop button (\square)
㉒	Deck 1/deck 2 select button (DECK1/2)
㉓	Deck 1 cassette lid (DECK1)
㉔	Fast-forward/rewind/tape program sensor (TPS) buttons (\triangleleft TPS \triangleright)
㉕	Deck 1 cassette lid open/close button (DECK1 OPEN/CLOSE)
㉖	Deck 2 cassette lid open/close button (DECK2 OPEN/CLOSE)
㉗	Deck 2 cassette lid (DECK2)

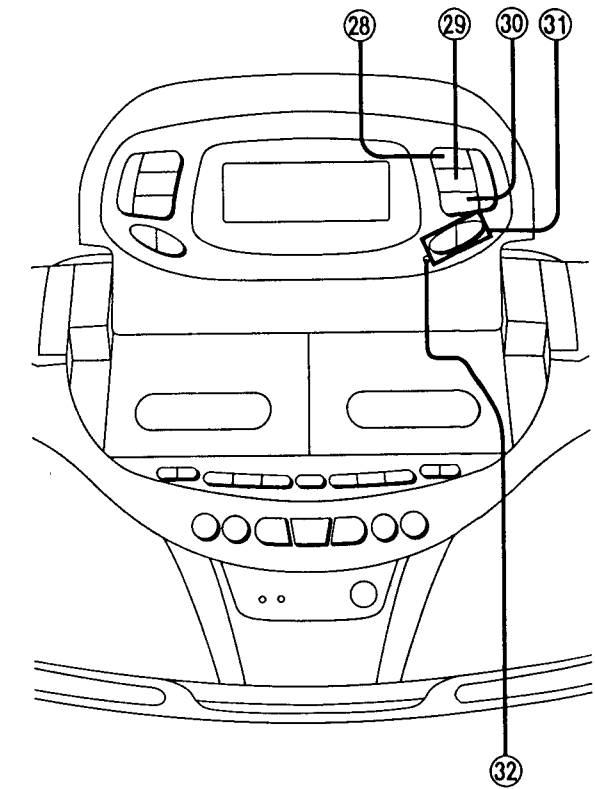


MENU controls

No.	Name
⑳	Main menu select button (MAIN MENU SELECT)
㉑	Sub menu select button (SUB MENU SELECT)
⑳	Setting button (SET)
㉑	Setting menu select buttons (\leftarrow /REV, FWD/ \rightarrow)
㉒	Setting menu select indicator

Concerning the Top Panel

Opening the panel

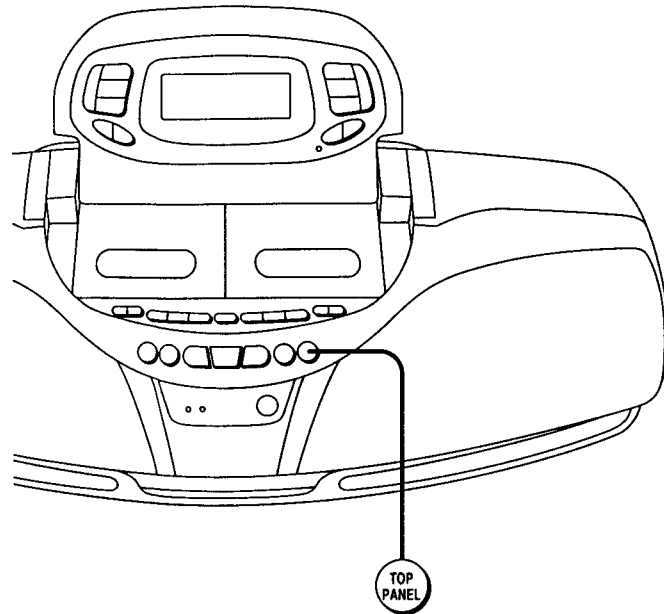

To open the panel



Press **TOP PANEL OPEN/CLOSE**.
The unit is turned on.

To close the panel




Press **TOP PANEL OPEN/CLOSE**.


When dry cell batteries are being used to power the unit, the panel cannot be opened or closed by pressing TOP PANEL on the remote control in the unit off mode. Turn the unit on first before using this button.

Common Operations

Basic operations

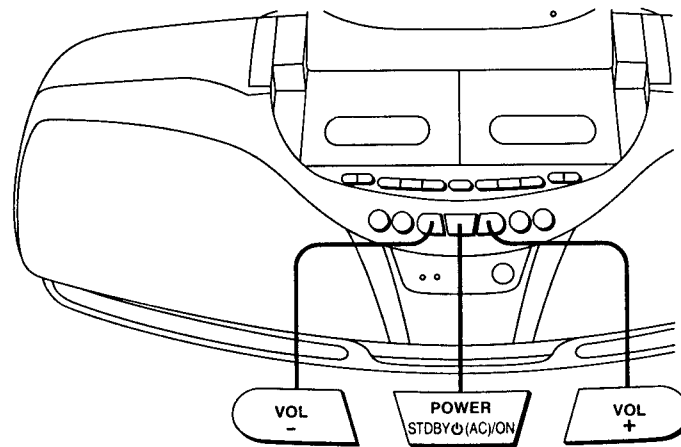

Turning the unit ON/OFF




To turn the unit **ON**:
Press **POWER**.



To turn the unit **OFF**:
Press **POWER**.
When using an AC power, the unit is turned to standby mode. (STANDBY indicator lights.)

Adjusting the volume



Press **VOL -** or **VOL +** to adjust the volume to the desired level.


VOL +: Press this to increase the volume.
VOL -: Press this to reduce the volume.

The volume level can be adjusted from "-- dB" (lowest) to "0 dB" (highest).


Reference

The volume can be adjusted even when the unit is off.

To listen through headphones (not included)

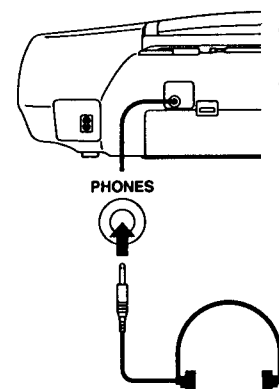


- Turn down the volume before connecting the headphones.
- Avoid listening for prolonged periods of time to prevent hearing damage.
- Plug type used: Stereo mini

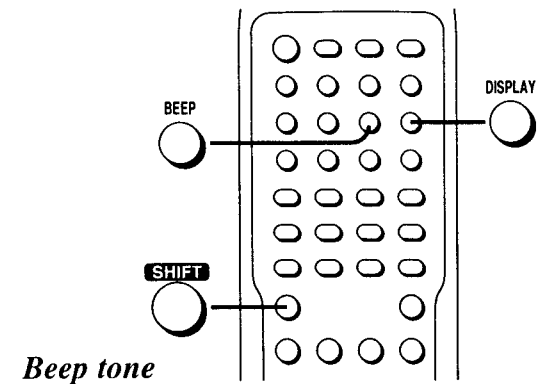

Beep tone

When one of the function buttons is pressed, one beep is heard to verify that the button has been properly operated. When one of the buttons has been pressed in error, two beeps are heard as a warning.

If you do not intend to use the beep tone function:
(Available only from the remote control)



Holding SHIFT down

While the unit is on;
While holding **SHIFT** down, press **BEEP**.


The "BEEP OFF" display appears.

To use the beep tone function, repeat the same operation. (The "BEEP ON" display appears.)

Displaying the present time or linear tape counter

These operations come in handy to check the present time during play or calculate the time remaining on the tape during recording using the linear tape counter.

(Available only from the remote control)




Holding SHIFT down

While the unit is on;
While holding **SHIFT** down, press **DISPLAY**.

Each time **DISPLAY** is pressed, the display will change.

Example: When DISPLAY is pressed during CD play;


1. The play status is indicated.
2. The present time is indicated.
3. The linear tape counter display appears.

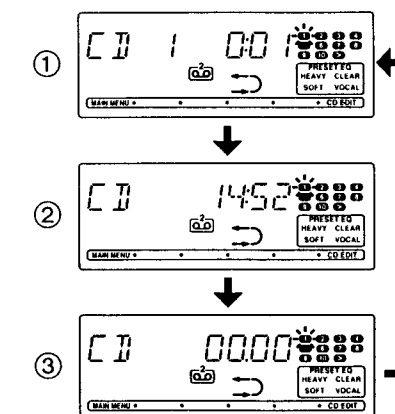

"----" appears for the linear tape counter display when no tape has been loaded.

Easy listening

(Only when a household mains outlet is used for the unit)

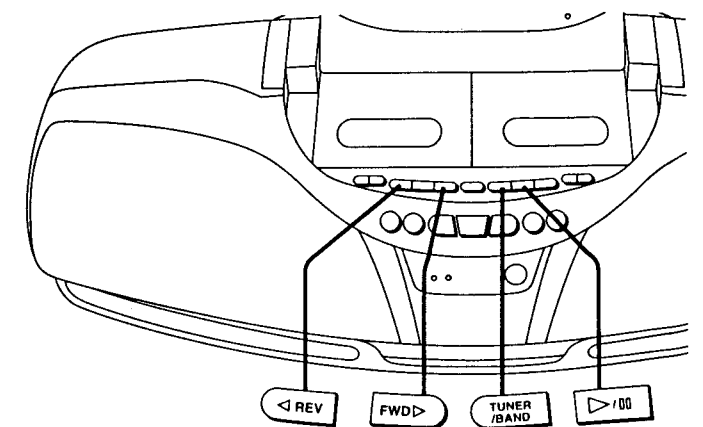

When a CD or tape is inserted, you can start play directly by pressing a single button (even in the unit off mode).



Listening to CDs:



Listening to tapes:




Listening to radio broadcasts:

References

- You can play directly by pressing the same button on the remote control transmitter.
- Even when the unit is being powered by batteries, you can start play directly by pressing the single button (mentioned above) after turning the unit on.

■ Setting the Clock

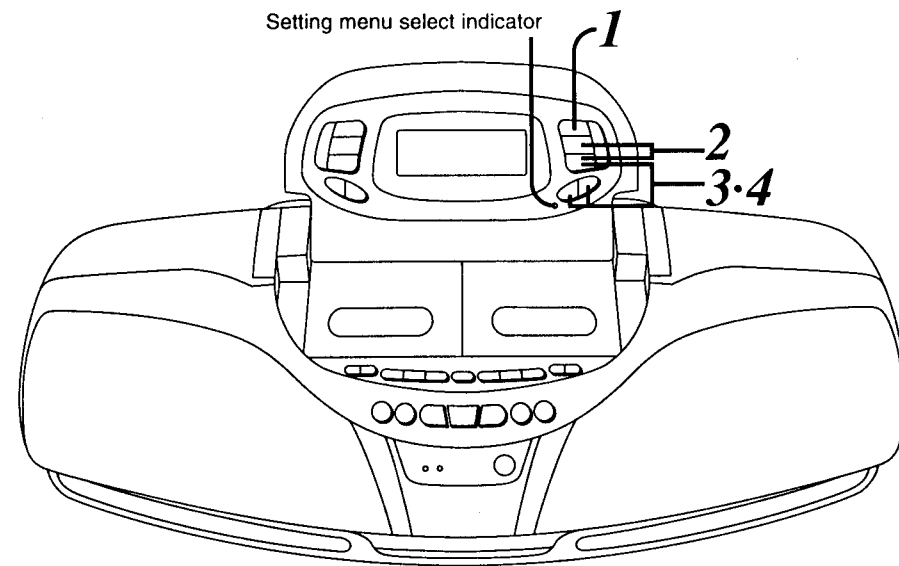

Example: Setting the clock to 16:20 in the TAPE mode;

1 Press **MAIN MENU SELECT** to display **TIME**.
 →TAPE→TIME→SOUND→
 (The display changes each time the button is pressed.)

2 Press **SUB MENU SELECT** to display **CLOCK**.
 →TIMER→SLEEP→CLOCK→
 (The display changes each time the button is pressed.)

Press **SET**.
 The setting menu select indicator flashes.

3 Press **-/REV** or **FWD/+** to display the hours (16).
 1-2-3...15-16...23-0
 (The display changes each time the button is pressed.)

Press **SET**.

4 Press **-/REV** or **FWD/+** to display the minutes (20).
 01-02...19-20...59-00
 (The display changes each time the button is pressed.)


Press **SET**.
 The clock now starts operating, and the display returns to its original status.

If you have made a mistake during operation:

1. Press MAIN MENU SELECT.
2. Repeat the procedure from step 1.


■ Having Fun with a Microphone

Karaoke

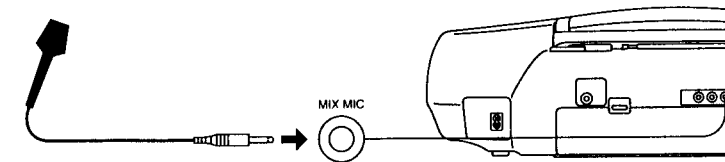


1. Lower the volume and connect the microphone. (Plug type: mini)
2. Start playing a CD or tape or turn on the radio.
3. Start Karaoke singing into the microphone and adjust the volume.

Recording your own voice from the microphone

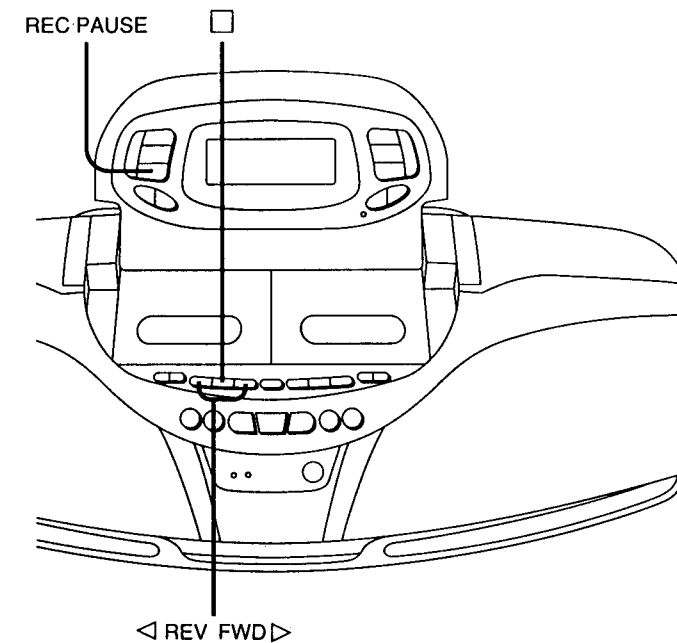

1. Connect the microphone, and load the tape in deck 2.
2. Select the Dolby noise reduction setting and reverse mode.
3. Press the tape button.
4. Press **REC PAUSE**.
5. Press **◁ REV** or **FWD ▷**.
 Recording start.

Recording karaoke sound

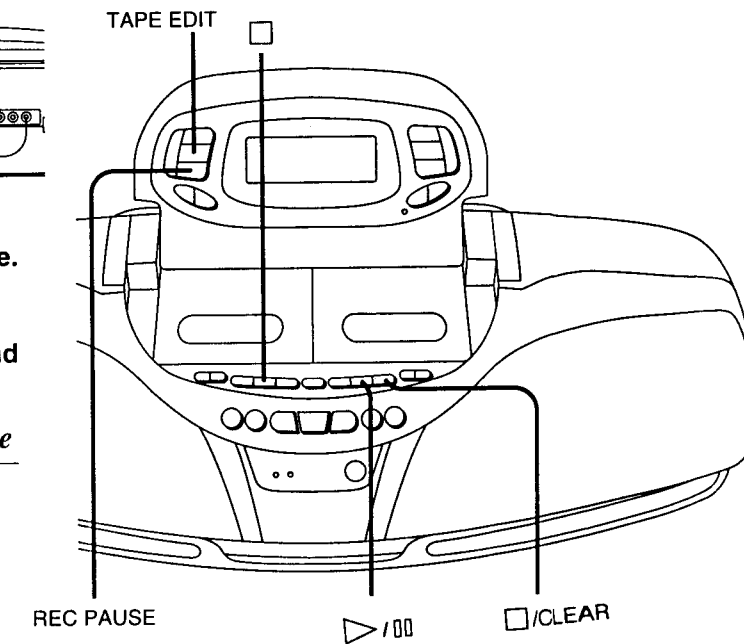

■ Recording karaoke sound with accompaniment from a tape

1. Connect the microphone, and load the karaoke tape in deck 1 and the recording tape in deck 2.
2. Select the reverse mode.
3. Press the tape button.
4. Press **TAPE EDIT** once.
 Play and recording start.

■ Recording karaoke sound with accompaniment from a CD

1. Connect the microphone, and load the tape in deck 2.
2. Select the Dolby noise reduction setting and reverse mode.
3. Press /CLEAR.
4. Press **REC PAUSE**.
5. Press **▷/00**.
 Play and recording start.


Notes

- Plug the microphone off the microphone jack when not in use.
- If you hear strange noises (squealing or howling) during mixing, move the microphone farther away from the speakers or turn down the volume.
- When you are enjoying KARAOKE with CDs, your voice can be heard only when the CD is in play, not when the CD is in stop or pause mode.

■ Using the External Units

Listening to CDs on a stereo system

■ Connections

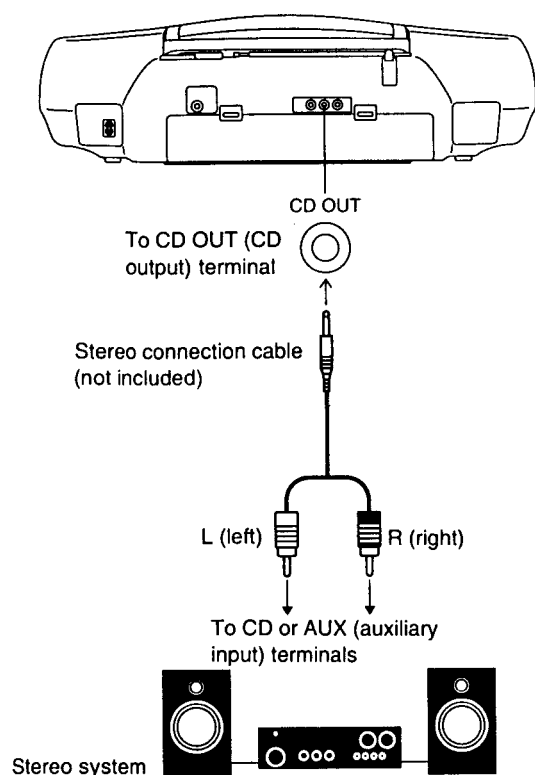


■ CD play

1. Press **□/CLEAR** and then press **▷/PAUSE**.
2. Adjust the volume and tone quality on your stereo system.

■ Concerning the Remote Control


Remote control unit's operation range

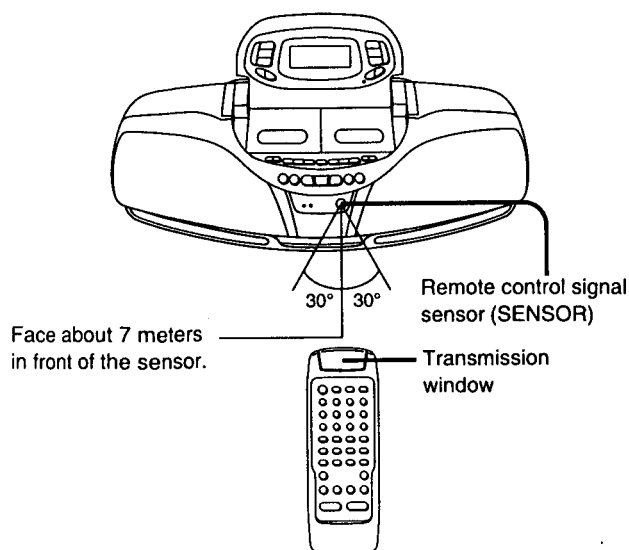

Listening to records on this unit

Only a record player with built-in phono equalizer may be connected to this unit.

■ Connections

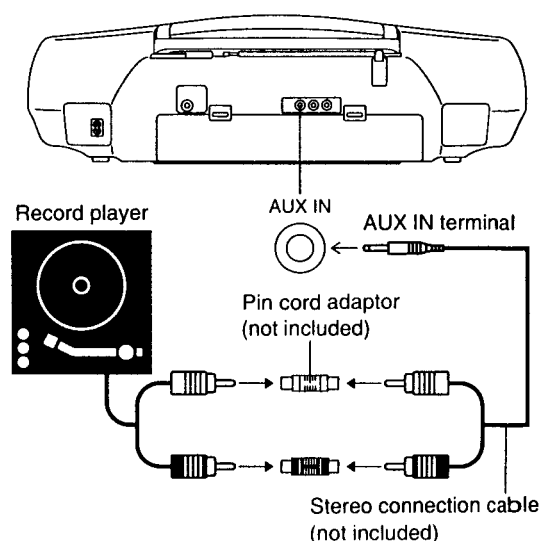

■ Record play

1. Press **AUX** on the remote control.
2. Start operating your record player.

How to use the remote control unit properly

- Do not place obstacles between the remote control signal sensor and remote control unit.
- Do not expose the remote control signal sensor to direct sunlight or to the bright light of an inverter fluorescent light.
- Take care to keep the remote control signal sensor and the transmission window free from dust.

To prevent malfunctioning of the remote control unit:

- Do not disassemble or remodel the unit.
- Do not place heavy objects on top of it.
- Do not leave it where it will be exposed to direct sunlight.
- Do not spill beverages or other liquids over it.

Battery life

The battery life is about one year.


Although the battery life varies depending on how often the device is used, the batteries should be replaced, on average, about once every year.

The batteries should be replaced if commands from the remote control transmitter do not operate the unit even when the transmitter is held close to the front panel.

Menu Operations

Just 5 buttons enable you to activate a wide variety of functions.


Before menu operation

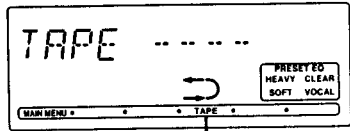


Main menu which has been set

- You can proceed to operate from the sub menu if your choice of main menu is already displayed.

Menu operation areas

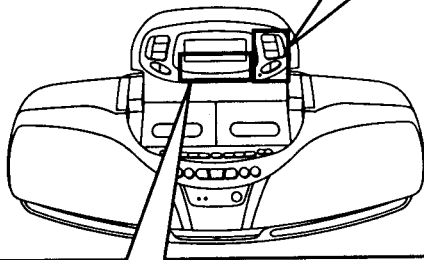

The sub menus contained in each of the main menus are shown here. This is handy when selecting the menu required for operation.



Reference

When you have made a mistake in operation: Press MAIN MENU SELECT and start again from the beginning.


Note

Leaving too much time between operations may cause a menu operation to be completed automatically. If this happens, start again from the beginning.

Operation key point

Main menu

To display the main menus, press:

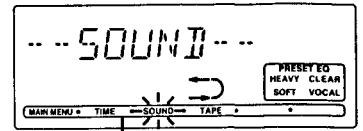

Main menus which can be selected



	TIME (clock)
	SOUND (tone quality)
	TAPE (tape)
	TUNER (radio) Before using the TUNER menu: Press TUNER/BAND
	CD EDIT (CD edit-recording) Before using the CD EDIT menu: Press CD □/CLEAR
	CD LINK (link editing) ("CD LINK" appears when link editing is set after edit-recording.)

Sub menu

To display the sub menus, press:




To set the sub menus, press:


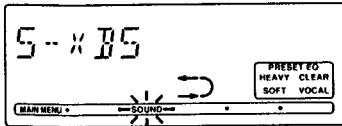



Setting menu

To display the setting menus, press:




To set the setting menus, press:

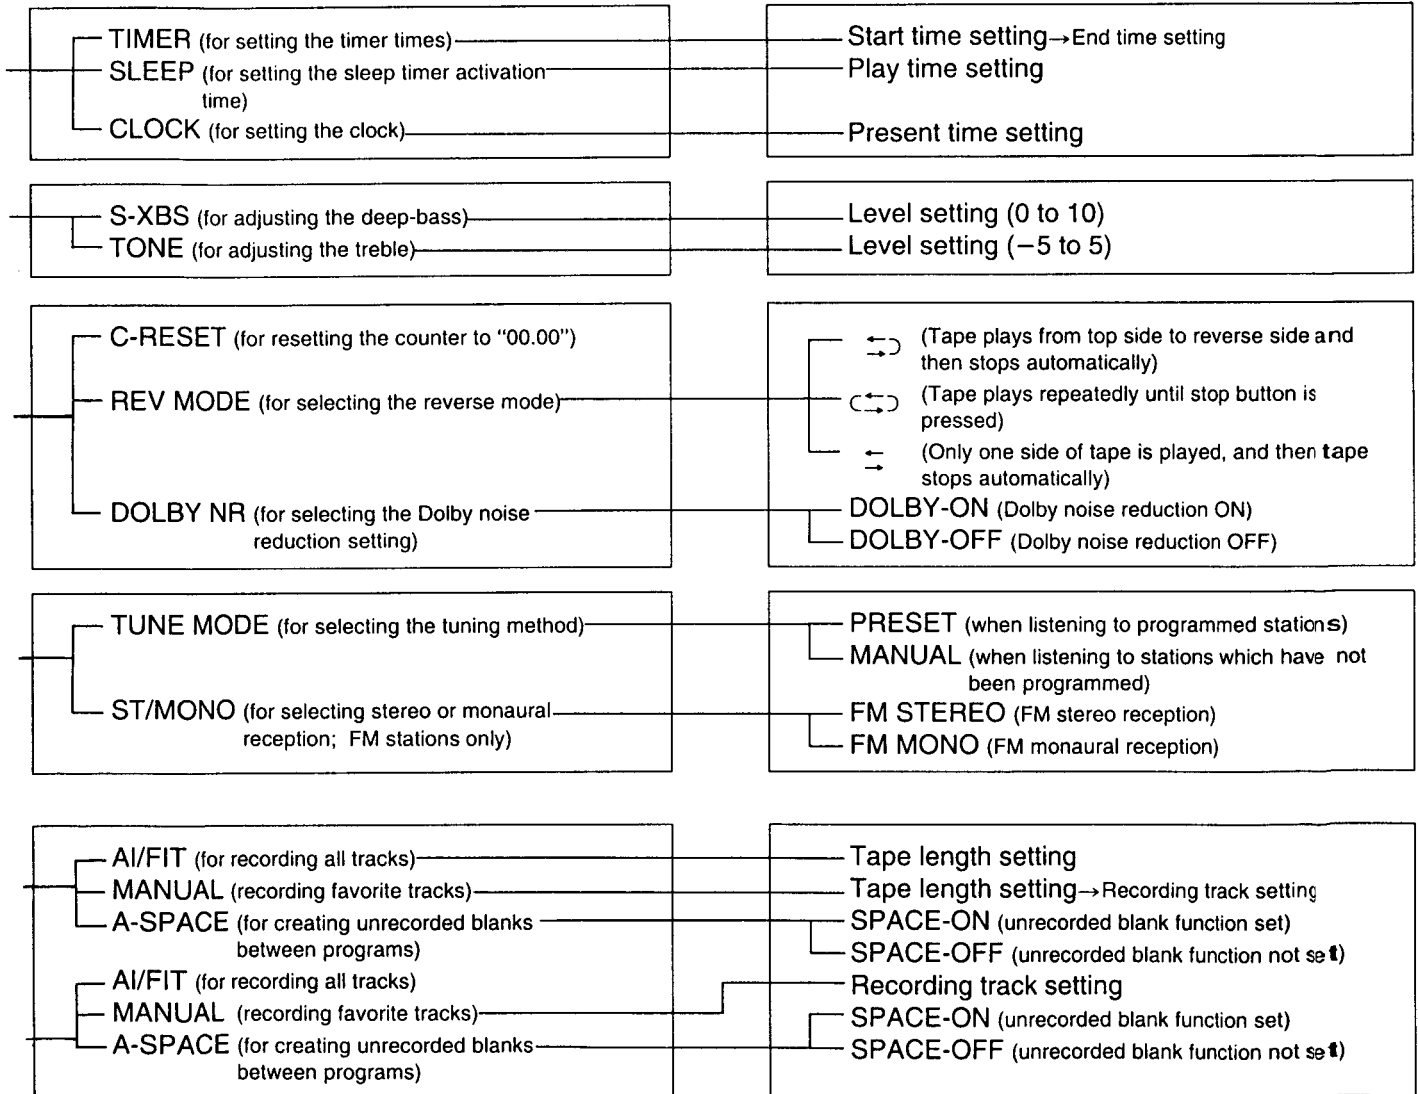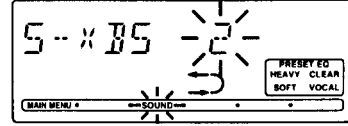

Examples of menu operations

Deck section

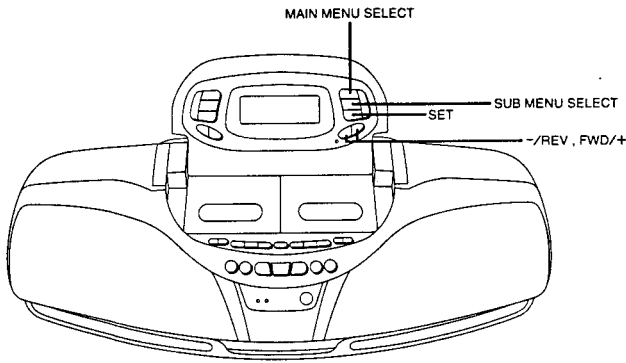

■ Resetting the linear tape counter to "00.00"

1. Press MAIN MENU SELECT to display "TAPE".
2. Press SUB MENU SELECT to display "C-RESET".
Press SET.

■ Selecting the Dolby noise reduction setting

1. Press MAIN MENU SELECT to display "TAPE".
2. Press SUB MENU SELECT to display "DOLBY NR".
Press SET.
3. Press -/REV or FWD/+ to select DOLBY-ON or DOLBY-OFF.
Press SET.

DOLBY-ON: The Dolby noise reduction function is set.
DOLBY-OFF: The Dolby noise reduction function is released.

■ Selecting the reverse mode


1. Press MAIN MENU SELECT to display "TAPE".
2. Press SUB MENU SELECT to display "REV MODE".
Press SET.
3. Press -/REV or FWD/+ to display the desired mode.
Press SET.

↔ : The tape plays from the top side to the reverse side and it then stops automatically.

↔↔ : The tape plays repeatedly until the stop button is pressed. (When tapes have been loaded in both decks, both tapes are played continuously.)

↔ : Only one side of the tape is played, and then the tape stops automatically.

Radio/CD sections

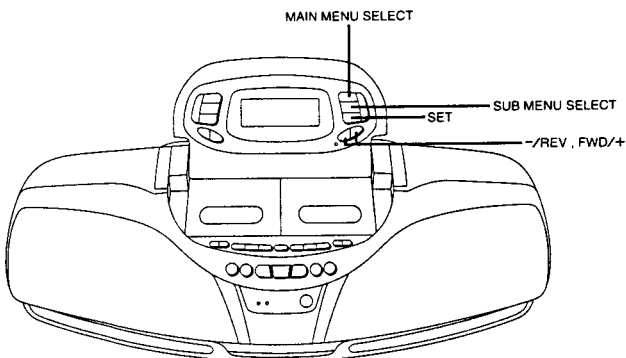

■ To listen to FM stereo broadcasts in the monaural mode

Noise levels are reduced by setting the sound to monaural.

1. Press MAIN MENU SELECT to display "TUNER".
2. Press SUB MENU SELECT to display "ST/MONO".
Press SET.
3. Press -/REV or FWD/+ to display "FM MONO".
Press SET.

To return to stereo reception, repeat the same steps and select "FM STEREO" in step 3.

■ Selecting the tuning method

There are two methods: preset and manual.

1. Press MAIN MENU SELECT to display "TUNER".
2. Press SUB MENU SELECT to display "TUNE MODE".
Press SET.
3. Press -/REV or FWD/+ to select "PRESET" or "MANUAL".
Press SET.

PRESET: For listening to a programmed station

MANUAL: For listening to a station which has not been programmed


■ Recording CD tracks with unrecorded blanks between the programs (Auto space function)

Unrecorded blanks lasting 4 or more seconds are required between programs in order for the tape program search function to operate properly.

When the auto space function is set, unrecorded blanks lasting about 4 seconds are automatically created between programs.

Set the function before proceeding with the automatic CD recording or menu edit-recording operation.

1. Press MAIN MENU SELECT to display "CD EDIT".
2. Press SUB MENU SELECT to display "A-SPACE".
Press SET.
3. Press -/REV or FWD/+ to display "SPACE-ON".

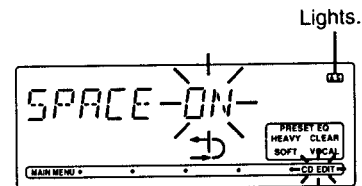







Press SET.






To release the function:

Repeat the same procedure and select "SPACE-OFF" in step 3.

Note

The auto space function does not work when recording without the edit function.
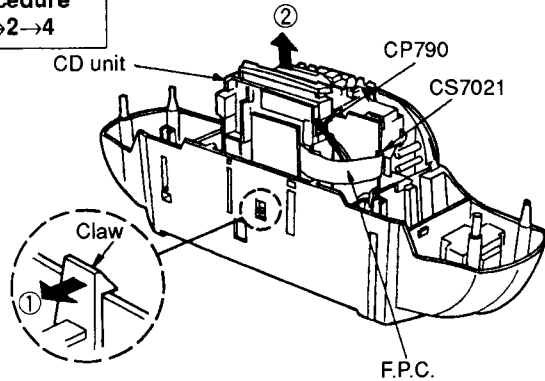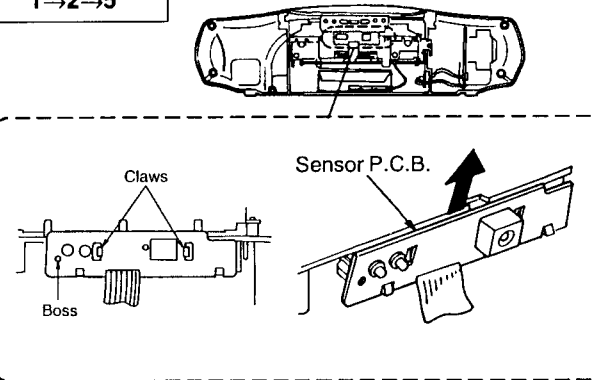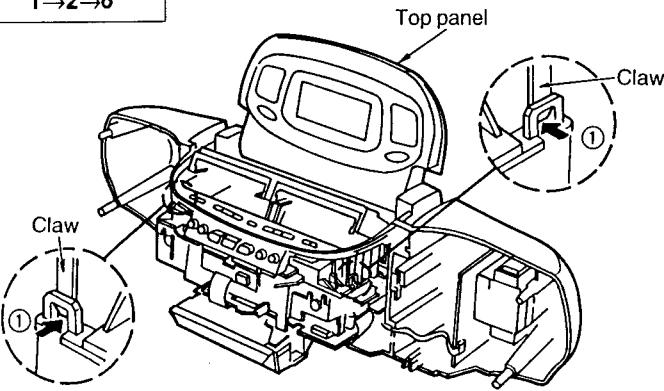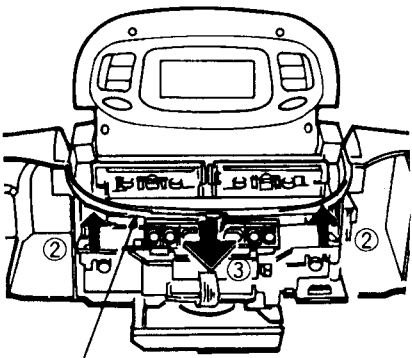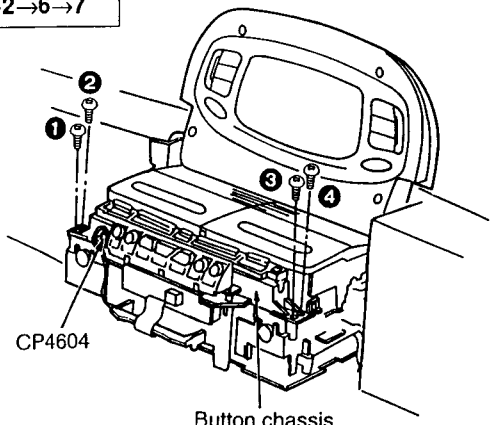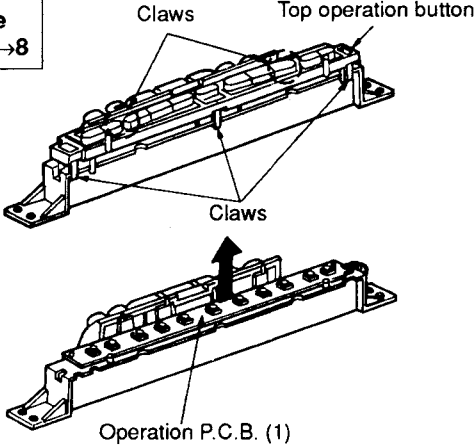
<p>Ref. No. 4</p> <p>Removal of the CD Unit</p>	<p>Ref. No. 5</p> <p>Removal of the Sensor P.C.B.</p>
<p>Procedure 1→2→4</p>  <ol style="list-style-type: none"> 1. Disconnect the connector (CP790). 2. Disconnect the F.P.C. from the connector (CS7021). 3. Pull out the CD unit in the direction of the arrow ② with releasing the claw in the direction of the arrow ①. 	<p>Procedure 1→2→5</p>  <ol style="list-style-type: none"> 1. Release 2 claws and remove the sensor P.C.B. from the boss with inclining the P.C.B. 2. Remove the sensor P.C.B. in the direction of the arrow.
<p>Ref. No. 6</p> <p>Removal of the Inner Panel</p>	
<p>Procedure 1→2→6</p>  <ol style="list-style-type: none"> 1. Open the top panel. 2. Release 2 claws in the direction of the arrows ①. 	 <ol style="list-style-type: none"> 3. Lift up the front side of the inner panel slightly in the direction of the arrows ② and pull out in the direction of the arrow ③.
<p>Ref. No. 7</p> <p>Removal of the Button Chassis</p>	<p>Ref. No. 8</p> <p>Removal of the Operation P.C.B. (1)</p>
<p>Procedure 1→2→6→7</p>  <ol style="list-style-type: none"> 1. Remove 4 screws (①~④). 2. Release the connector (CP4604). 	<p>Procedure 1→2→6→7→8</p>  <ol style="list-style-type: none"> 1. Release 5 claws and remove the top operation buttons. 2. Remove the operation P.C.B. (1) in the direction of the arrow.
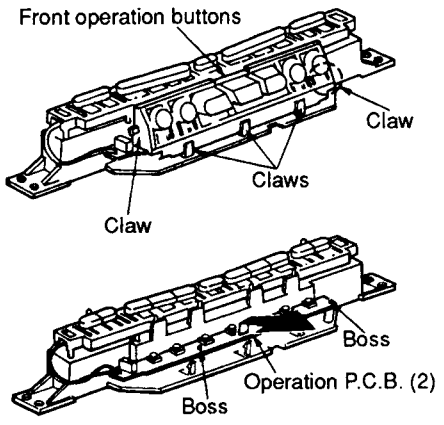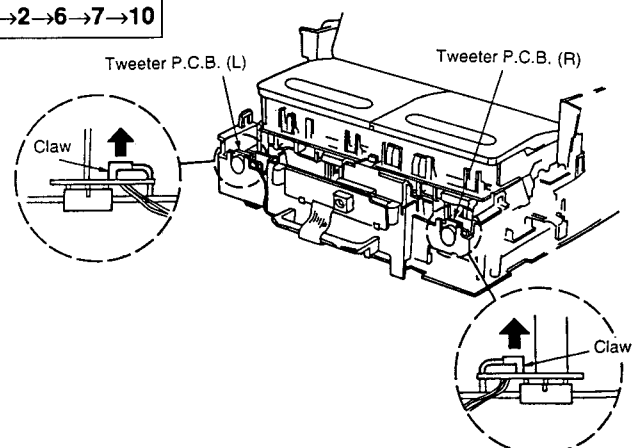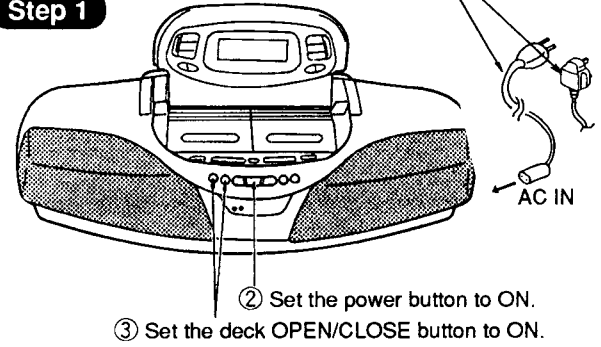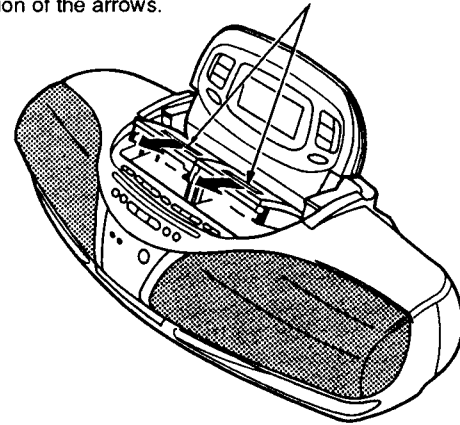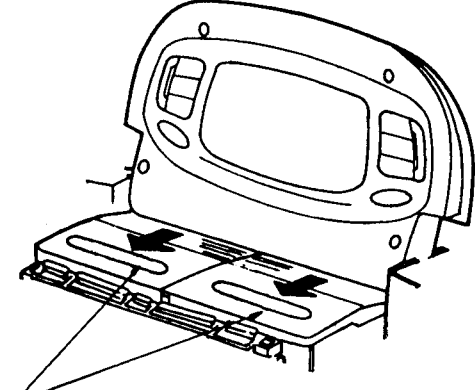
<p>Ref. No. 9</p> <p>Removal of the Operation P.C.B. (2)</p>	<p>Ref. No. 10</p> <p>Removal of the Tweeter P.C.B. (L)/(R)</p>
<p>Procedure 1→2→6→7→9</p>  <ol style="list-style-type: none"> 1. Release 5 claws and remove the front operation buttons. 2. Release 2 bosses and remove the operation P.C.B. (2) in the direction of the arrow. 	<p>Procedure 1→2→6→7→10</p>  <p>• Release each claw in the direction of the arrows.</p>
<p>Ref. No. 11</p> <p>Removal of the Cassette Holder Panel</p>	<p>In case that the power source is faulty or the cassette holder cannot be opened by electrical means, open the cassette holder by the method shown below:</p>
<p>Procedure 11</p> <p>① Connect the power cord.</p> <p>Step 1</p>  <ol style="list-style-type: none"> ② Set the power button to ON. ③ Set the deck OPEN/CLOSE button to ON. <p>Step 2</p> <p>Pull out the power cord. (Make sure that the cassette holder is open.) At this time, do not press the power button to turn off power supply.</p> <p>Step 3</p> <p>Remove the cassette holder panel by pulling it in the direction of the arrows.</p> 	<p>1. Referring to "Removal of the Inner Panel" (Ref. No.6), remove the inner panel.</p>  <p>2. Remove the cassette holder panel by pulling it in the direction of the arrows.</p>

■ Handling Precautions for Traverse Deck

The laser diode in the traverse deck (optical pickup) may break down due to potential difference caused by static electricity of clothes or human body.
So, be careful of electrostatic breakdown during repair of the traverse deck (optical pickup).

● Handling of traverse deck (optical pickup)


1. Do not subject the traverse deck (optical pickup) to static electricity as it is extremely sensitive to electrical shock.
2. To prevent the breakdown of the laser diode, an anti-static shorting pin is inserted into the flexible board (FPC board).
When removing or connecting the shorting pin, finish the job in as short time as possible.
3. Take care not to apply excessive stress to the flexible board (FPC board).
4. Do not turn the variable resistor (laser power adjustment). It has already been adjusted.

● Grounding for electrostatic breakdown prevention

1. Human body grounding
Use the anti-static wrist strap to discharge the static electricity from your body.
2. Work table grounding
Put a conductive material (sheet) or steel sheet on the area where the traverse deck (optical pickup) is placed, and ground the sheet.


Caution:

The static electricity of your clothes will not be grounded through the wrist strap. So, take care not to let your clothes touch the traverse deck (optical pickup).

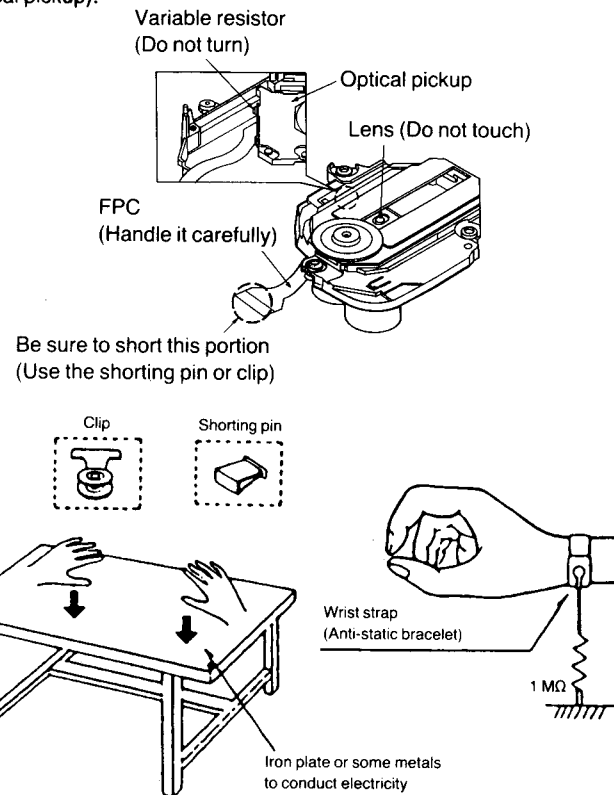


■ Disassembly Instructions

- Use a phillips screwdriver whose blade is 13 cm long and over to remove screws fixing the rear cabinet.



- Be sure to place the unit on soft cloth or similar material to prevent scratches when disassembling it.

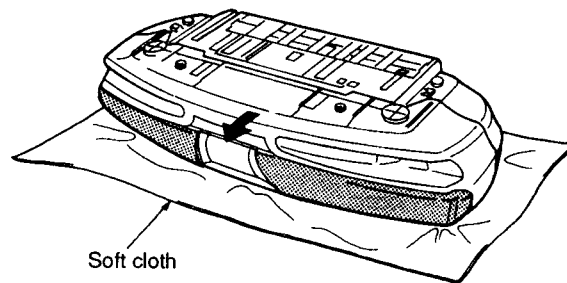


● Table for the Mechanism Main Parts Replacement


Item	Procedure	Page	Item	Procedure	Page
Friction gear (RXG0037)	Ref. No. 16 ↓ Friction gear replacement	Page 21→Page 31	Plunger (RSJ0003)	Ref. No. 14 ↓ Plunger replacement	Page 20→Page 35
Drive rack (RMQ0312A)	Ref. No. 16 ↓ Drive rack replacement	Page 21→Page 32	Belt (RDV108ZA)	Ref. No. 16	Page 21
Leaf switch (RSH1A018-U, RSH1A019-U)	Ref. No. 14 ↓ Leaf switch replacement	Page 20→Page 33	Loading motor (REM0043)	Ref. No. 16 ↓ Remove 2 screws.	Page 21
Head (DECK1:RXQ0312) (DECK2:RXQ0316)	Ref. No. 15 ↓ Head replacement	Page 21→Page 34	Capstan motor (REM0036)	Ref. No. 16 ↓ Remove 2 screws.	Page 21

Ref. No. 1 Removal of the Handle

Procedure 1

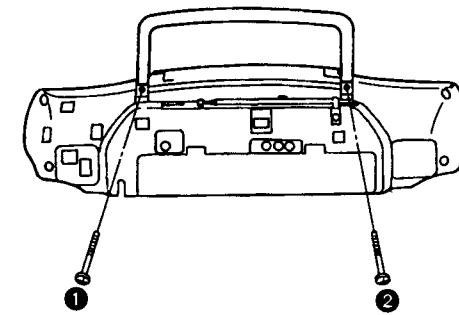


1. Remove 2 screws (1, 2).

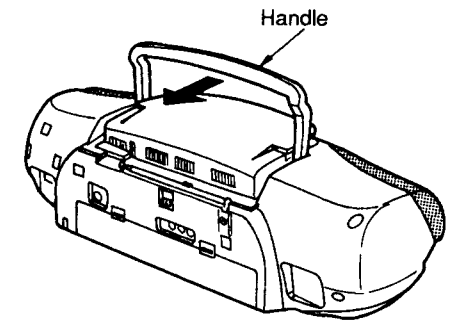


2. Remove the handle in the direction of the arrow.

Ref. No. 2 Removal of the Front Cabinet

Procedure 1→2

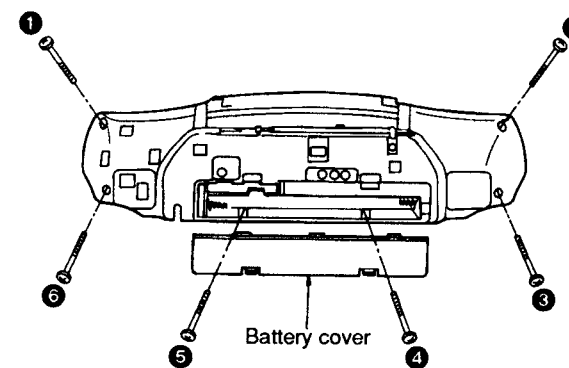


1. Remove the battery cover.
2. Remove 6 screws (1~6).

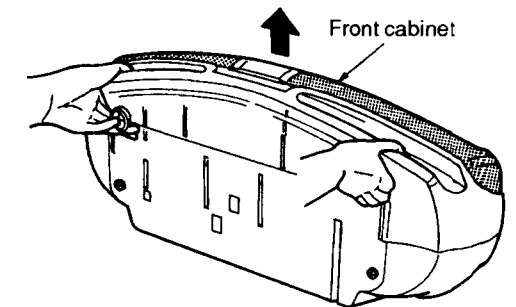


3. Remove the front cabinet in the direction of the arrow with having front side of this unit turned upwards.

Ref. No. 3 Removal of the Main Unit







Procedure 1→2→3



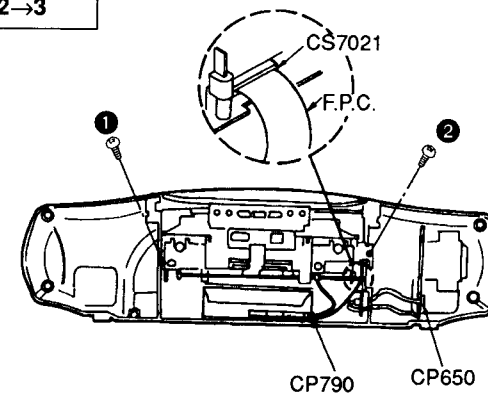


1. Remove 2 screws (1, 2).
2. Disconnect 2 connectors (CP650, CP790).
3. Disconnect the F.P.C. from the connector (CS7021).

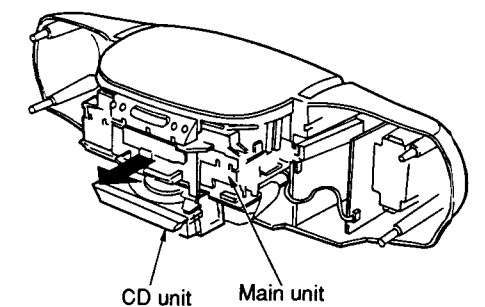

4. Pull out the main unit in the direction of the arrow.
Note: Main unit can be removed without removing the CD unit.

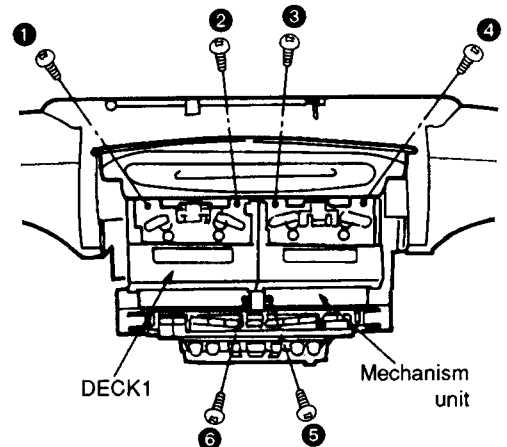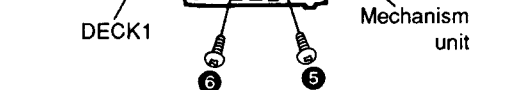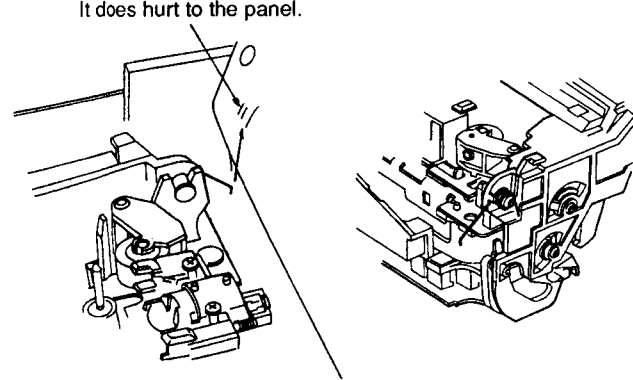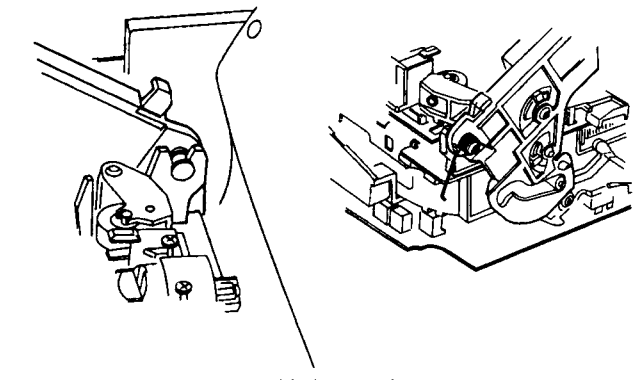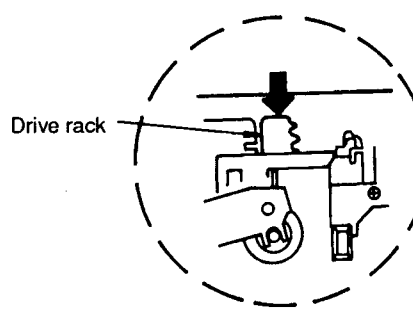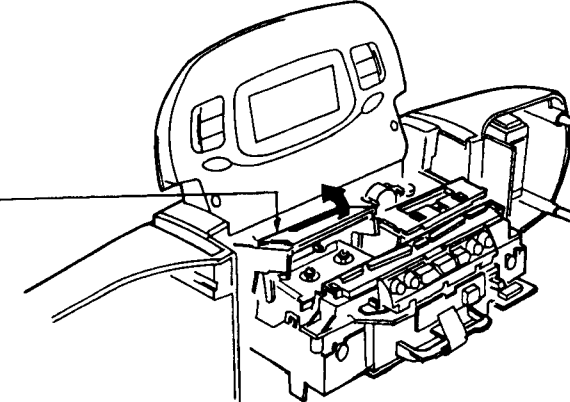Ref. No. 12	Removal of the Mechanism Unit
Procedure 11→1→2 →6→12	Note: When removing the mechanism unit, make sure that the cassette holder is open. Particularly, take care that removing the mechanism unit when the cassette holder of DECK 1 is closed will get the cassette holder spring to hit and hurt the top panel.
Step 1 Make sure that the cassette holder is open, and then remove 6 screws (①~⑥).	
Step 2 Lift the mechanism unit while keeping it in horizontal position. As the mechanism control P.C.B. and main P.C.B. connectors are demounted together, lifting the mechanism unit applies load.	
REFERENCE	
•When the mechanism unit is raised with the cassette holder closed,	•If the cassette holder is open then,
	
•In case that power supply cannot be turned on or the cassette holder of the set in use cannot be opened by electrical means, open it by the following method:	
Step 1 Slide the drive rack in the direction of the arrow. (The cassette holder opens a little.)	Step 2 Fully open the cassette holder by hand.
	

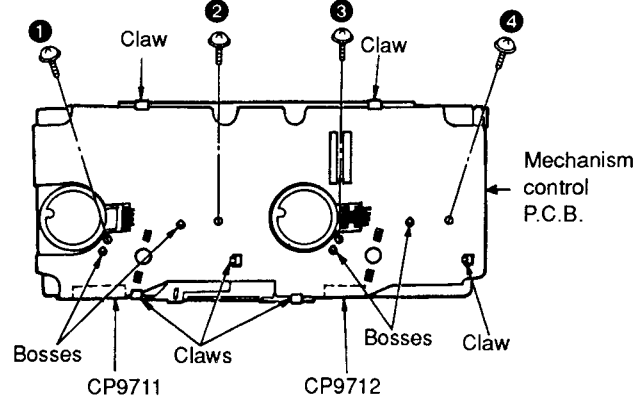
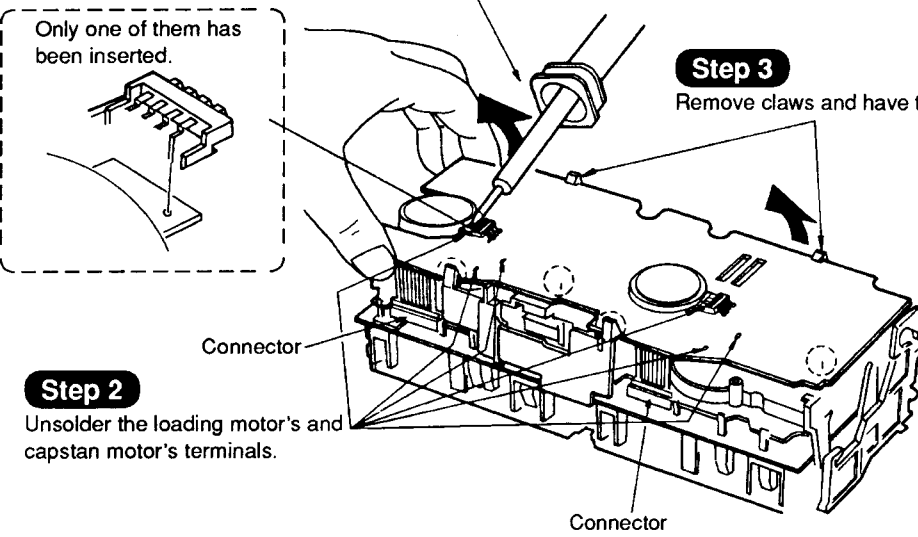
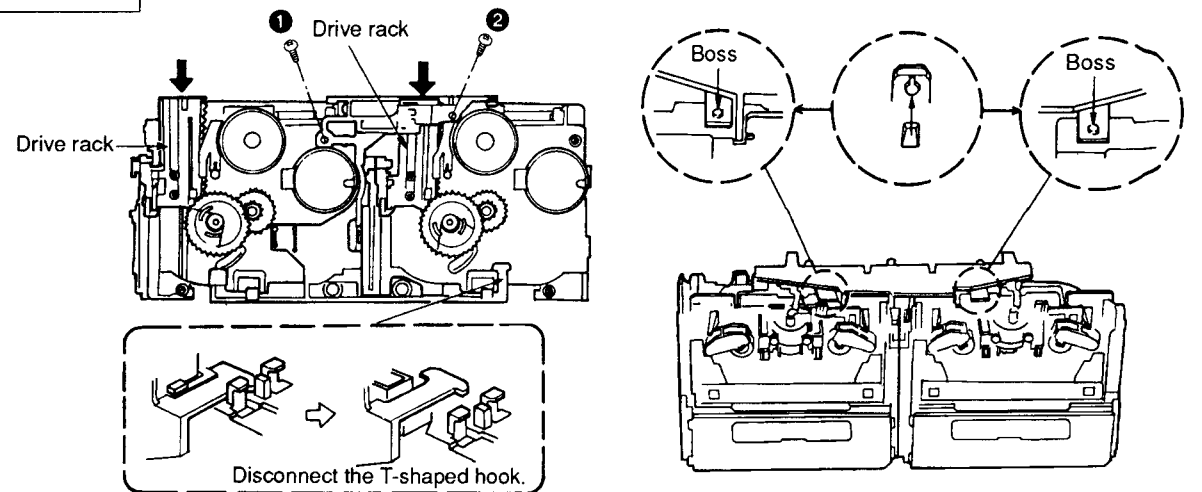
Ref. No. 13	Removal of the Mechanism Control P.C.B.
Procedure 1→2→6→12 →13	Step 1 Remove 4 screws (①~④).
	
Step 4 Putting a soldering iron securely on the capstan motor terminal and raising the P.C.B. in the direction of the arrows, unsolder connected part. (For both DECK 1 and DECK 2, remove the capstan motor terminals.)	Step 3 Remove claws and have the P.C.B. rise a little.
	Step 5 Pulling up the entire P.C.B., remove 4 claws (○) and 2 connectors.
Step 2 Unsolder the loading motor's and capstan motor's terminals.	
Ref. No. 14	Removal of the Coupling Chassis
Procedure 1→2→6→12 →13→14	
	
	1. Slide 2 drive racks fully in the direction of the arrows. (The cassette holder closes.) 2. Remove 2 screws (①, ②). 3. Disconnect the T-shaped hook of the chassis. 4. Release 2 bosses.






<p>Ref. No. 15</p>	<p>Removal of the Cassette Holder</p>	<p>(For reassembly, see page 34.)</p>
<p>Procedure 1→2→6→12 →13→14→15</p>		
<p>1. Slide the drive rack fully in the direction of the arrow ①. (The cassette holder opens.)</p>	<p>2. Pressing the cassette holder foot in the direction of the arrow ②, release it from the boss.</p> <p>3. Move the cassette holder in the direction of the arrow ③.</p> <p>4. Open the cassette holder.</p> <p>5. Slanting till the cassette holder supporting shaft is at the angle pictured above, draw out in the direction of the arrow ④. (to such an extent that the mechanism makes a right angle with the cassette holder.)</p>	






<p>Ref. No. 16</p>	<p>Removal of the Loading Chassis</p>	
<p>Procedure 1→2→6→12 →13→14→15 →16</p>		
<p>1. Widen the space between the 2 claws as shown by the arrows ①, and then remove the head connector in the direction of the arrow ②.</p> <p>2. Slide the drive rack fully in the ③.</p> <p>Note: The drive rack slides heavily for it is in mesh with the motor through the friction gear.</p>	<p>3. Remove 4 screws (①~④).</p> <p>4. Separate the loading chassis from the mechanism chassis.</p> <p>5. Remove the belt.</p> <p>Note: Use a pair of tweezers or an equivalent tool not to stain the belt with grease or hand sweat.</p>	





<p>Ref. No. 17</p>	<p>Removal of the Shield Plate Ass'y</p>	<p>Ref. No. 18</p>	<p>Removal of the Top Panel Unit</p>
<p>Procedure 1→2→6→12→17</p>			
<p>1. Disconnect the connector (CP606).</p> <p>2. Release 2 hooks and remove the shield plate ass'y in the direction of the arrow.</p>	<p>1. Remove 5 screws (①~⑤).</p> <p>2. Disconnect the connector (CP602).</p> <p>3. Remove the F.P.C. from the connector (CS603).</p> <p>4. Release 2 claws in the direction of the arrows and lift up the top panel unit.</p> <p>2. Disconnect the connector (CP602).</p> <p>3. Remove the F.P.C. from the connector (CS603).</p>		

<p>Ref. No. 19</p>	<p>Removal of the Main P.C.B.</p>		
<p>Procedure 1→2→3→6→12 →17→19</p>			
<p>1. Disconnect the connector (CP602).</p> <p>2. Remove the F.P.C. from the connector (CS603).</p>	<p>3. Remove 6 screws (①~⑥).</p> <p>4. Remove the CD shield plate in the direction of the arrow ①.</p> <p>5. Release 4 claws in the direction of the arrows ②.</p>		
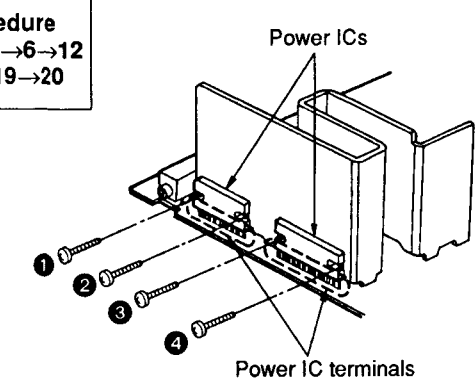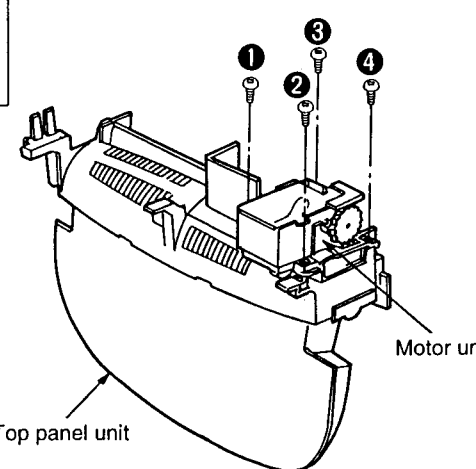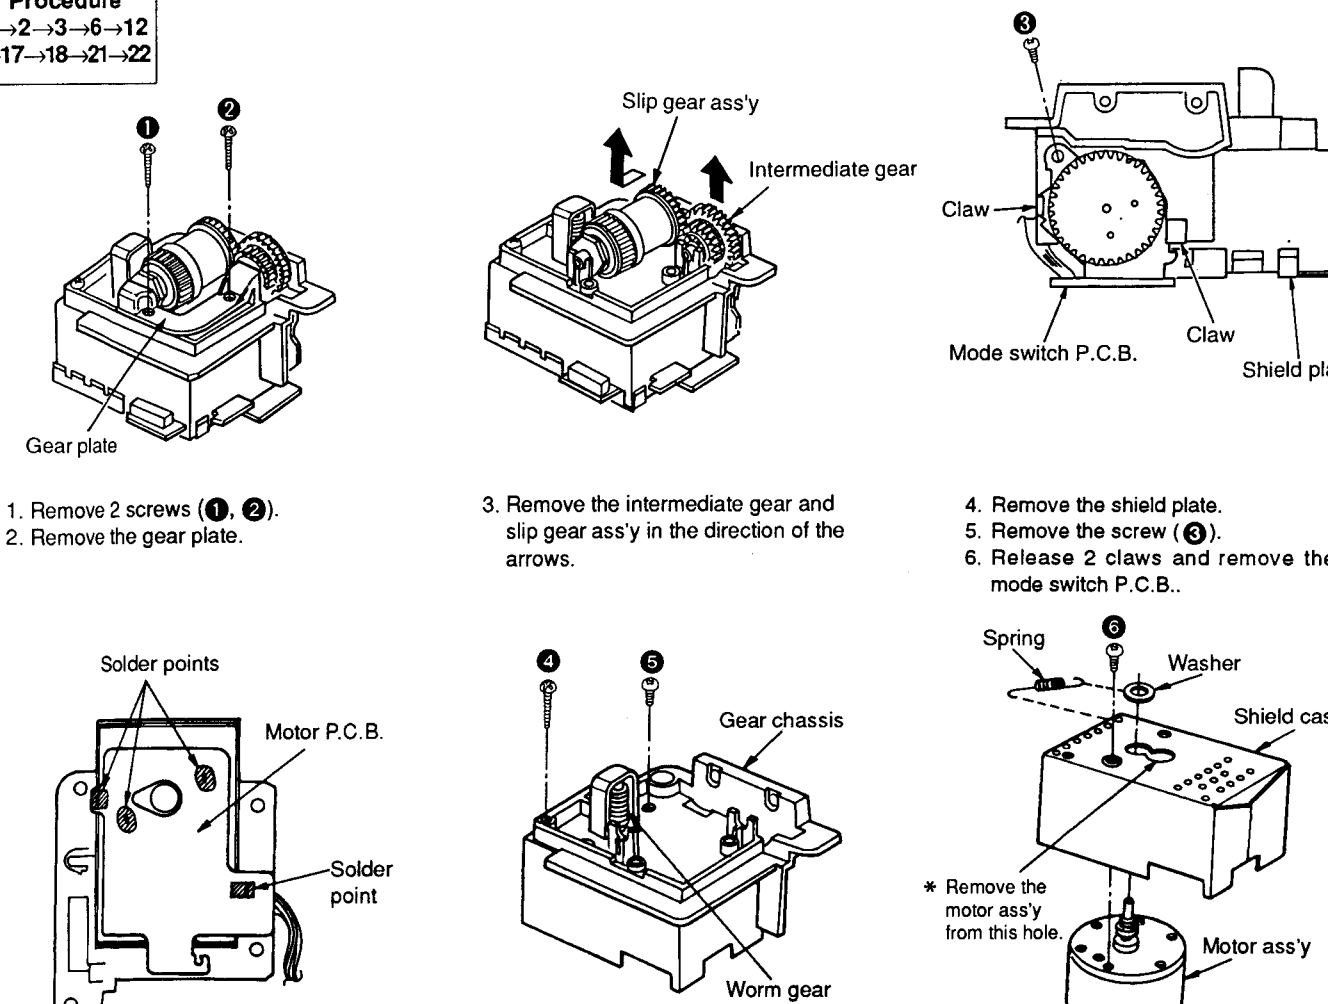
<p>Ref. No. 20 Removal of the Power IC</p> <p>Procedure 1→2→3→6→12 →17→19→20</p>  <p>Power ICs Power IC terminals</p> <p>1. Unsolder 2 power IC terminals. 2. Remove 4 screws (1~4). Note: When mounting the power IC, apply silicon compound (RFKX0002, or equivalent terminal diffusion material) to the rear side of the power IC.</p>	<p>Ref. No. 21 Removal of the Motor Unit</p> <p>Procedure 1→2→3→6→12 →17→18→21</p>  <p>Motor unit Top panel unit</p> <p>• Remove 4 screws (1~4).</p>
<p>Ref. No. 22 Disassembly of the Motor Unit</p> <p>Procedure 1→2→3→6→12 →17→18→21→22</p>  <p>Slip gear ass'y Intermediate gear Gear plate Claw Mode switch P.C.B. Shield plate Solder points Motor P.C.B. Solder point Gear chassis Worm gear Spring Washer Shield case Motor ass'y</p> <p>1. Remove 2 screws (1, 2). 2. Remove the gear plate. 3. Remove the intermediate gear and slip gear ass'y in the direction of the arrows. 4. Remove the shield plate. 5. Remove the screw (3). 6. Release 2 claws and remove the mode switch P.C.B.. 7. Unsolder 4 points and remove the motor P.C.B.. 8. Remove 2 screws (4, 5). 9. Remove the gear chassis and worm gear. 10. Remove the washer and spring. 11. Remove the screw (6) and remove the motor ass'y from the shield case.</p>	
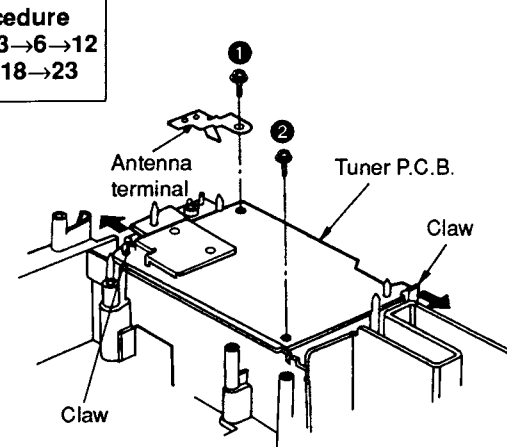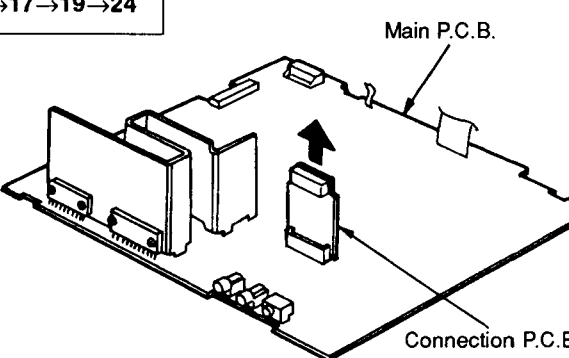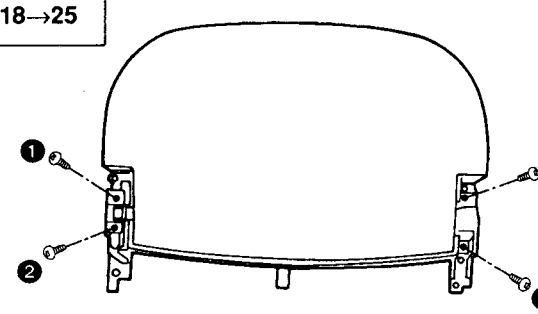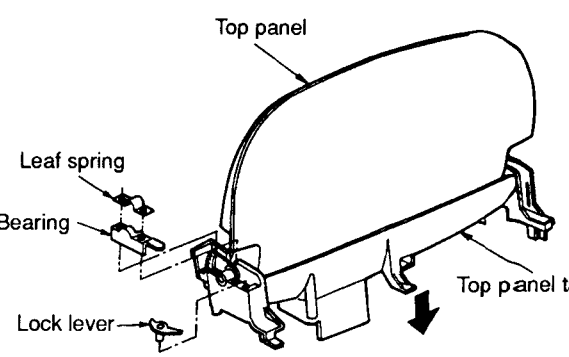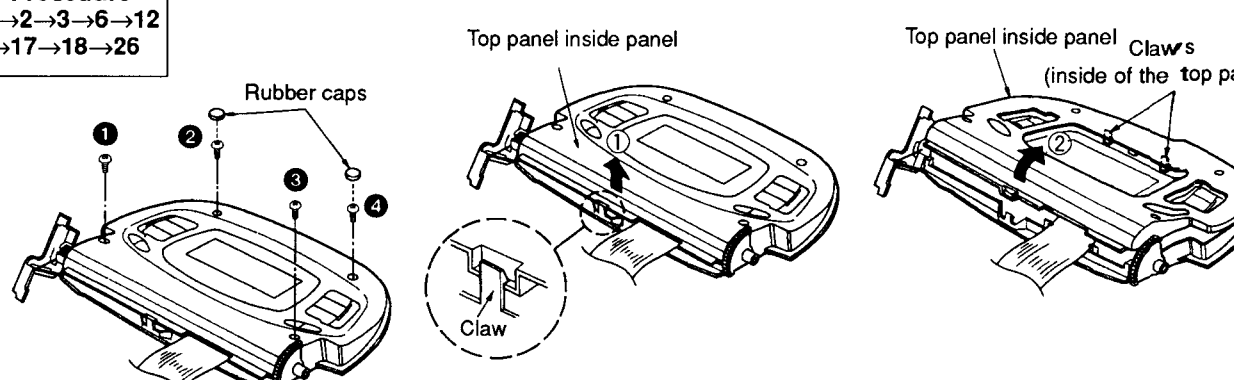
<p>Ref. No. 23 Removal of the Tuner P.C.B.</p> <p>Procedure 1→2→3→6→12 →17→18→23</p>  <p>Antenna terminal Tuner P.C.B. Claw</p> <p>1. Remove 2 screws (1, 2). 2. Remove the antenna terminal. 3. Release 2 claws in the direction of the arrows.</p>	<p>Ref. No. 24 Removal of the Connection P.C.B.</p> <p>Procedure 1→2→3→6→12 →17→19→24</p>  <p>Main P.C.B. Connection P.C.B.</p> <p>• Remove the connection P.C.B. in the direction of the arrow.</p>
<p>Ref. No. 25 Removal of the Top Panel Table</p> <p>Procedure 1→2→3→6→12 →17→18→25</p>  <p>Top panel</p> <p>1. Remove 4 screws (1~4).</p>	 <p>Leaf spring Bearing Lock lever Top panel table</p> <p>2. Remove the leaf spring, bearing and lock lever. 3. Remove the top panel.</p>
<p>Ref. No. 26 Removal of the Top Panel Inside Panel</p> <p>Procedure 1→2→3→6→12 →17→18→26</p>  <p>Rubber caps Top panel inside panel Claws (inside of the top panel)</p> <p>1. Remove 2 rubber caps. 2. Remove 4 screws (1~4). 3. Release the claw and lift up the top panel inside panel in the direction of the arrow ① to be half-open. 4. Open the top panel inside panel in the direction of the arrow ② and release 2 claws inside the top panel.</p>	
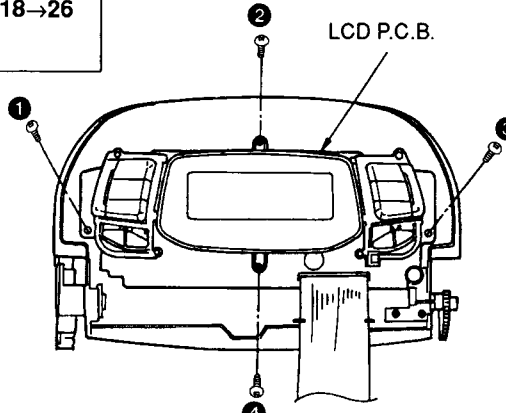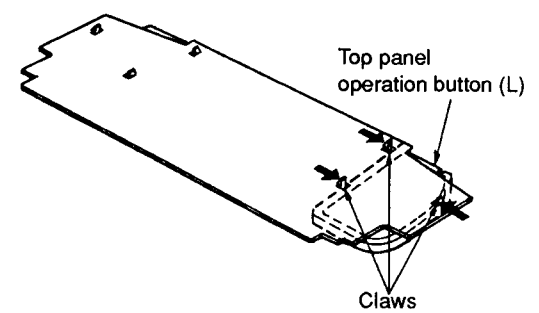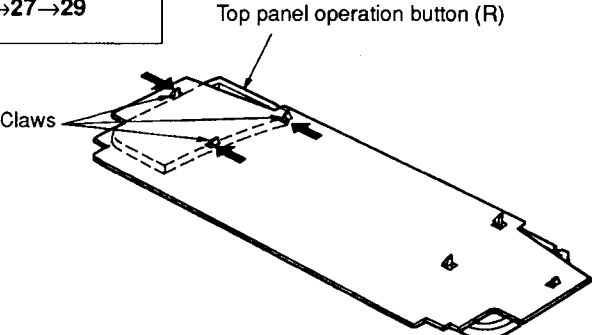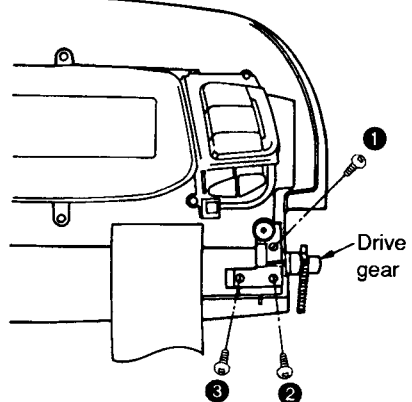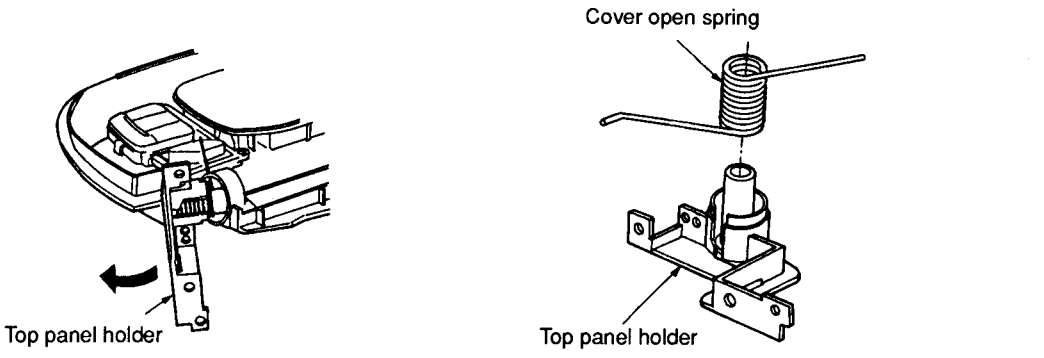
<p>Ref. No. 27</p>	<p>Removal of the LCD P.C.B.</p>	<p>Ref. No. 28</p>	<p>Removal of the Top Panel Operation Button (L)</p>
<p>Procedure 1→2→3→6→12 →17→18→26 →27</p>	 <p>LCD P.C.B.</p>	<p>Procedure 1→2→3→6→12 →17→19→26 →27→28</p>	 <p>Top panel operation button (L)</p> <p>Claws</p>
<p>• Remove 4 screws (1~4).</p>		<p>• Release 3 claws in the direction of the arrows.</p>	
<p>Ref. No. 29</p>	<p>Removal of the Top Panel Operation Button (R)</p>	<p>Ref. No. 30</p>	<p>Removal of the Drive Gear</p>
<p>Procedure 1→2→3→6→12 →17→18→26 →27→29</p>	 <p>Top panel operation button (R)</p> <p>Claws</p>	<p>Procedure 1→2→3→6→12 →17→18→26 →30</p>	 <p>Drive gear</p>
<p>• Release 3 claws in the direction of the arrows.</p>		<p>• Remove 3 screws (1~3).</p>	
<p>Ref. No. 31</p>	<p>Removal of the Top Panel Holder and the Cover Open Spring</p>		
<p>Procedure 1→2→3→6→12 →17→18→26 →31</p>	 <p>Top panel holder</p> <p>Cover open spring</p> <p>Top panel holder</p>		
<p>1. Remove the top panel holder in the direction of the arrow.</p>		<p>2. Remove the cover open spring from the top panel holder.</p>	
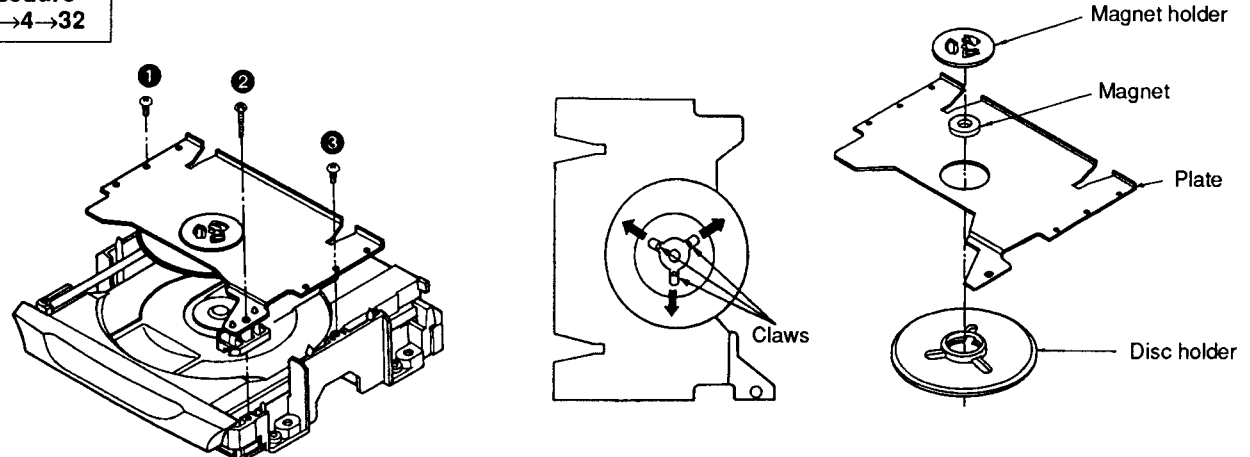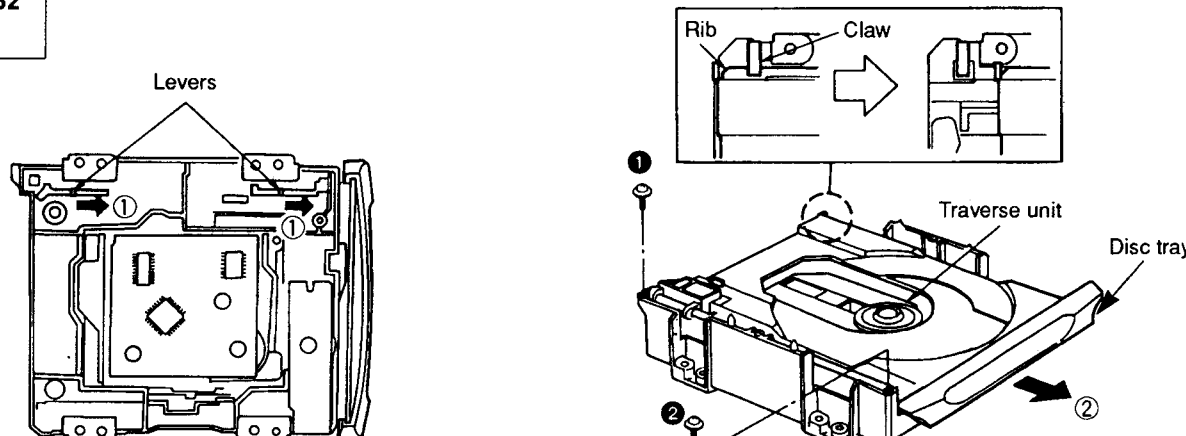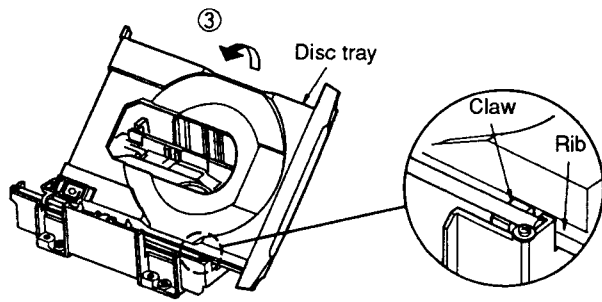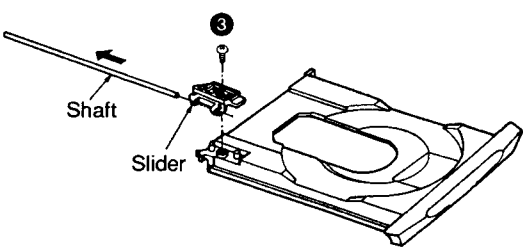
<p>Ref. No. 32</p>	<p>Removal of the Disc Holder</p>		
<p>Procedure 1→2→4→32</p>	 <p>Magnet holder</p> <p>Magnet</p> <p>Plate</p> <p>Claws</p> <p>Disc holder</p>		
<p>1. Remove 3 screws (1~3).</p>		<p>2. Release 3 claws in the direction of the arrows. 3. The disc holder is disassembled as shown in the figure above.</p>	
<p>Ref. No. 33</p>	<p>Removal of the Disc Tray</p>		
<p>Procedure 1→2→4→32 →33</p>	 <p>Lever</p> <p>Rib</p> <p>Claw</p> <p>Traverse unit</p> <p>Disc tray</p>		
<p>1. Slide 2 levers fully in the direction of the arrows (1). (Traverse unit in moved down.)</p>		<p>2. Move the disc tray slightly in the direction of the arrow (2) and release the rib and claw. 3. Remove 2 screws (1, 2).</p>	
 <p>Disc tray</p> <p>Claw</p> <p>Rib</p>		 <p>Shaft</p> <p>Slider</p>	
<p>4. Lift up the disc tray in the direction of the arrow (3). 5. Release the rib from the claw of the chassis.</p>		<p>6. Remove the screws (3). 7. Remove the slider and the shaft.</p>	

Ref. No. 34 **Removal of the CD P.C.B.**

Procedure
1→2→4→34

Traverse motor terminals (2 points)
Spindle motor terminals (2 points)
CN701
CD P.C.B.

Slide the top of the connector in the direction of the arrows ① and disconnect the flexible cable in the direction of the arrow ②.

Top of the connector Flexible cable

4. Disconnect the flexible cable (CN701).
Note: Insert the shorting pin into the flexible cable for optical pickup.
<Refer to "Handling Precautions for Traverse Deck" on page11.>

Flexible cable
Shorting pin

- Remove 3 screws (①~③).
- Unsolder 2 spindle motor terminals.
- Unsolder 2 traverse motor terminals.

Ref. No. 35 **Removal of the Loading Motor P.C.B. and the Loading Motor**

Procedure
1→2→4→32
→33→35

Belt
Loading motor P.C.B.
Loading motor
Loading motor terminals

Polarity of the loading motor

- Remove the belt.
- Remove 2 screws (①, ②).
- Remove the screw (③).
- Unsolder 2 loading motor terminals.

Ref. No. 36 **Removal of the Traverse Deck**

Procedure
1→2→4→32
→33→34→36

Traverse deck
Spring (Silver)
Spring (Red)
Claw

1. Widen the boss using a regular screwdriver. 2. Pull out the pin in the direction of the arrow.

Driver Boss Pin

- Remove 2 pins.
- Remove the traverse deck in the direction of the arrow with releasing the claw.
Note: Since 3 springs can be also removed together with the traverse deck, be careful not to lose them.

Ref. No. 37 **Removal of the Lock Lever**

Procedure
1→2→4→32
→33→34→36
→37

Lock lever
Spring
Claw

- Remove the spring.
- Push the claw in the direction of the arrow ① and lift up the lock lever in the direction of the arrow ②.

Ref. No. 38 **Removal of the Converter Lever**

Procedure
1→2→4→32
→33→34→36
→37→38

Slide plate (1)
Spring
Converter lever

- Remove the spring.
- Push the claw in the direction of the arrow ① and slide the slide plate (1) in the direction of the arrow ②.
- Lift up the converter lever in the direction of the arrow ③.

Ref. No. 39 **Removal of the Traverse Chassis**

Procedure
1→2→4→32
→33→34→36
→37→38→39

Slide plate (1)
Claw (A)
Claws (B)

- Push the claw (A) in the direction of the arrow ① and slide the slide plate (1) in the direction of the arrow ②.
- Push 2 claws (B) in the direction of the arrows ③ and lift up the traverse chassis.

Ref. No. 40 **Removal of the Slide Plates (1)/(2)**







Procedure
1→2→4→32
→33→34→36
→37→38→39
→40




Slide plate (1)
Slide plate (2)

■ **Removal of the slide plate (1)**
● Slide the slide plate (1) fully in the direction of the arrow ① and lift up in the direction of the arrow ②.

■ **Removal of the slide plate (2)**
● Push the claw in the direction of the arrow ③ and remove the slide plate (2) in the direction of the arrow ④.

Claw
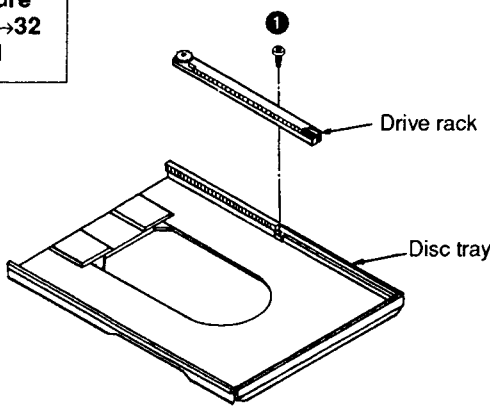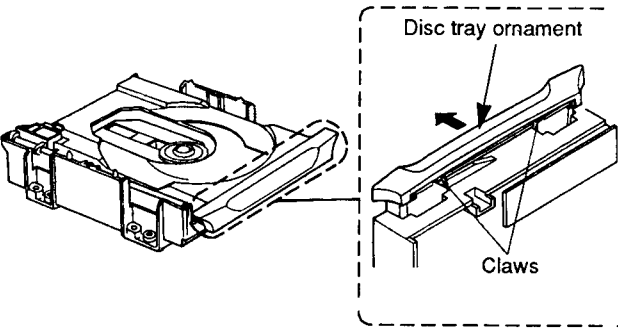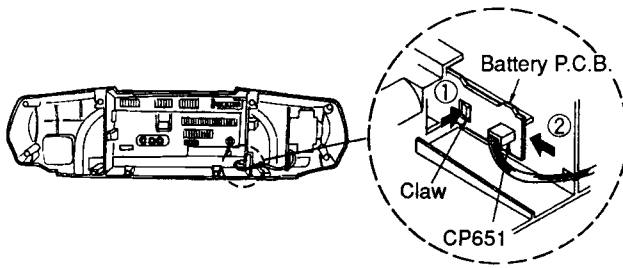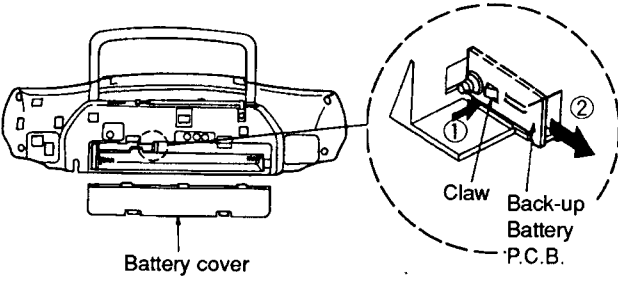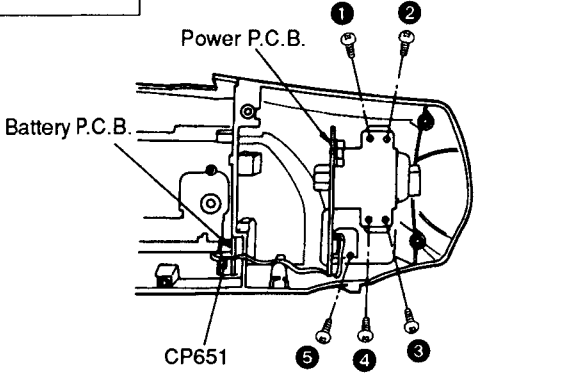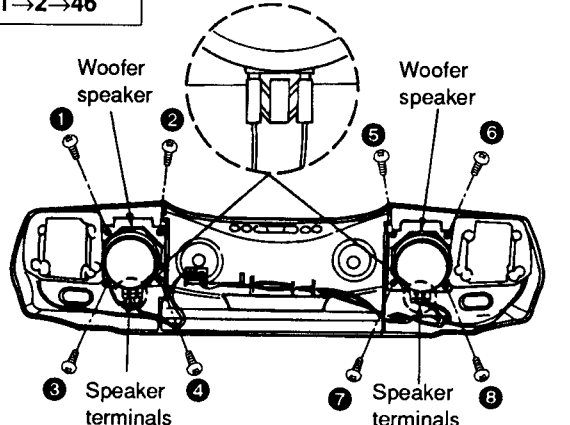
<p>Ref. No. 41</p>	<p>Removal of the Drive Rack</p>	<p>Ref. No. 42</p>	<p>Removal of the Disc Tray Ornament</p>
<p>Procedure 1→2→4→32 →33→41</p>	 <p>• Remove the screw (1).</p>	<p>Procedure 1→2→4→42</p>	 <p>• Release 2 claws and remove the disc tray ornament in the direction of the arrow.</p>
<p>Ref. No. 43</p>	<p>Removal of the Battery P.C.B.</p>	<p>Ref. No. 44</p>	<p>Removal of the Back-up Battery P.C.B.</p>
<p>Procedure 1→2→3→4 →43</p>	 <p>1. Disconnect the connector (CP651). 2. Remove the battery P.C.B. in the direction of the arrow (2) with pushing the claw in the direction of the arrow (1).</p>	<p>Procedure 44</p>	 <p>1. Remove the battery cover. 2. Remove the back-up battery P.C.B. in the direction of the arrow (2) with pushing the claw in the direction of the arrow (1).</p>
<p>Ref. No. 45</p>	<p>Removal of the Power P.C.B.</p>	<p>Ref. No. 46</p>	<p>Removal of the Woofer Speaker</p>
<p>Procedure 1→2→3→4 →45</p>	 <p>1. Remove 5 screws (1~5). 2. Disconnect the connector (CP651) on the battery P.C.B..</p>	<p>Procedure 1→2→46</p>	 <p>1. Remove 8 screws (1~8). 2. Pull out 4 speaker terminals.</p>

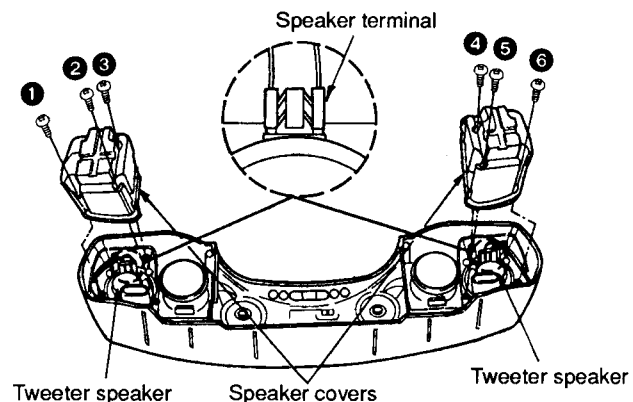
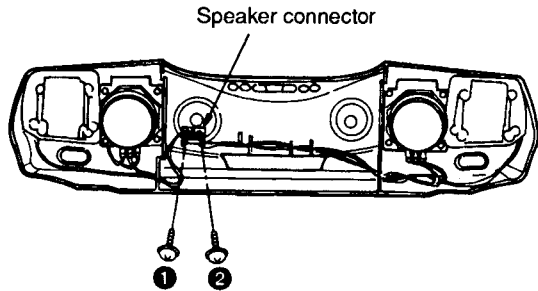
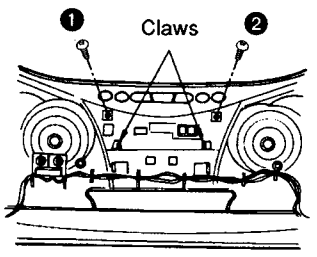
<p>Ref. No. 47</p>	<p>Removal of the Tweeter Speaker</p>	<p>Ref. No. 48</p>	<p>Removal of the Speaker Connector</p>
<p>Procedure 1→2→47</p>	 <p>1. Remove 6 screws (1~6). 2. Remove 2 speaker covers. 3. Pull out 2 speaker terminals.</p>	<p>Procedure 1→2→48</p>	 <p>• Remove 2 screws (1, 2).</p>
<p>Ref. No. 49</p>	<p>Removal of the Display Panel</p>		 <p>1. Remove 2 screws (1, 2). 2. Release 2 claws. 3. Remove the display panel in the direction of the arrow.</p>

■ Replacement of Main Parts

Friction gear replacement

Step 1 Referring to "Disassembly Instructions" (Ref. No. 16), remove the loading chassis.

Step 2 Widen 2 inter-claw space and pull out the friction gear.

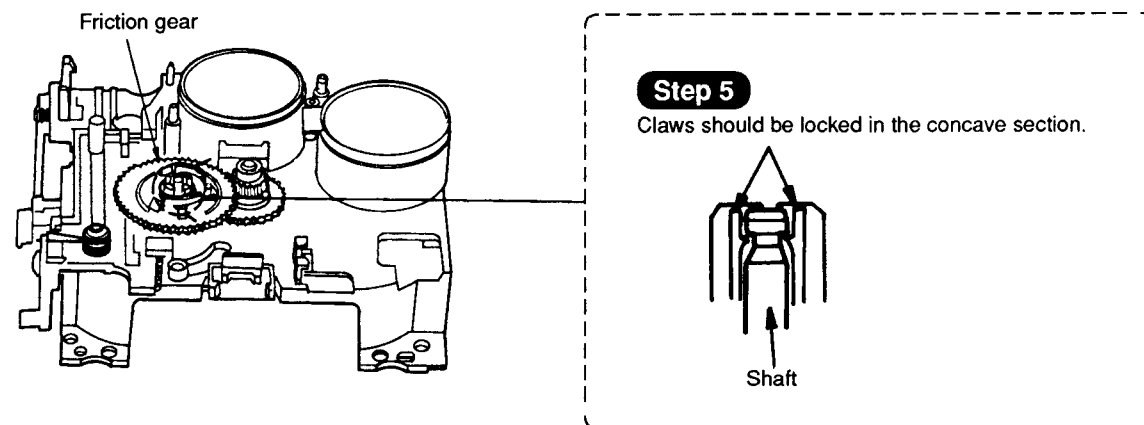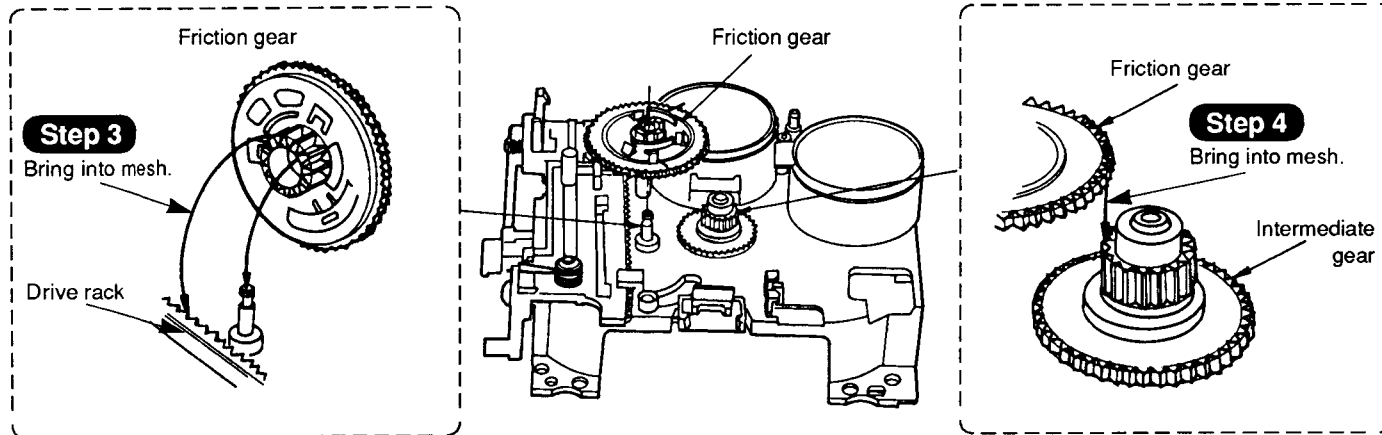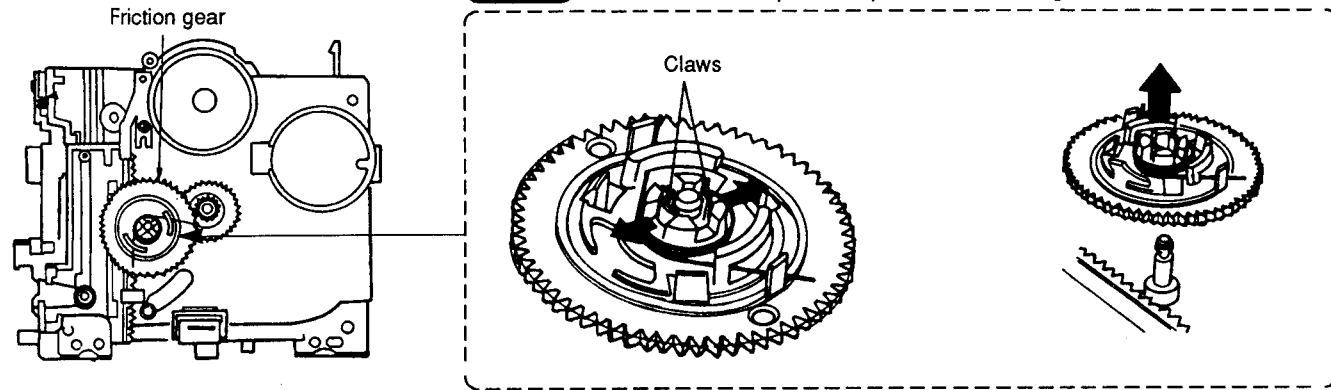

Drive rack replacement


Step 1 Referring to "Disassembly Instructions" (Ref No. 16), remove the loading chassis.

Step 2 Referring to "Friction Gear Replacement" (preceding page), remove the friction gear.


Step 3 Remove the screw.

Step 4 Remove the leaf spring.

Step 5 Slide the drive rack fully in the direction of the arrow.

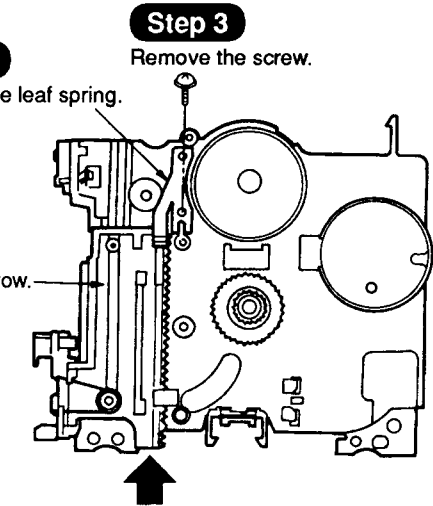



Step 6 Inserting a screwdriver in the hole, push it in till the claw is out.

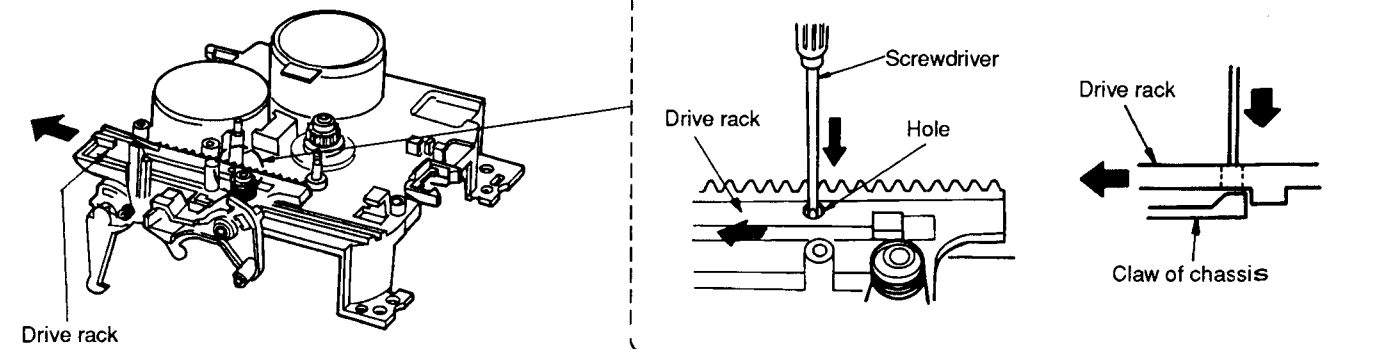

Step 7 Pushing the screwdriver in, slide the drive rack in the direction of the arrow and remove it.


Step 8 Remove the spring.

Step 9 Remove the lever by moving it as shown by arrows ①→②.

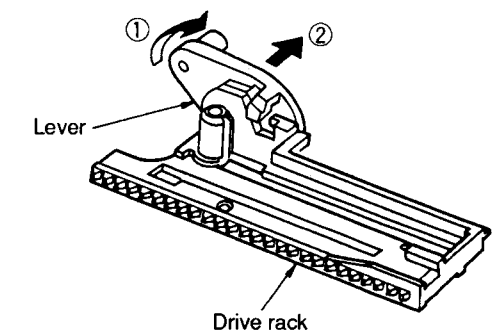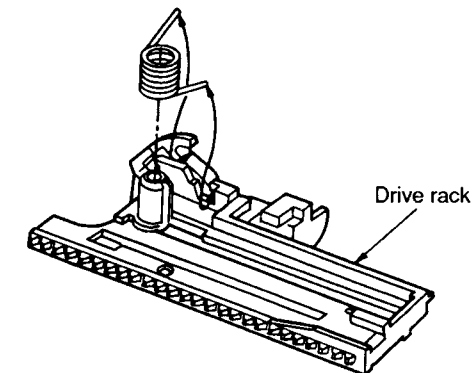


Step 10

Adjusting hooks (A) and (B) of the chassis to notches (A) and (B) of the drive rack, carry out mounting.

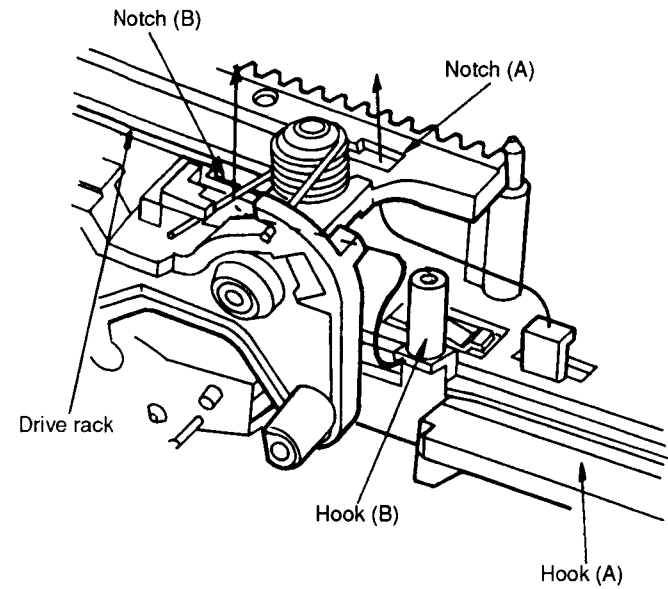

Step 12

Mount the leaf spring with the screw.

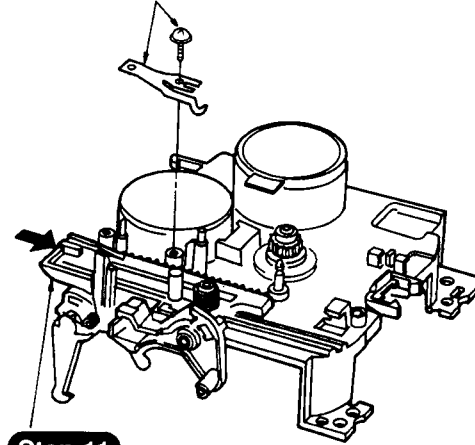

Step 11

Slide the drive rack.


Leaf switch replacement

Step 1

Referring to "Disassembly Instructions" (Ref. No.14), remove the coupling chassis.

Step 2

Remove 3 screws.

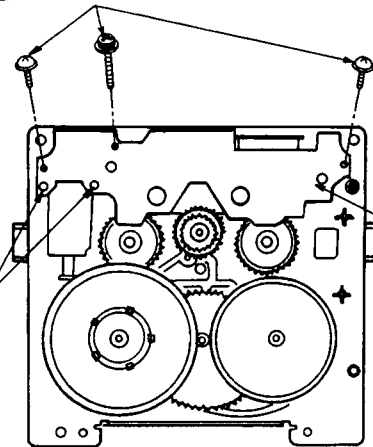

Step 3

Unsolder 2 points.

Step 4

Raise the P.C.B.

Step 5

Unsolder 2 points.

Step 6


Remove 2 claws.

Step 7

Remove the leaf switch downward.

Step 8

Mount 1 boss, 2 claws and 2 switch terminals while adjusting them to the P.C.B..

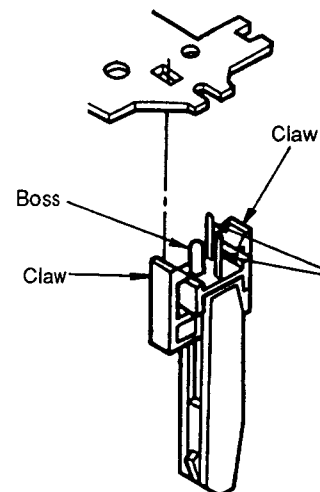

Step 9

Solder the switch terminals.

Note:

- The illustration shown the method of replacing the leaf switch (S975A). Other leaf switches can also be replaced by the same method.
- When mounting the P.C.B. to the mechanism, be sure to previously fix the end part with screws in order to prevent the P.C.B. from rising and then solder the sections.

Head replacement

Step 1


Referring to "Disassembly Instructions" (Ref. No.15), remove the cassette holder.

Step 2

Remove the claw.


Step 3

Remove the pinch roller.

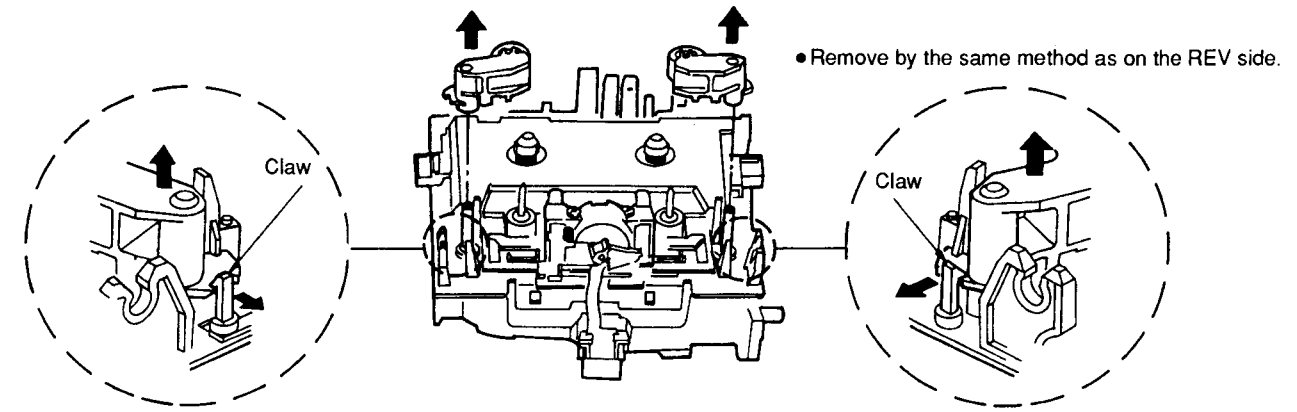


Step 5

Widen 2 inter-claw space and remove the head connector.

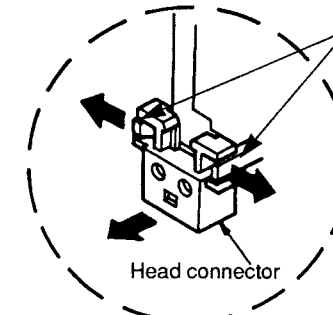


Step 4

Remove 2 screws.

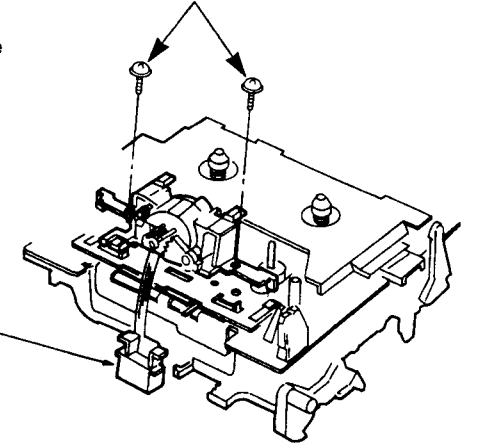


Step 8

Mount 2 screws.

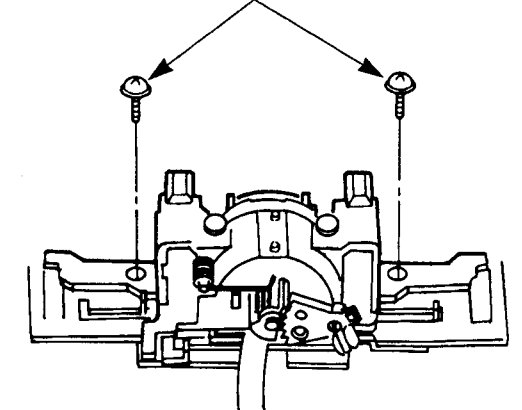

Step 6

Bring into mesh.

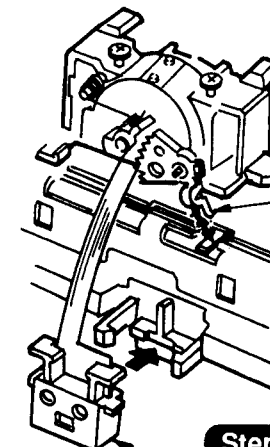


Step 7

Mount the head connector.

Plunger replacement

Step 1 Referring to "Disassembly Instructions" (Ref. No.14), remove the coupling chassis.


Step 2 Remove 3 screws.

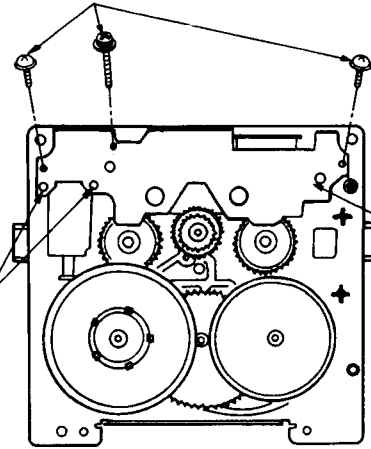


Step 3 Unsolder 2 points.

Step 4 Raise the P.C.B. while keeping it horizontal.


Step 5 Remove 2 claws.

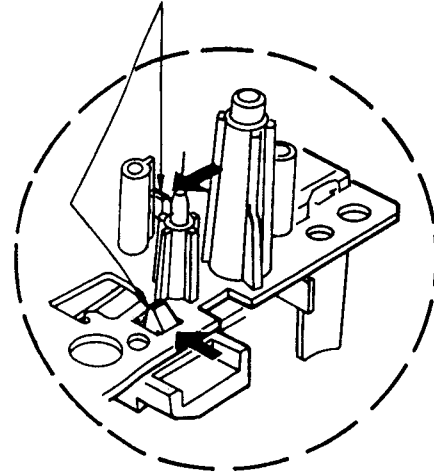


Step 6 Remove 2 claws.

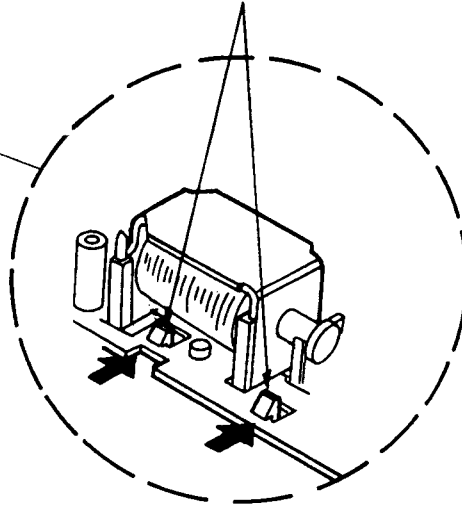


Step 7 Remove the cover.

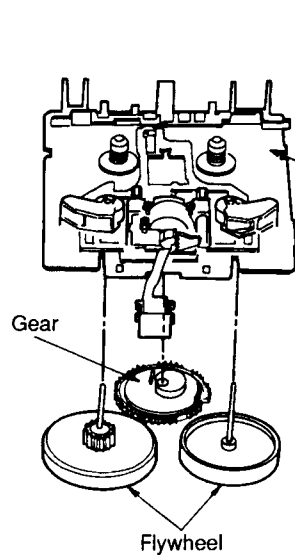

Step 8 Remove 4 claws.

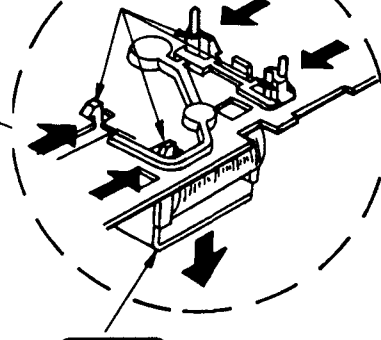


Step 9 Remove the plunger.

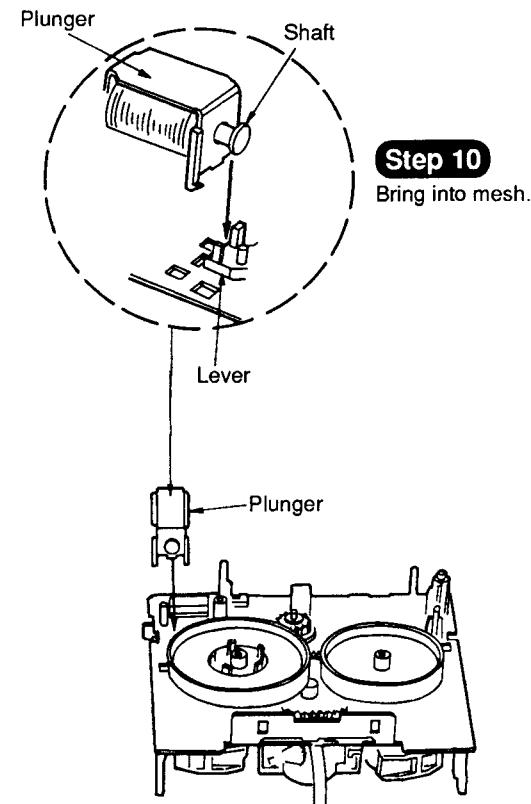

Step 12 Mount 3 screws.

Step 13 Solder 2 points.


Step 11 Mount the P.C.B.

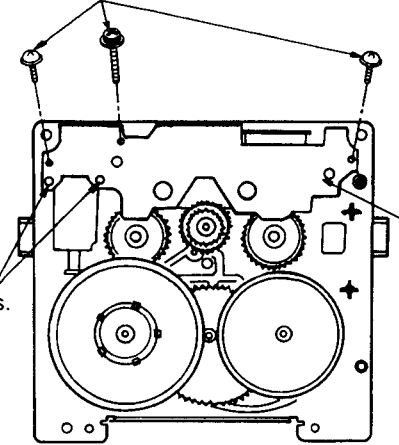


Note: Care should be taken that keeping the mechanism in such position as pictured to the right may displace the flywheels and gear.

Reassembly Instructions

Loading chassis mounting procedure

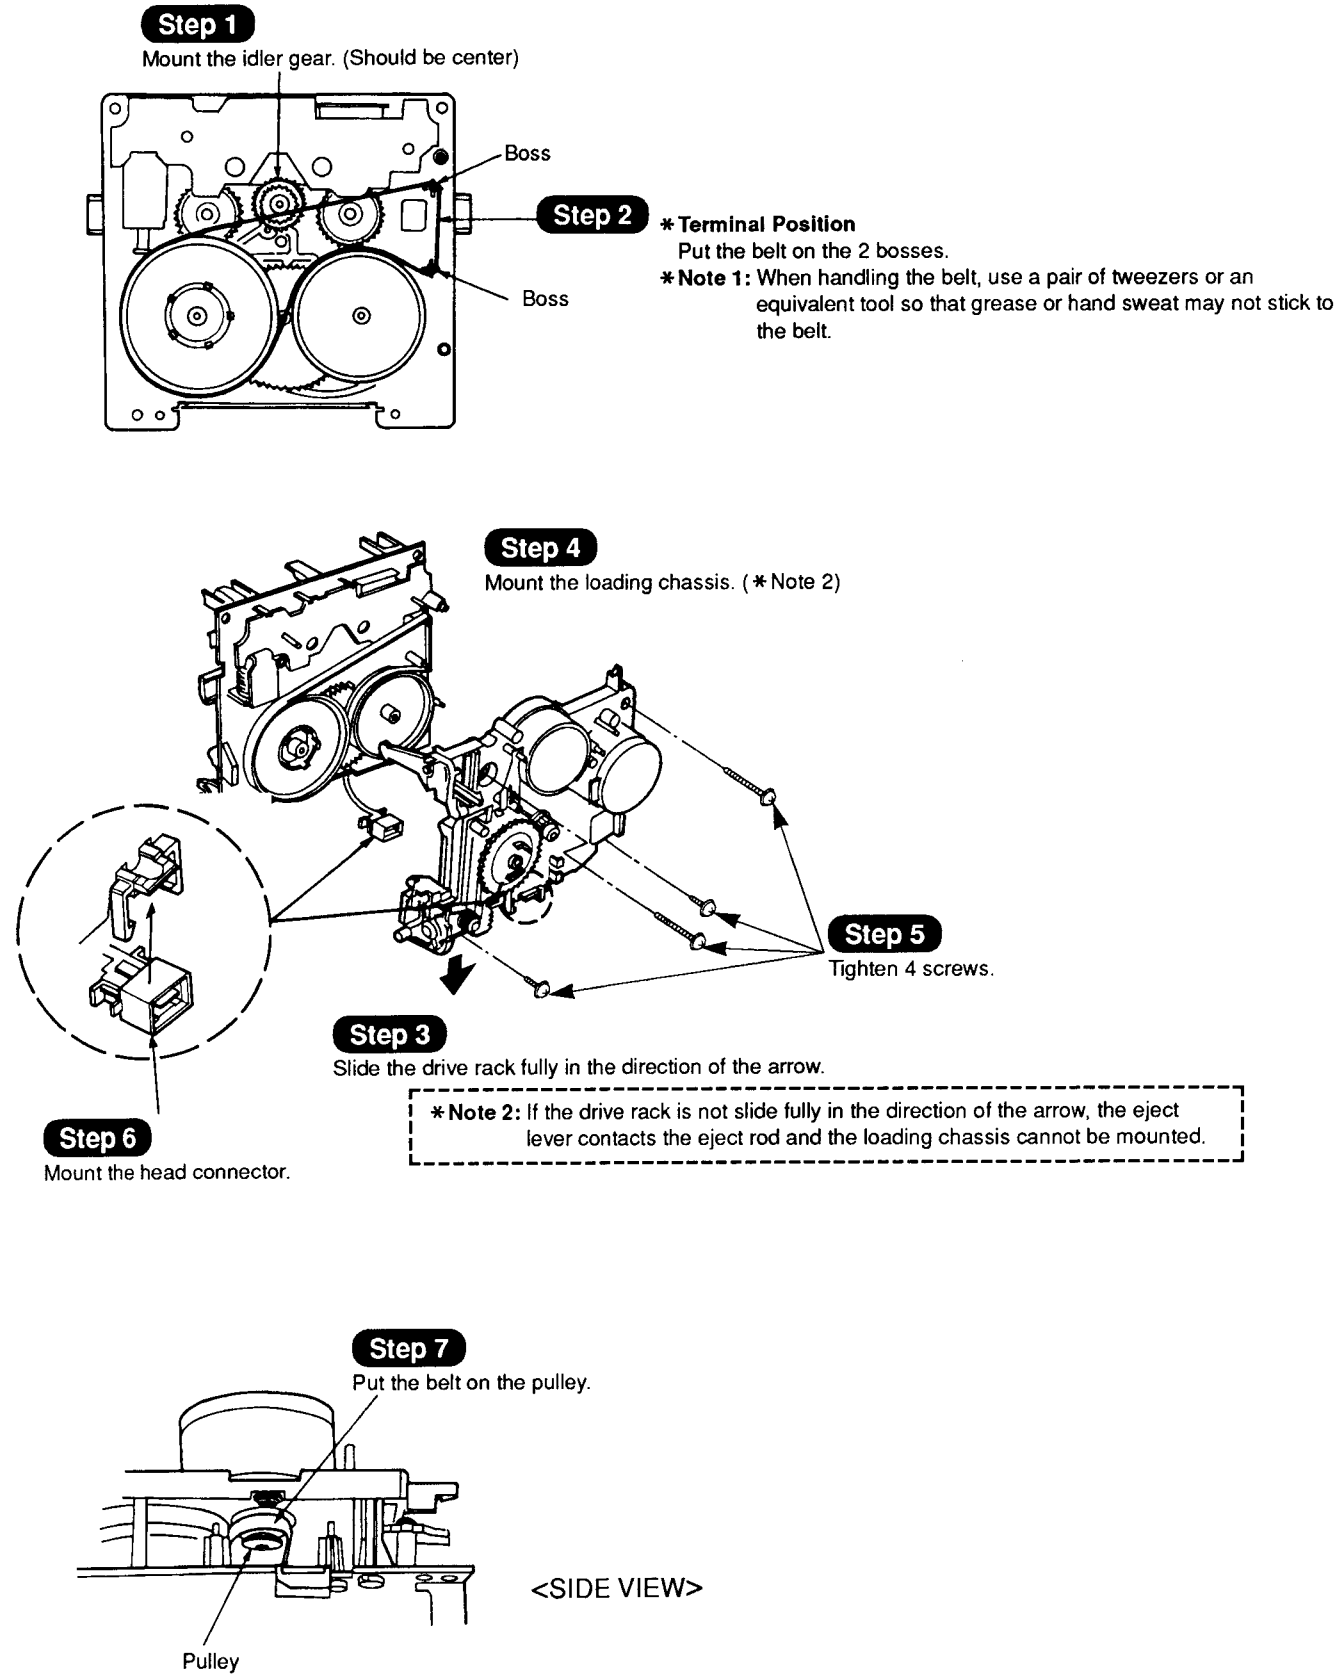


Cassette holder mounting procedure

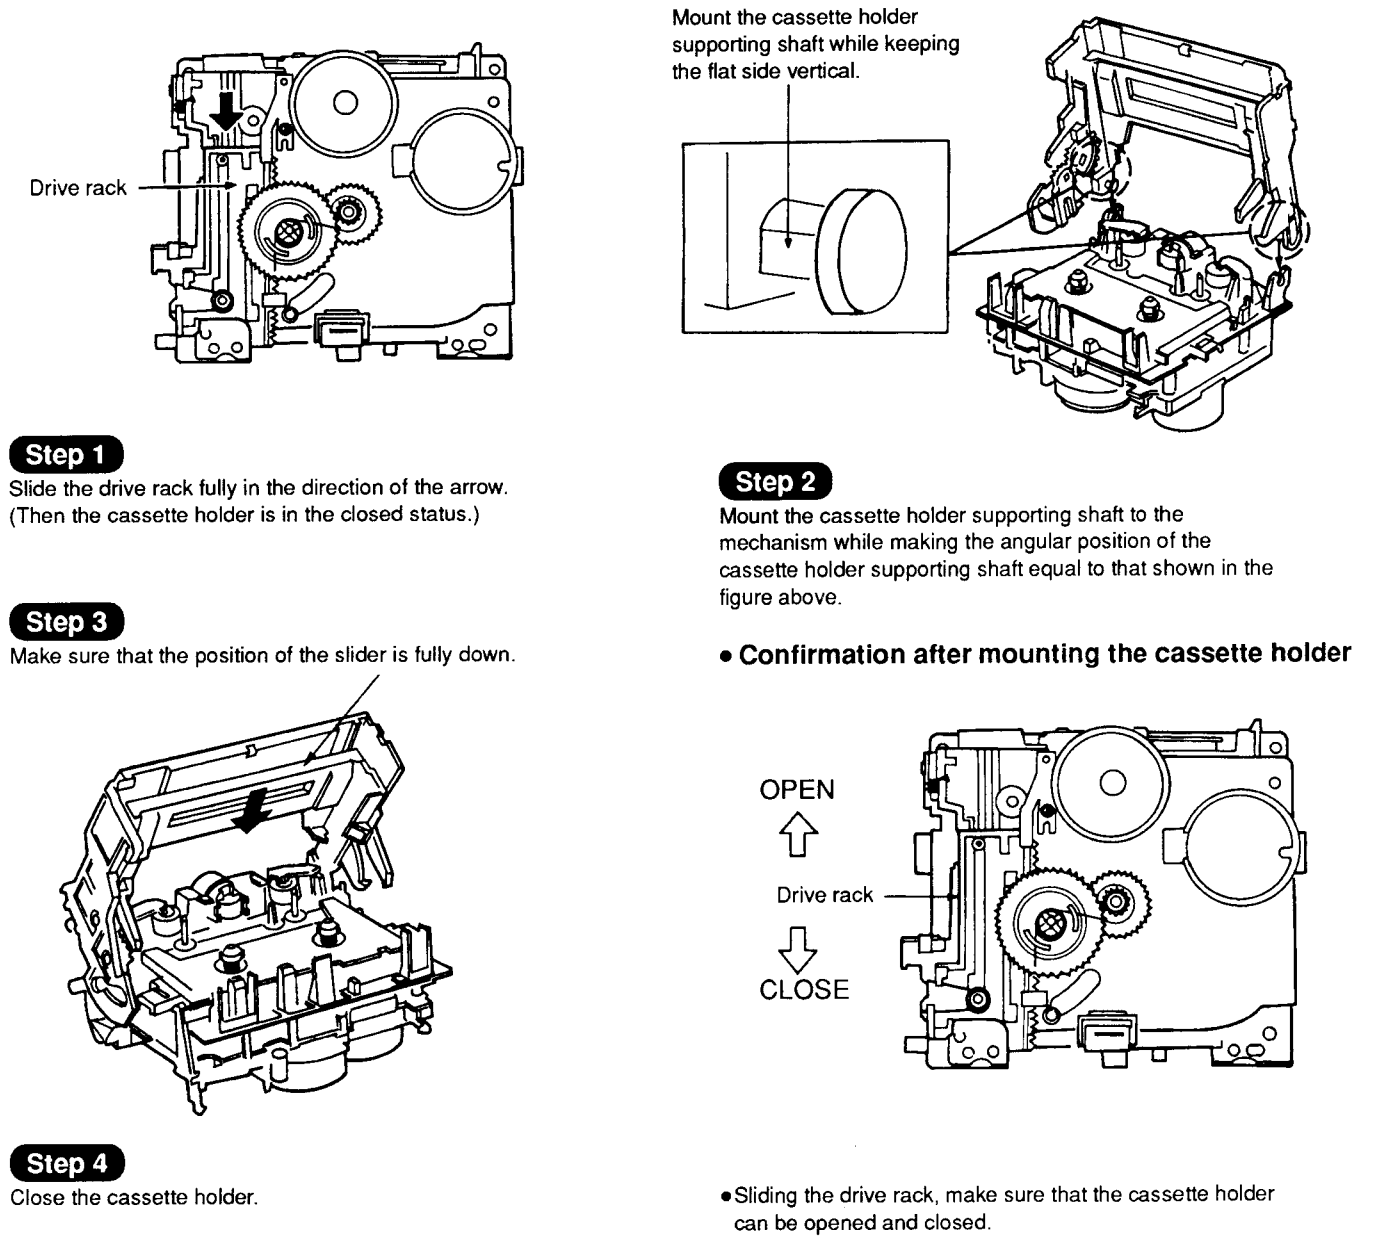

DECK-2 mechanism mounting procedure


Step 1

Pressing the cassette holder spring by fingering, keep the deck-2 mechanism horizontal and mount it to the coupling chassis. The cassette holder spring should be positioned inside the coupling chassis.

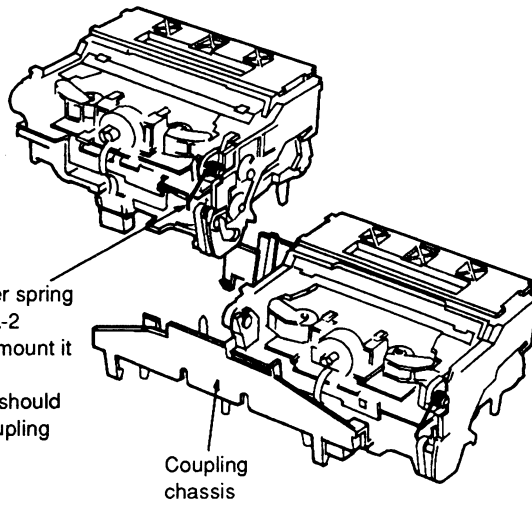

Step 2

Turn over the mechanism unit.

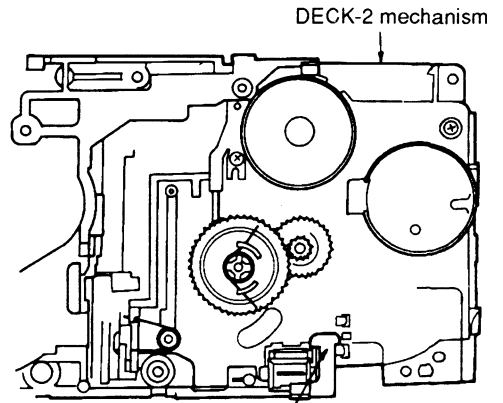


Step 3

Fit in the T-shaped hook.

Step 4

Tight 2 screws.

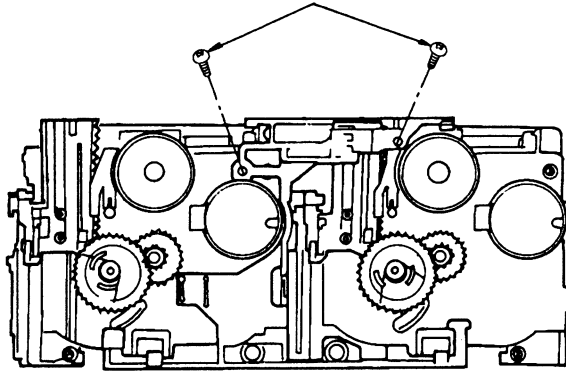

Mechanism control P.C.B. mounting procedure

Step 1

Solder the capstan motor and loading motor for both DECK-1 deck-2 mechanisms.

Step 2


Making sure of connector inserting position, mount the mechanism control P.C.B.. (Make the position adjustment for bosses.)

Step 3



Fit in 6 claws.

Step 4


Mount 4 screws.

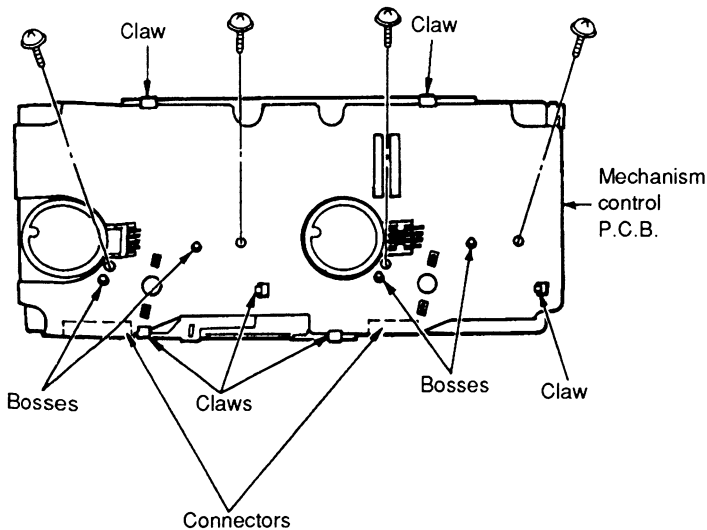

Mechanism unit mounting procedure

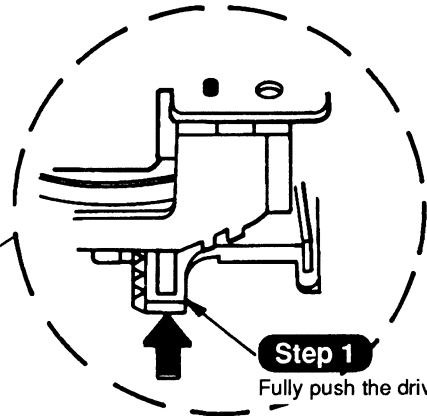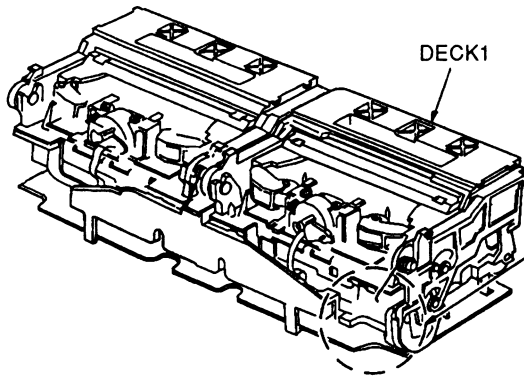


Fully push the drive rack in.

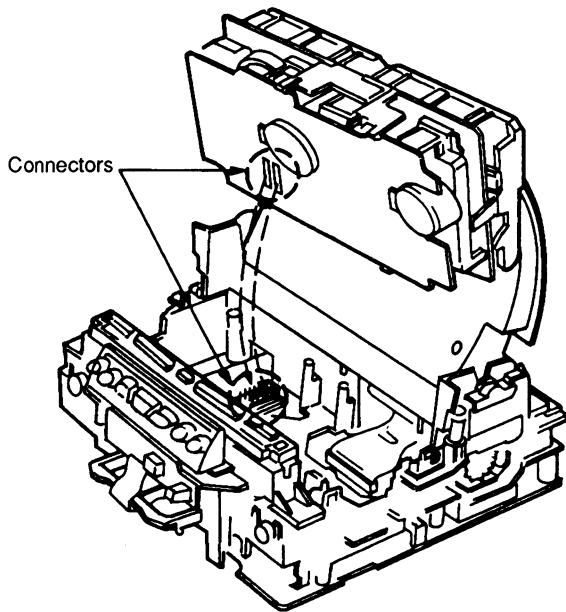

Step 2

Making sure of connector inserting position, mount to the main P.C.B..

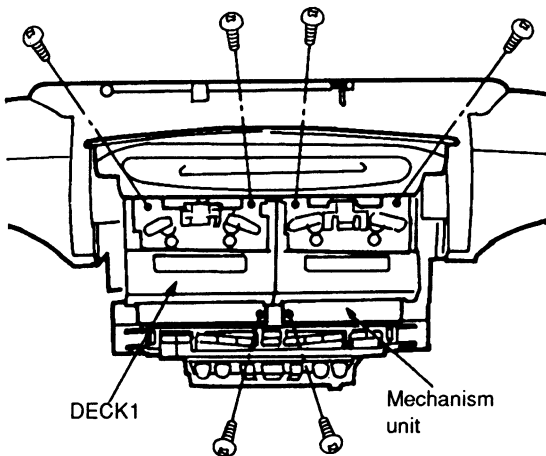


Step 3

Giving attention to the connector position, mount the mechanism unit.


Step 4

Mount 6 screws.

Motor ass'y and shield case mounting procedure

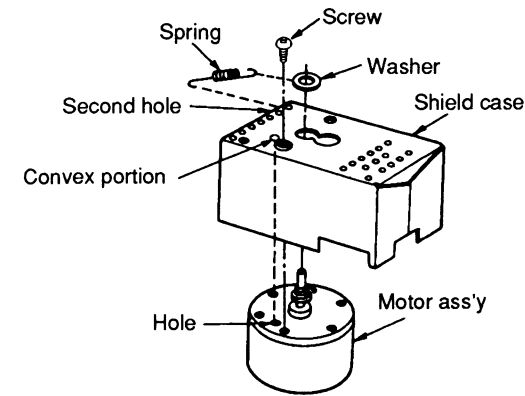


1. Install the shield case over the motor ass'y, fitting the convex portion on the shield case into the hole provided in the motor ass'y and fix with a screw.
2. Install the spring between the second hole on the shield case and the washer.

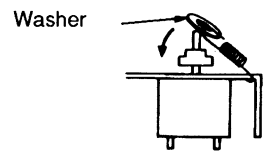

3. Install the washer into the motor ass'y.


CD P.C.B. mounting procedure

1. When installing CD P.C.B., move the optical pickup to the more external side than the mark (▲).
(When the optical pickup is not moved, the switch (S701) on the CD P.C.B. may be broken.)
 2. Connect the flexible cable to the connector (CN701).
 3. Install the CD P.C.B. to the traverse unit with 3 screws (1~3).
 4. Solder 2 traverse motor terminals and 2 spindle motor terminals.
- Note:**
- Insert the flexible cable into the connector and lock securely.
 - After installing the motor with screws, solder each motor terminal.

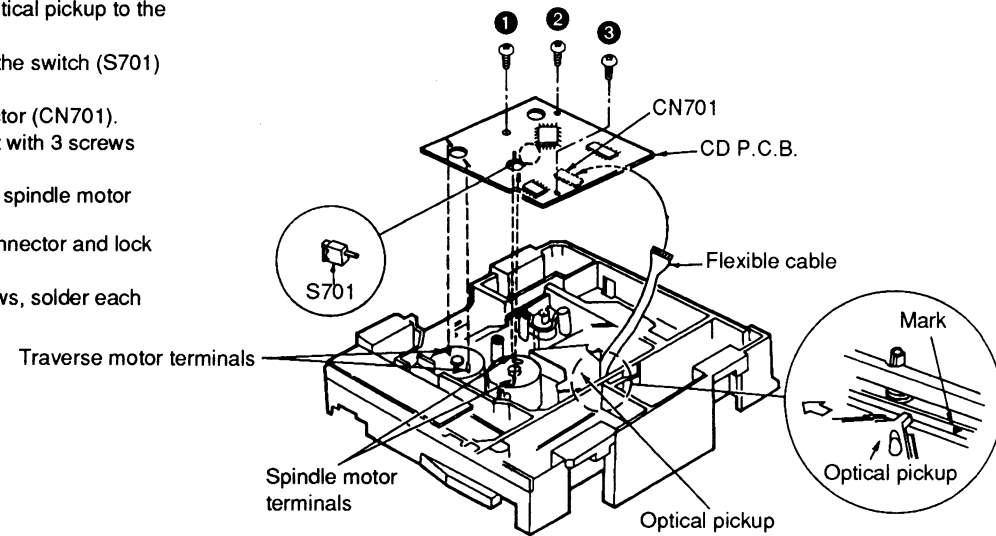


Measure for Tape Trouble


1. Disassembly this unit until the top panel is removed.
(Refer to "Disassembly Instructions, Ref. No.6 Removal of the Inner Panel".)
2. Remove the wound tape with turning the pulley and the flywheel in the direction of the arrow.

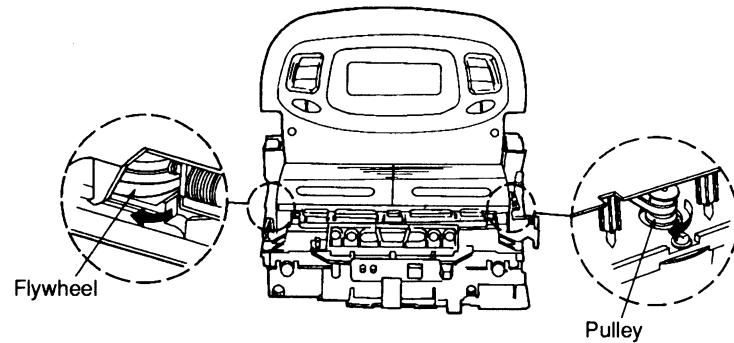

Top panel unit and motor unit mounting procedure

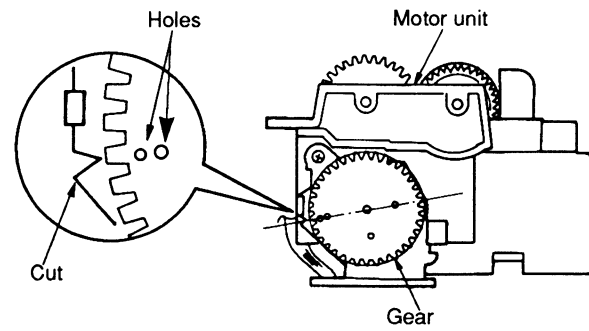


1. Install the gear to the motor unit so that 2 holes of the gear line up with the cut.

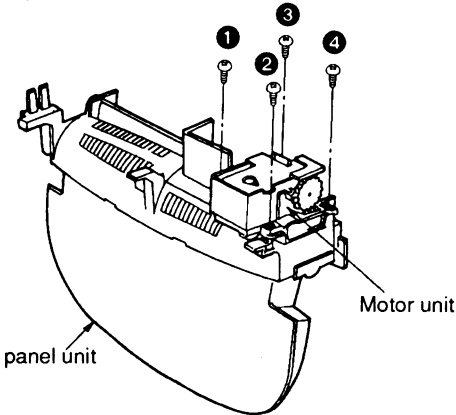


2. Set the top panel unit to be open and install the motor unit with 4 screws (1~4).

Schematic Diagram • Tuner circuit (Parts list on pages 107~114)

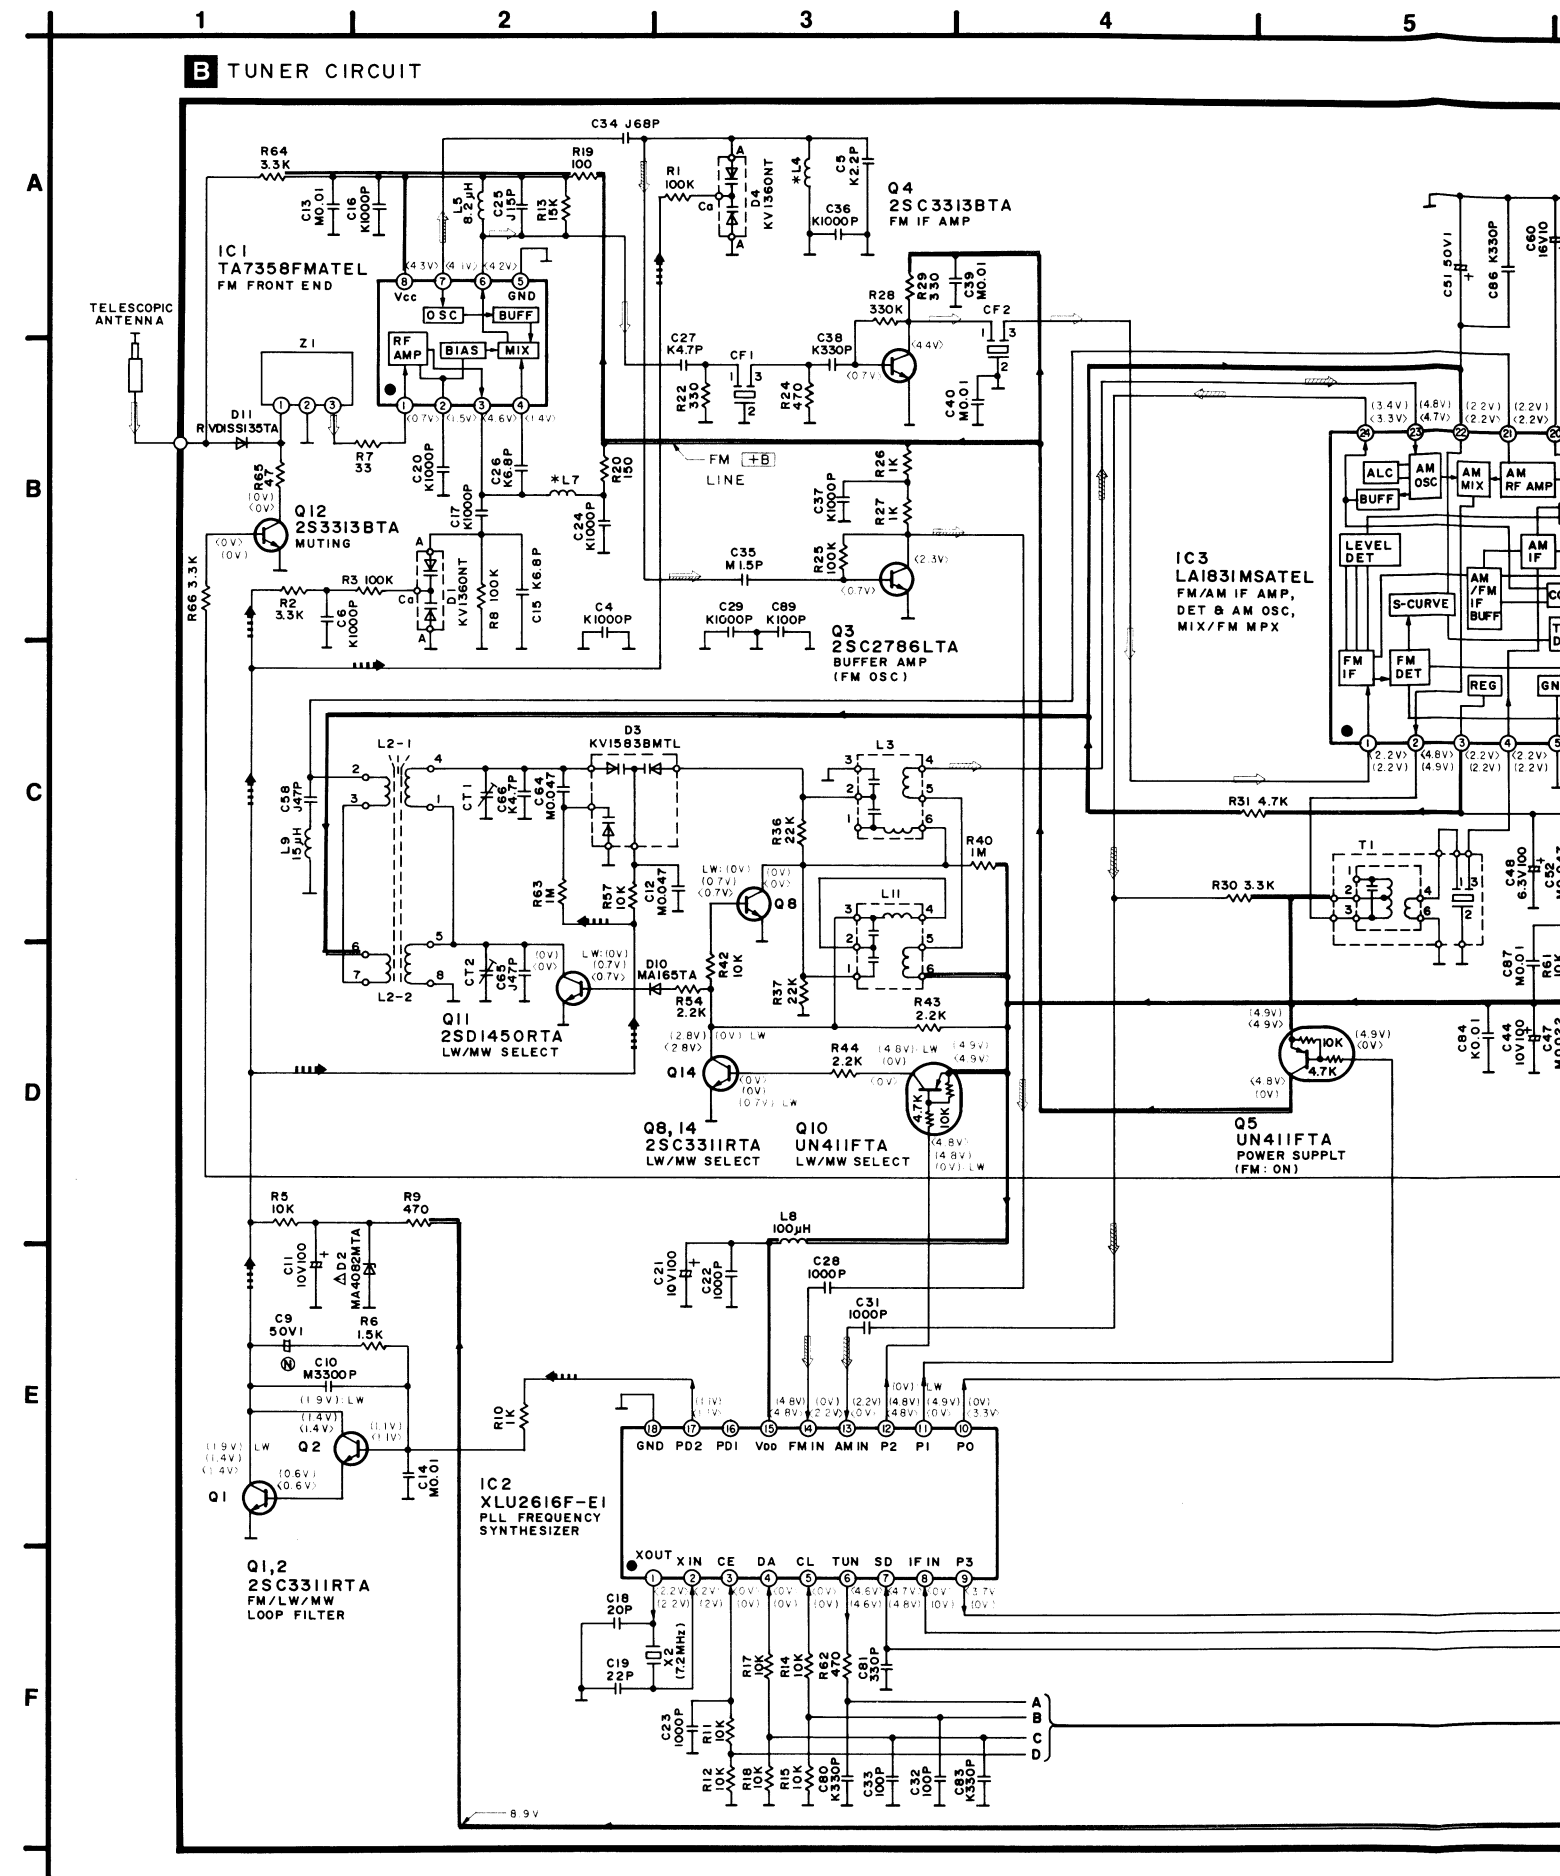


Schematic Diagram • Tuner circuit (Parts list on pages 107~114)

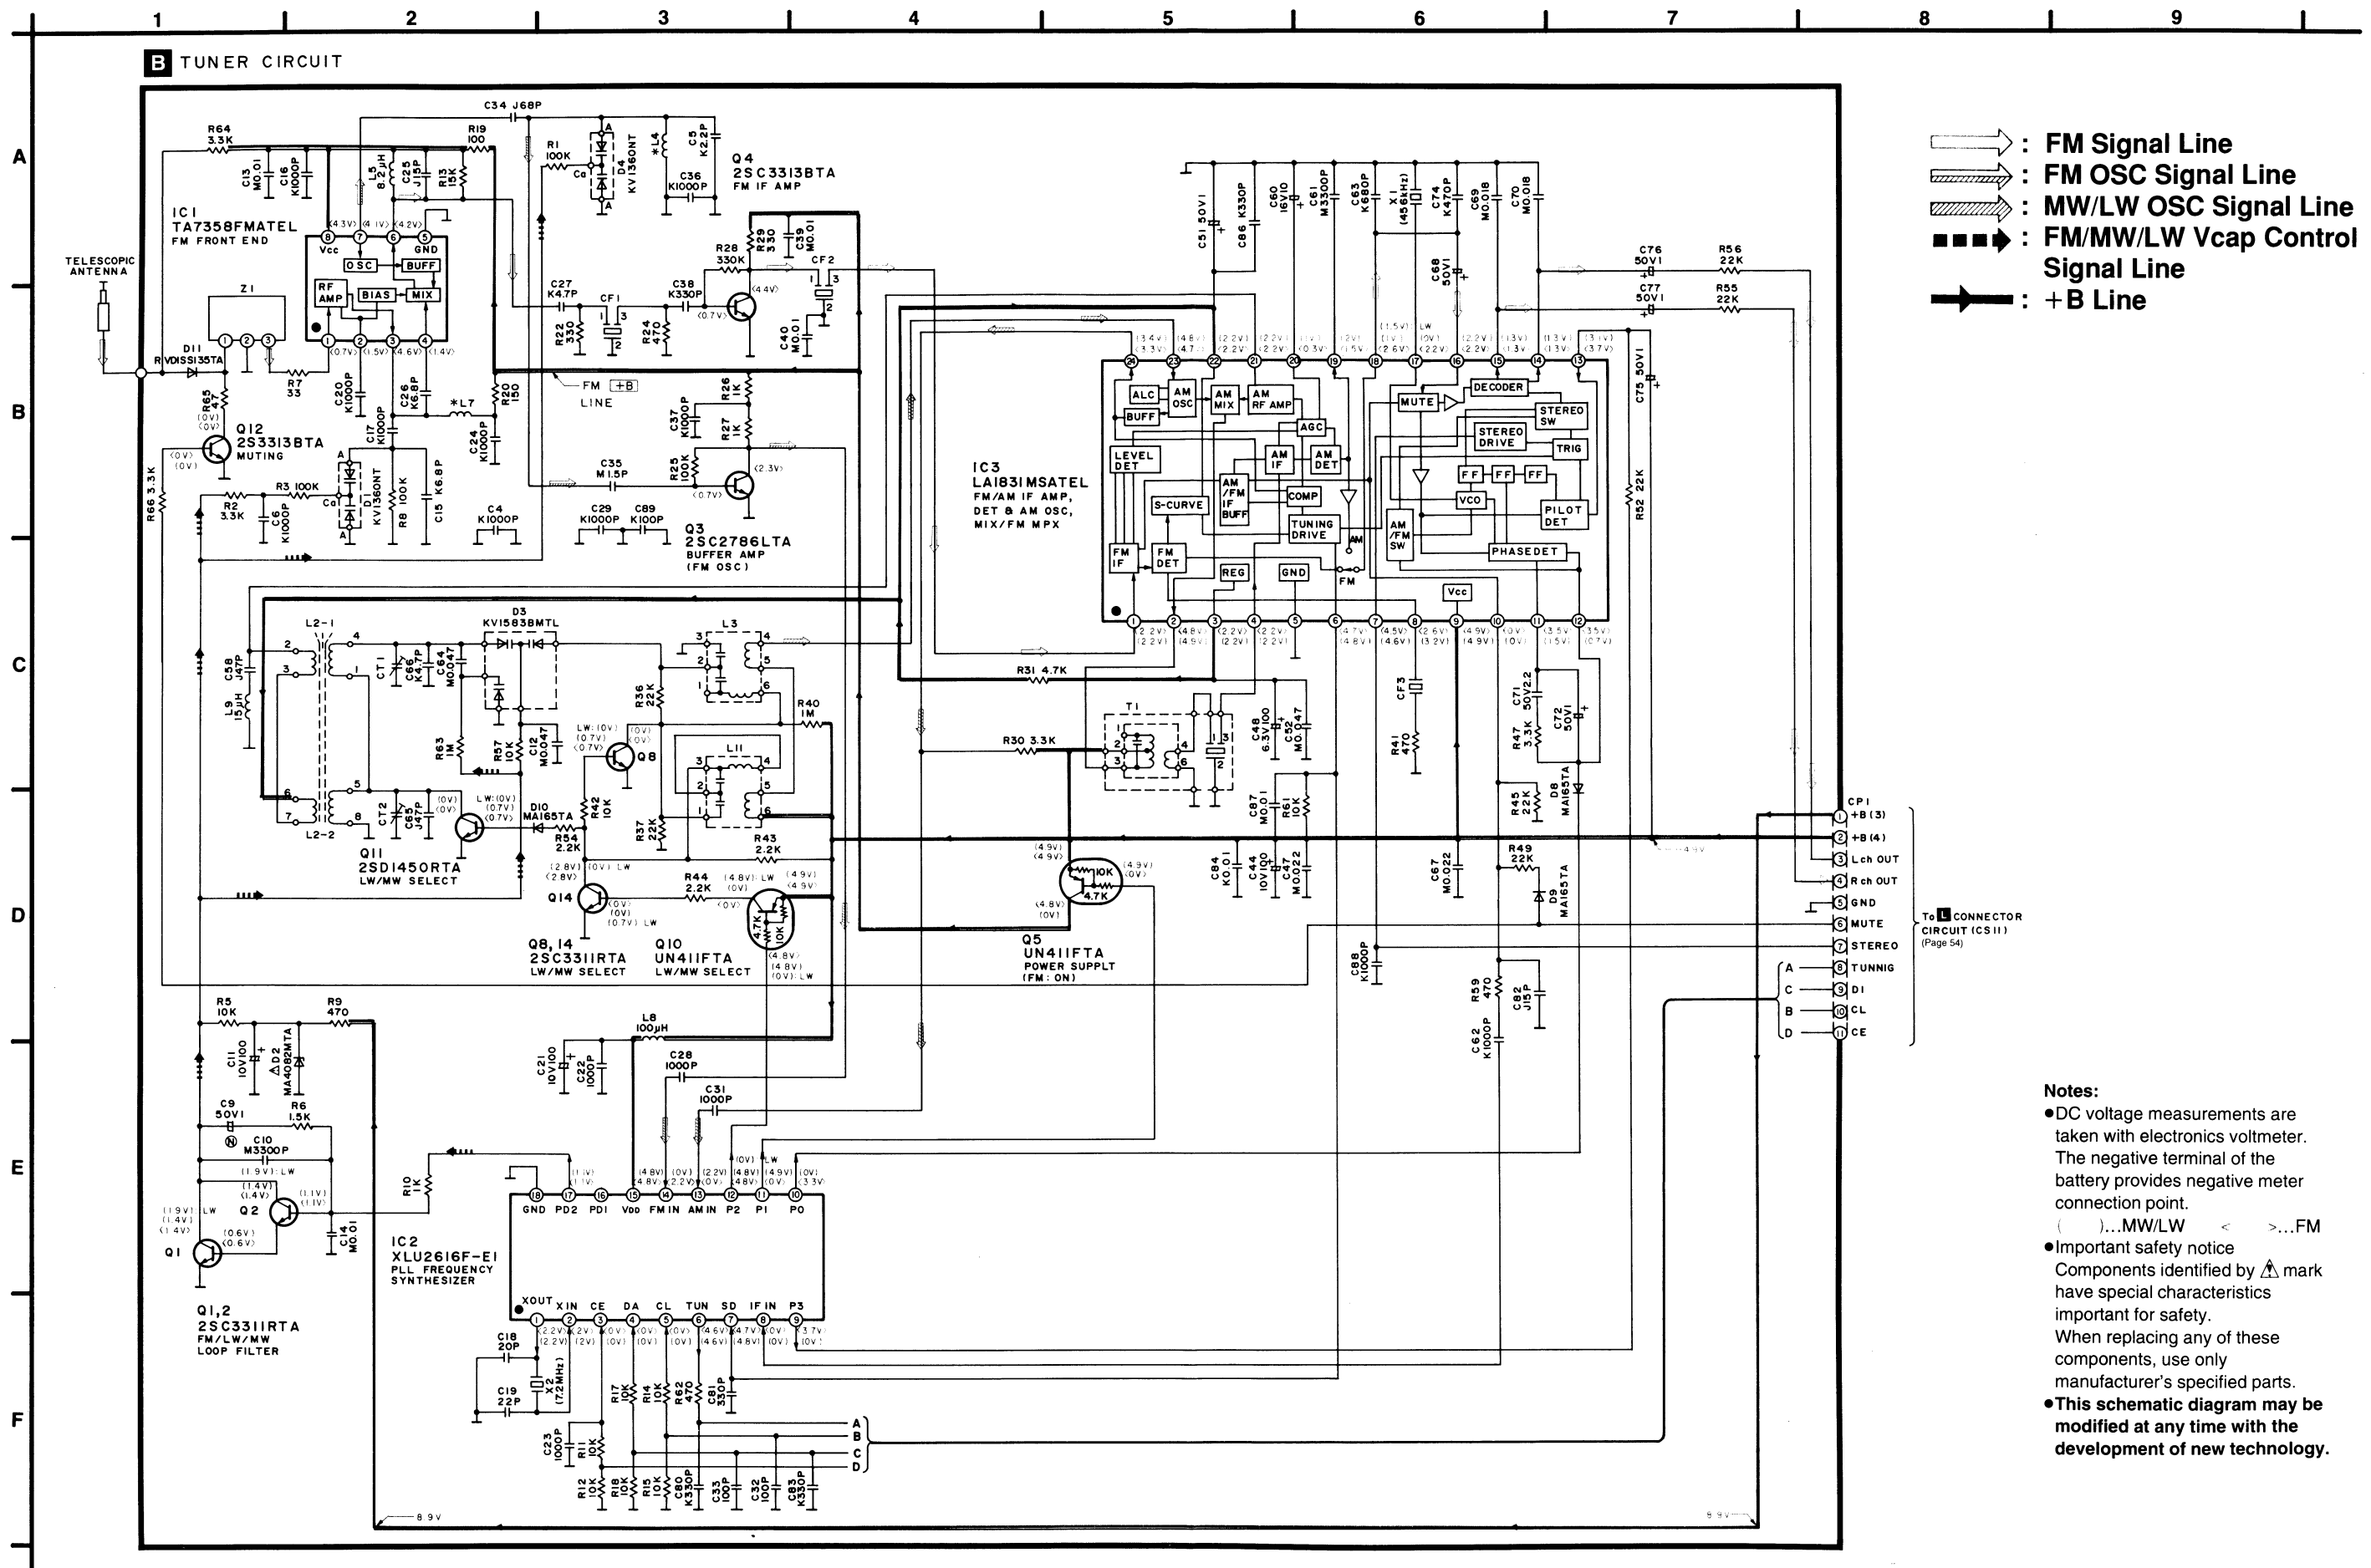

Notes:


- DC voltage measurements are taken with electronics voltmeter. The negative terminal of the battery provides negative meter connection point.
- ()...MW/LW < >...FM
- Important safety notice
Components identified by Δ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.
- This schematic diagram may be modified at any time with the development of new technology.

Schematic Diagram • CD circuit (Parts list on pages 107~114)

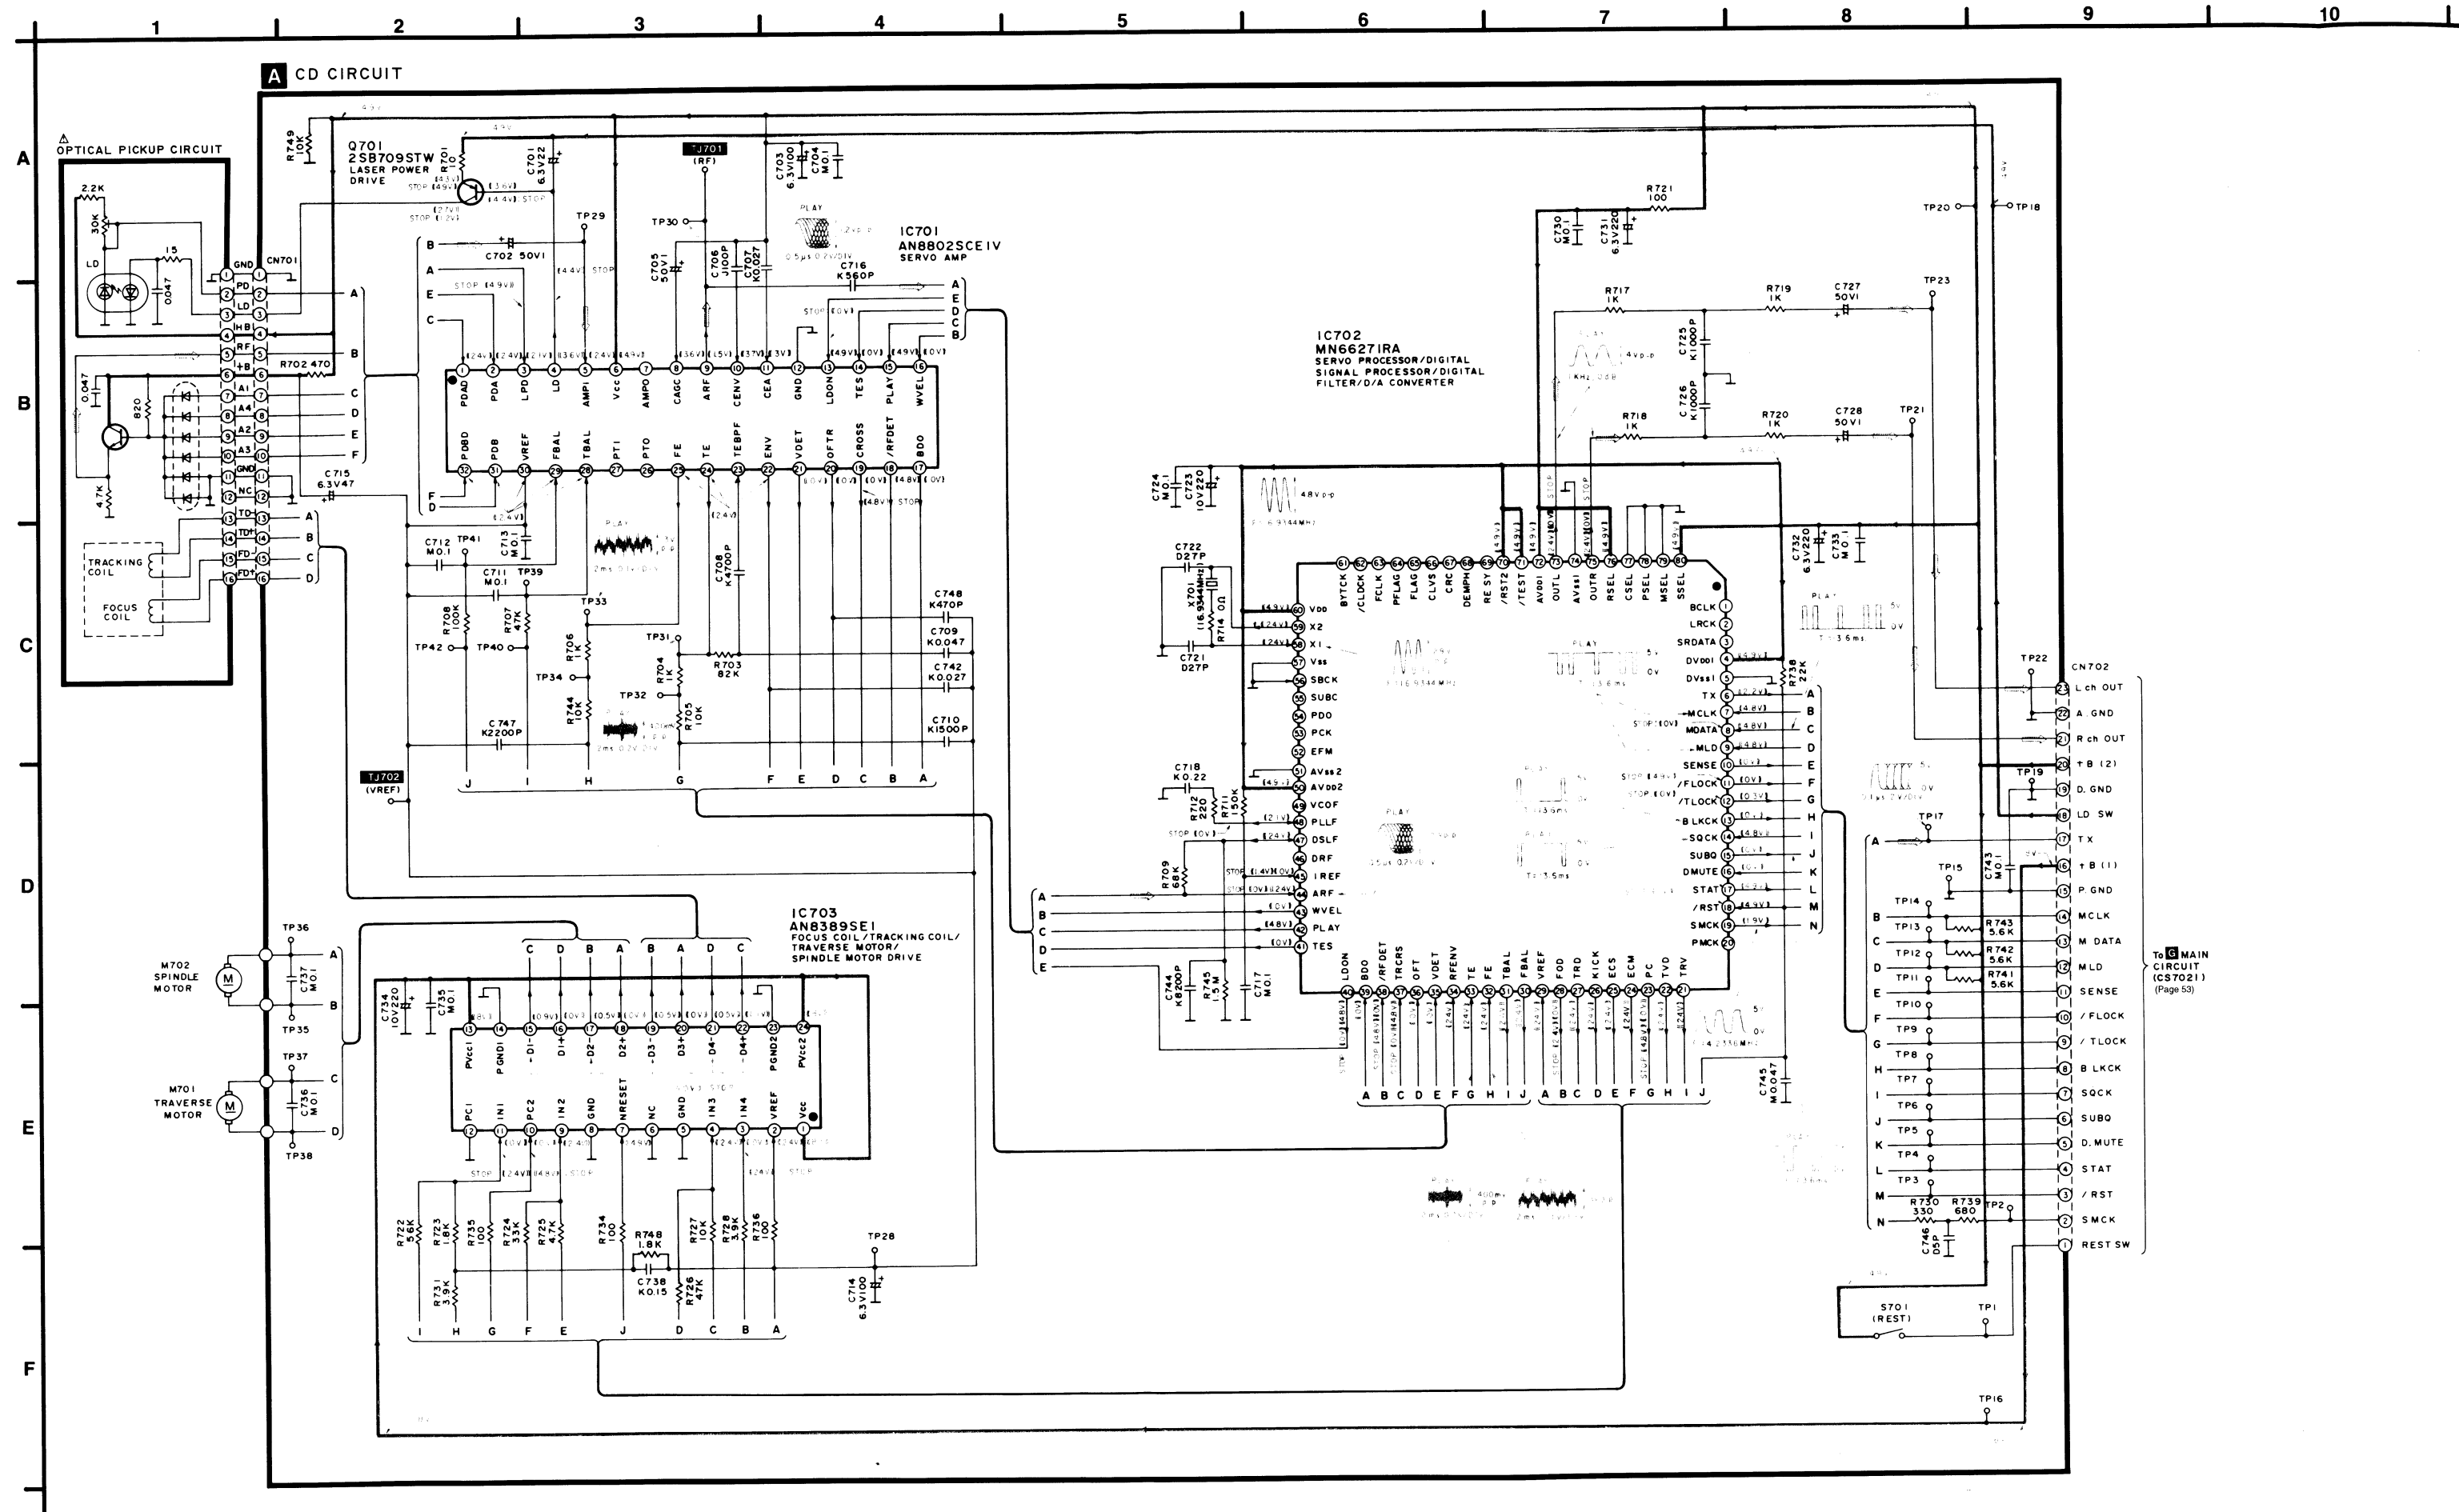

To MAIN CIRCUIT (CS7021) (Page 53)



Schematic Diagram • Mechanism circuit, mechanism control circuit and LCD circuit (Parts list on pages 107~114)

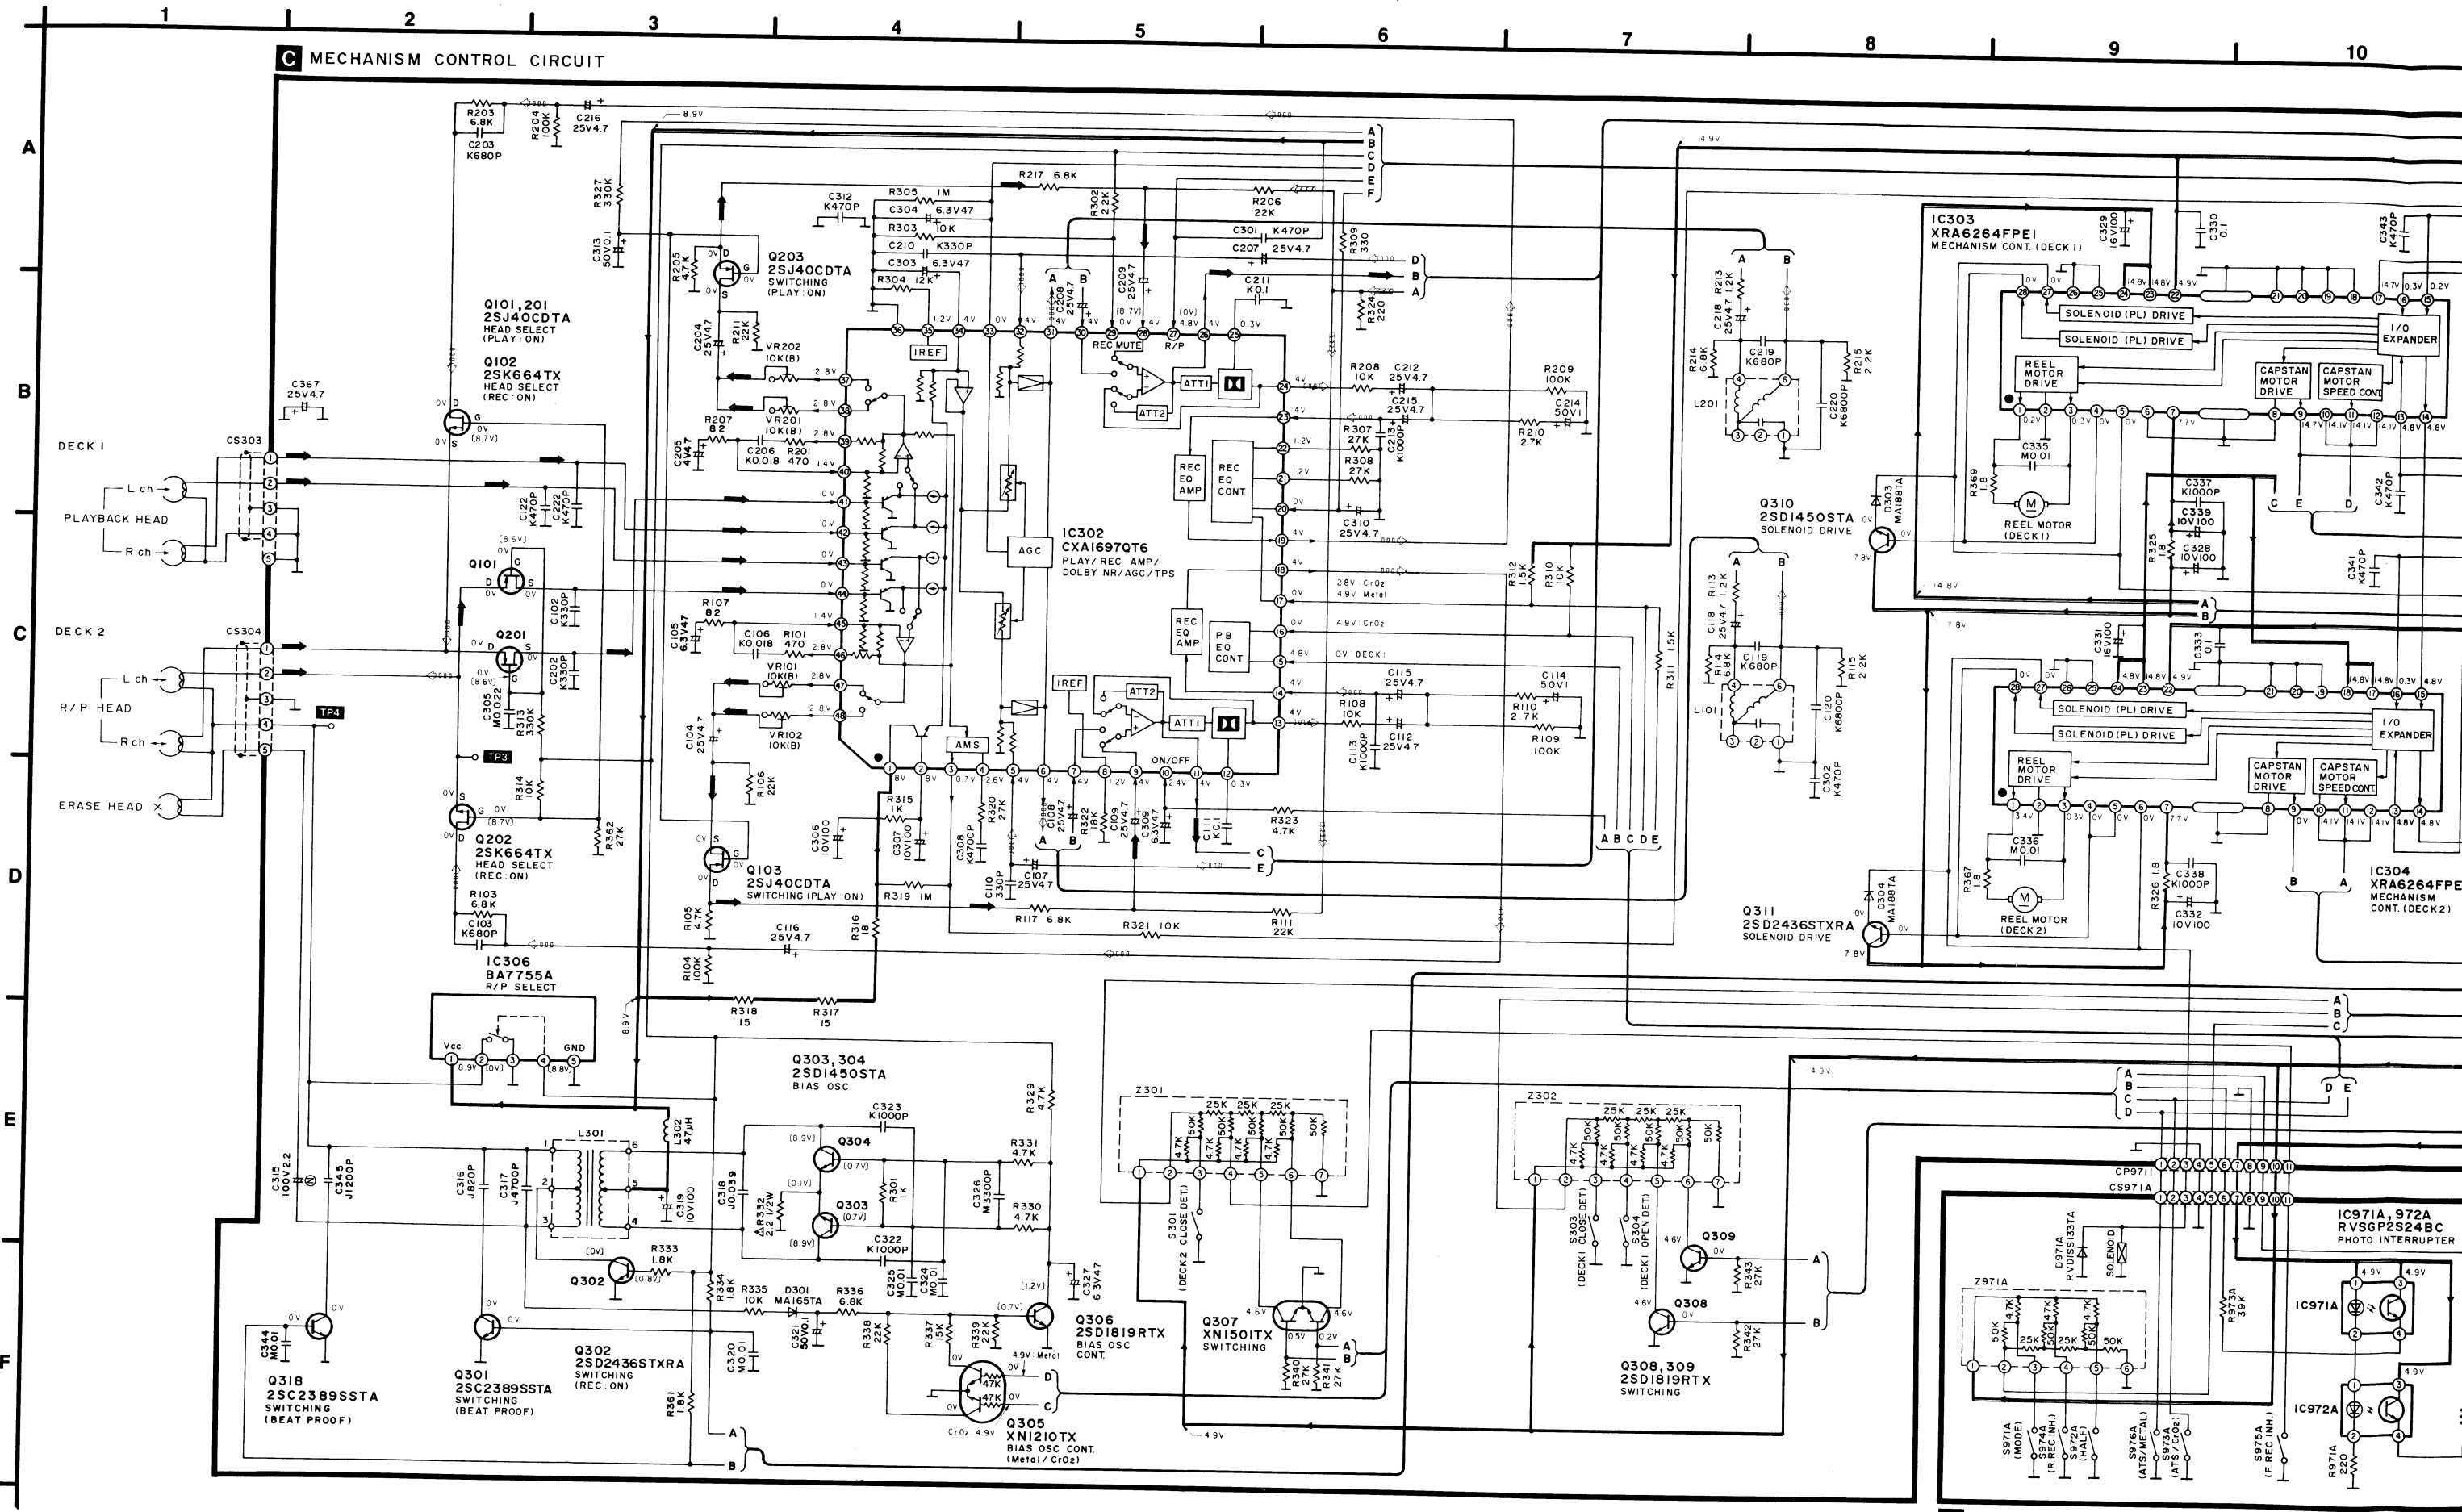

C MECHANISM CONTROL CIRCUIT

D MECHANISM (DECK 2) CIRCUIT


F LCD CIRCUIT

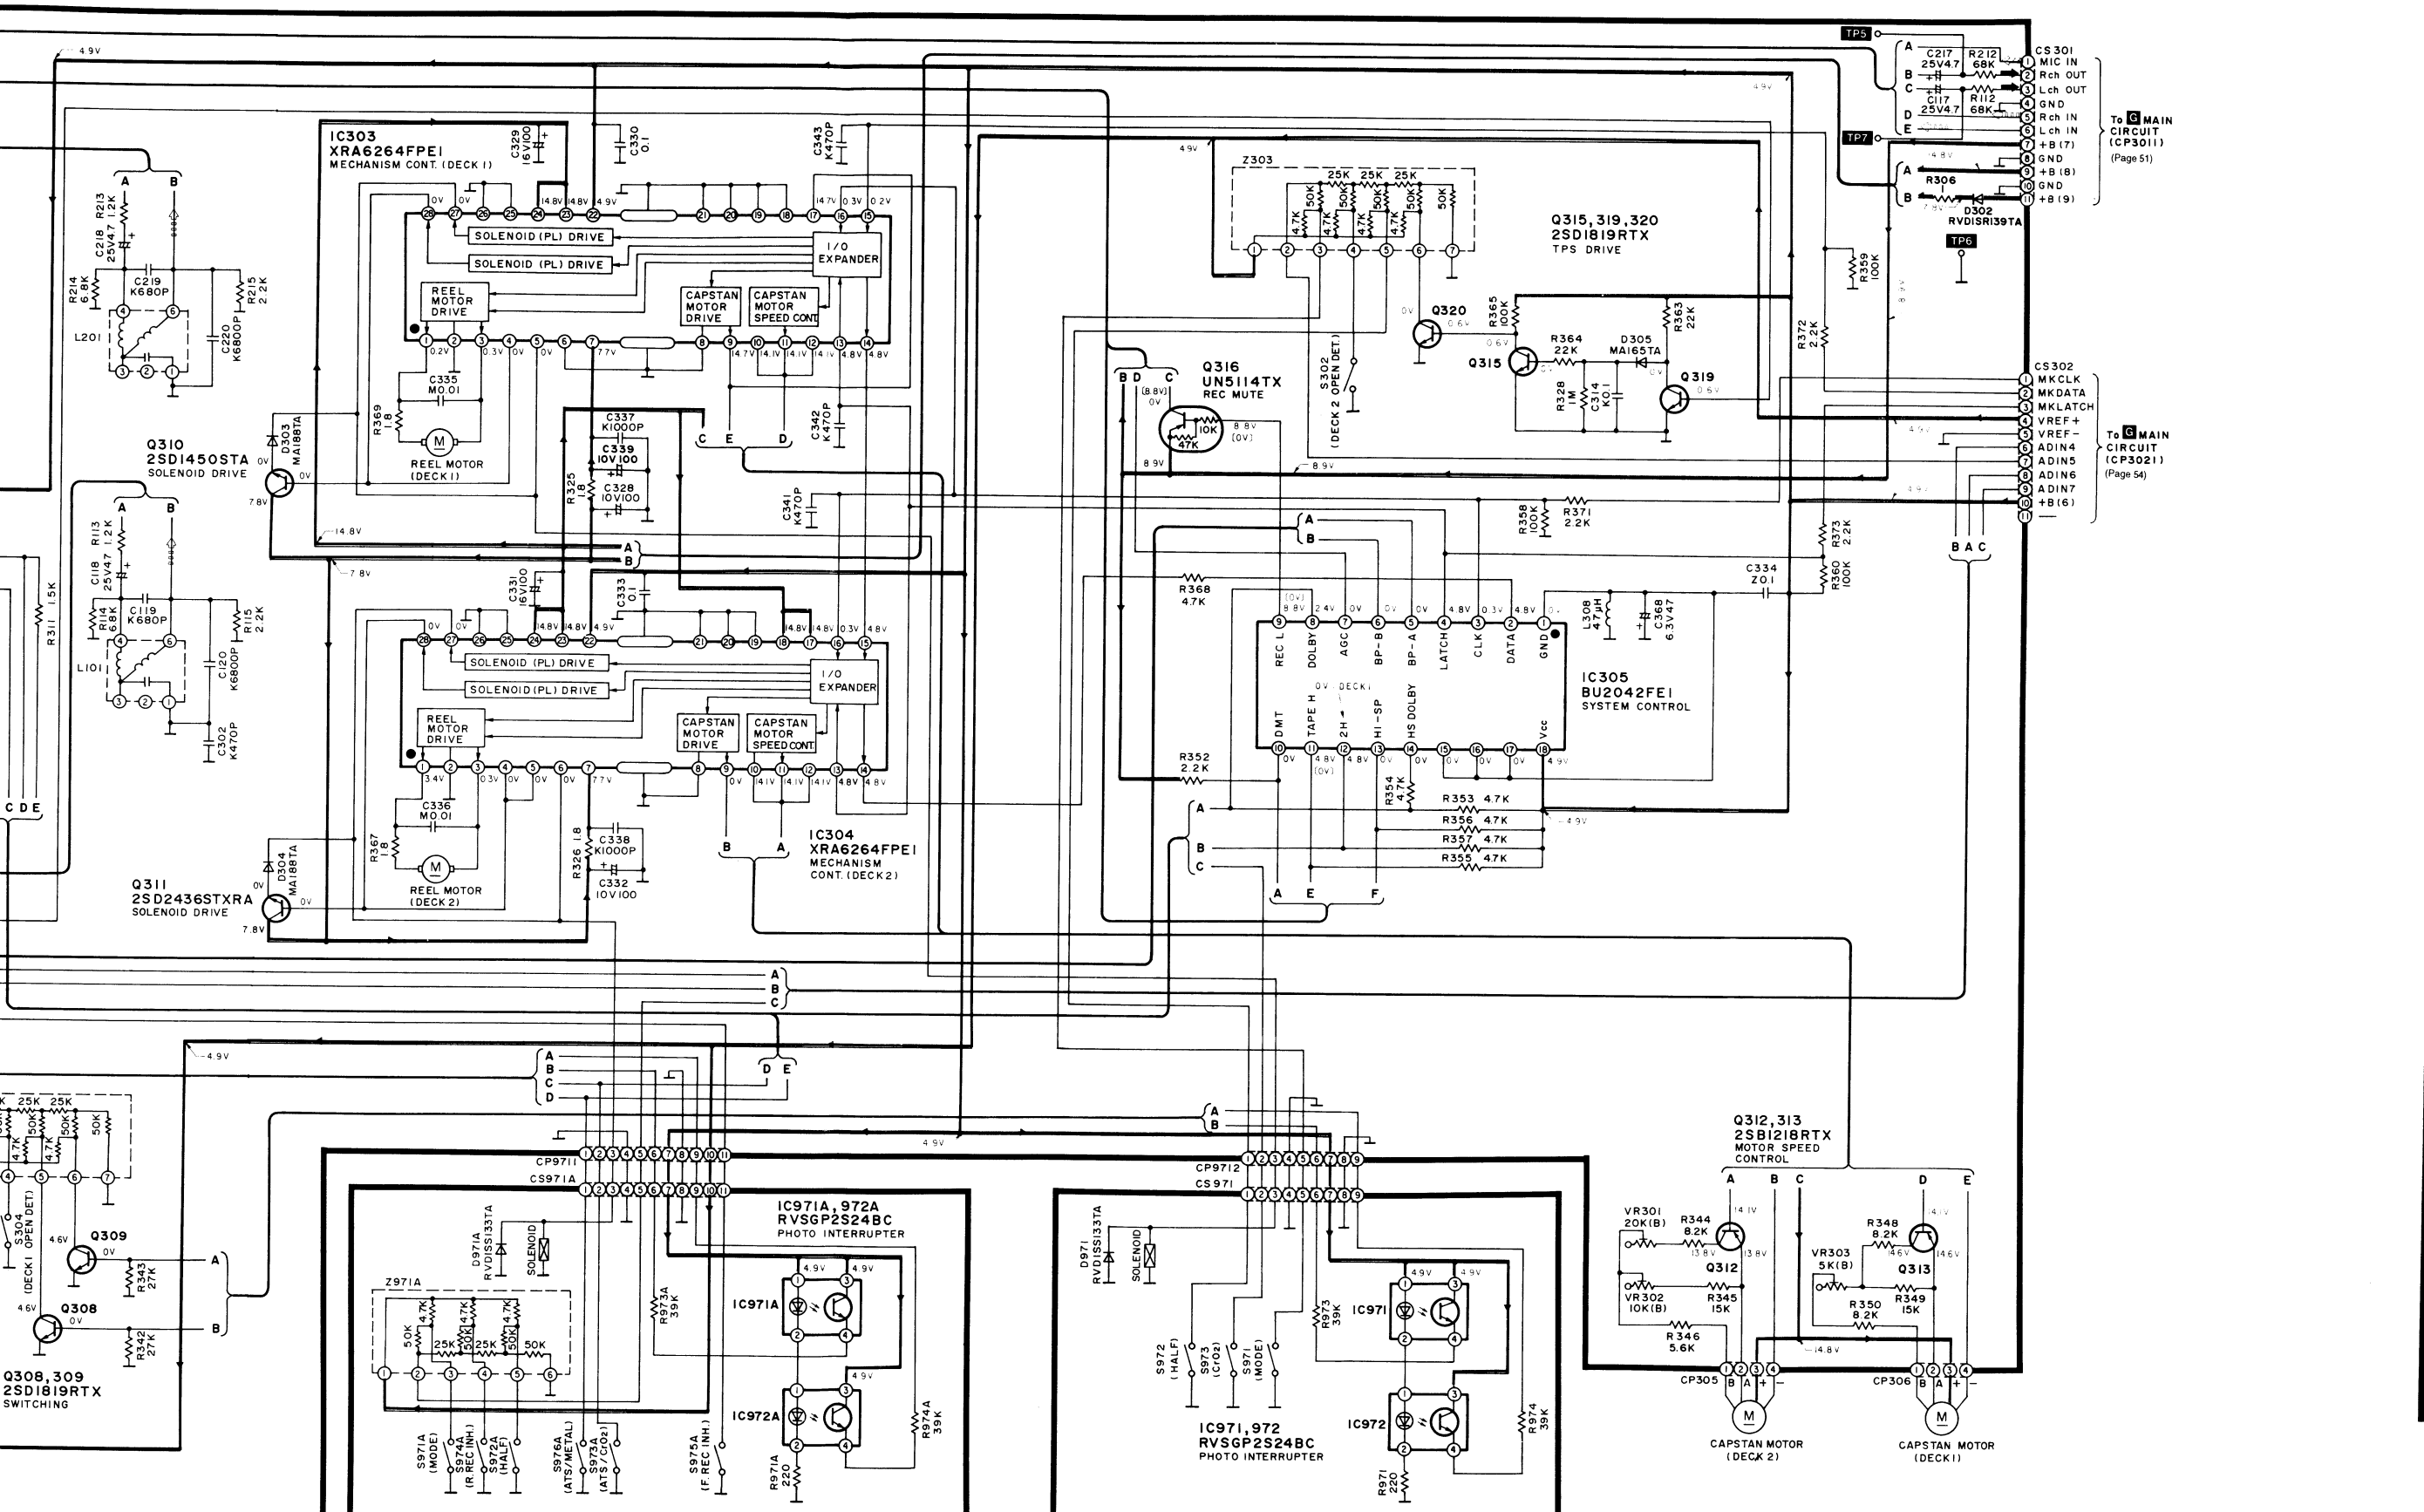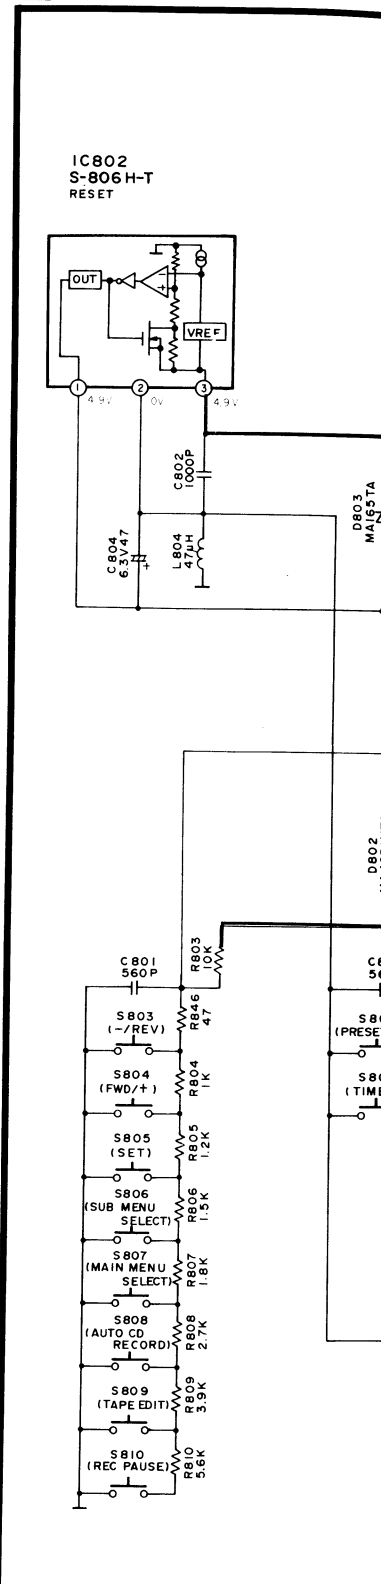


D MECHANISM (DECK2) CIRCUIT

E MECHANISM (DECK1) CIRCUIT

Schematic Diagram • Main circuit, power supply circuit (Parts list on pages 107~114)

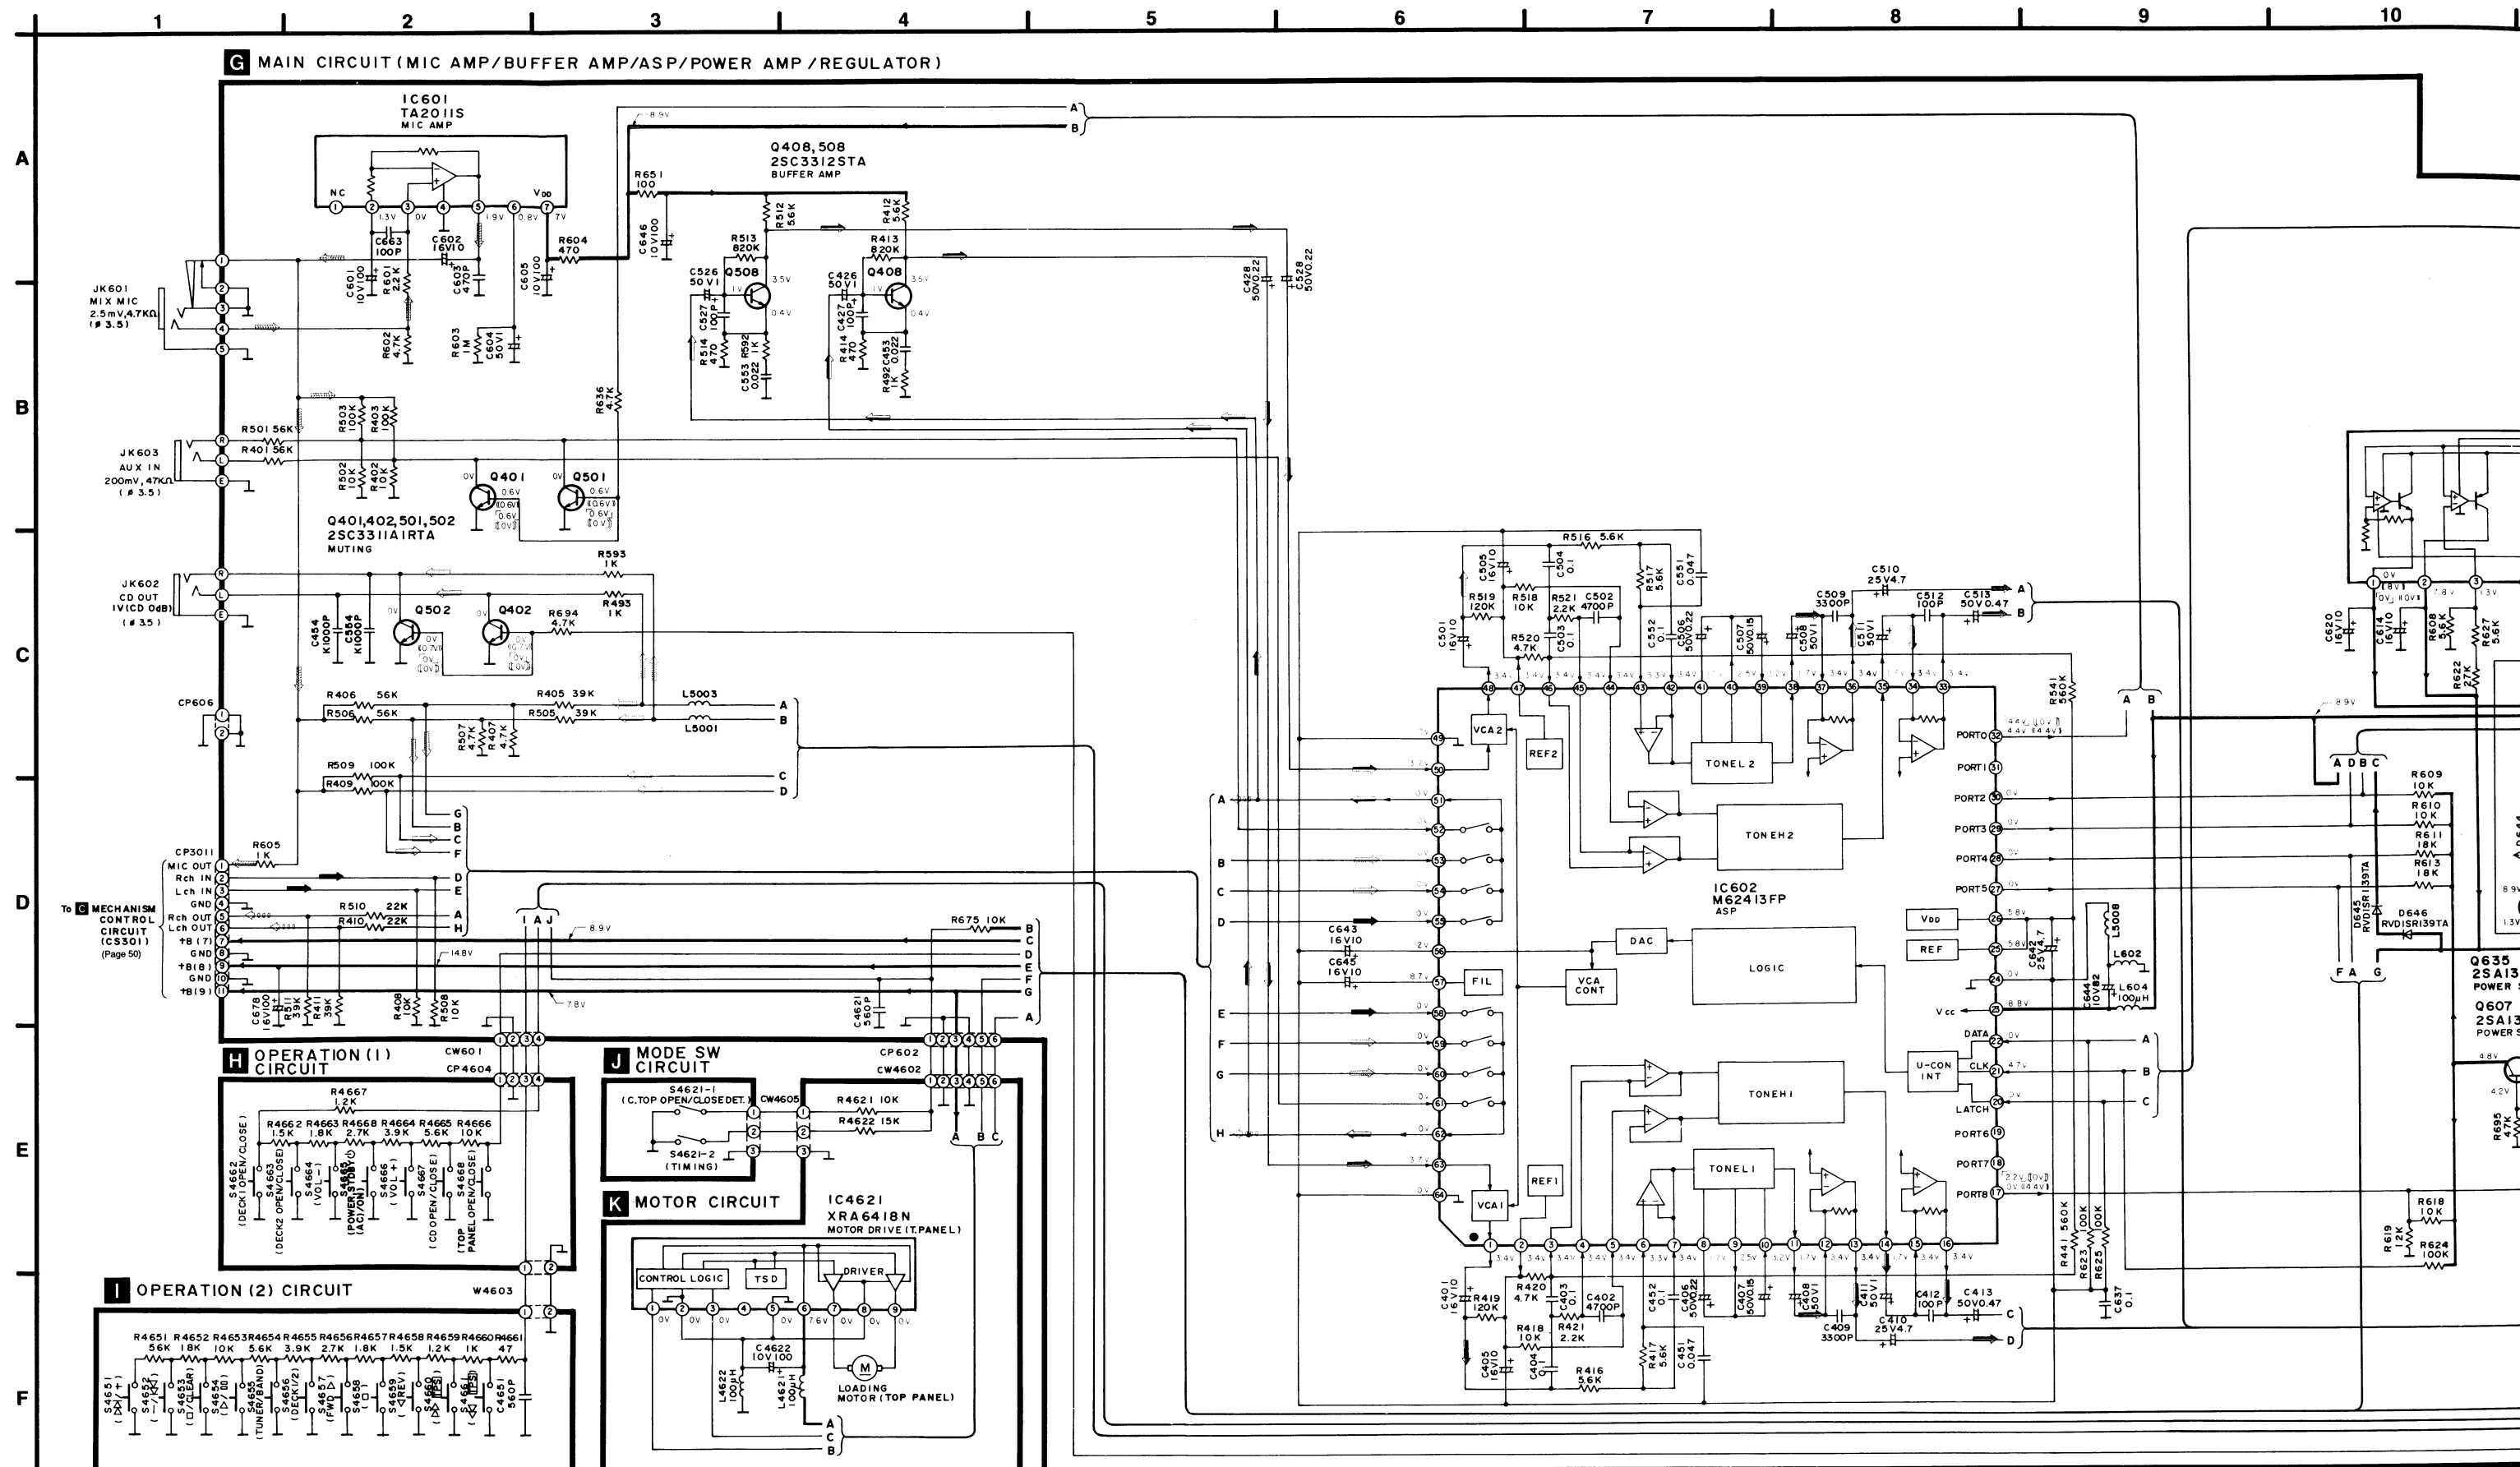

8 9 10 11 12 13 14 15 16 17

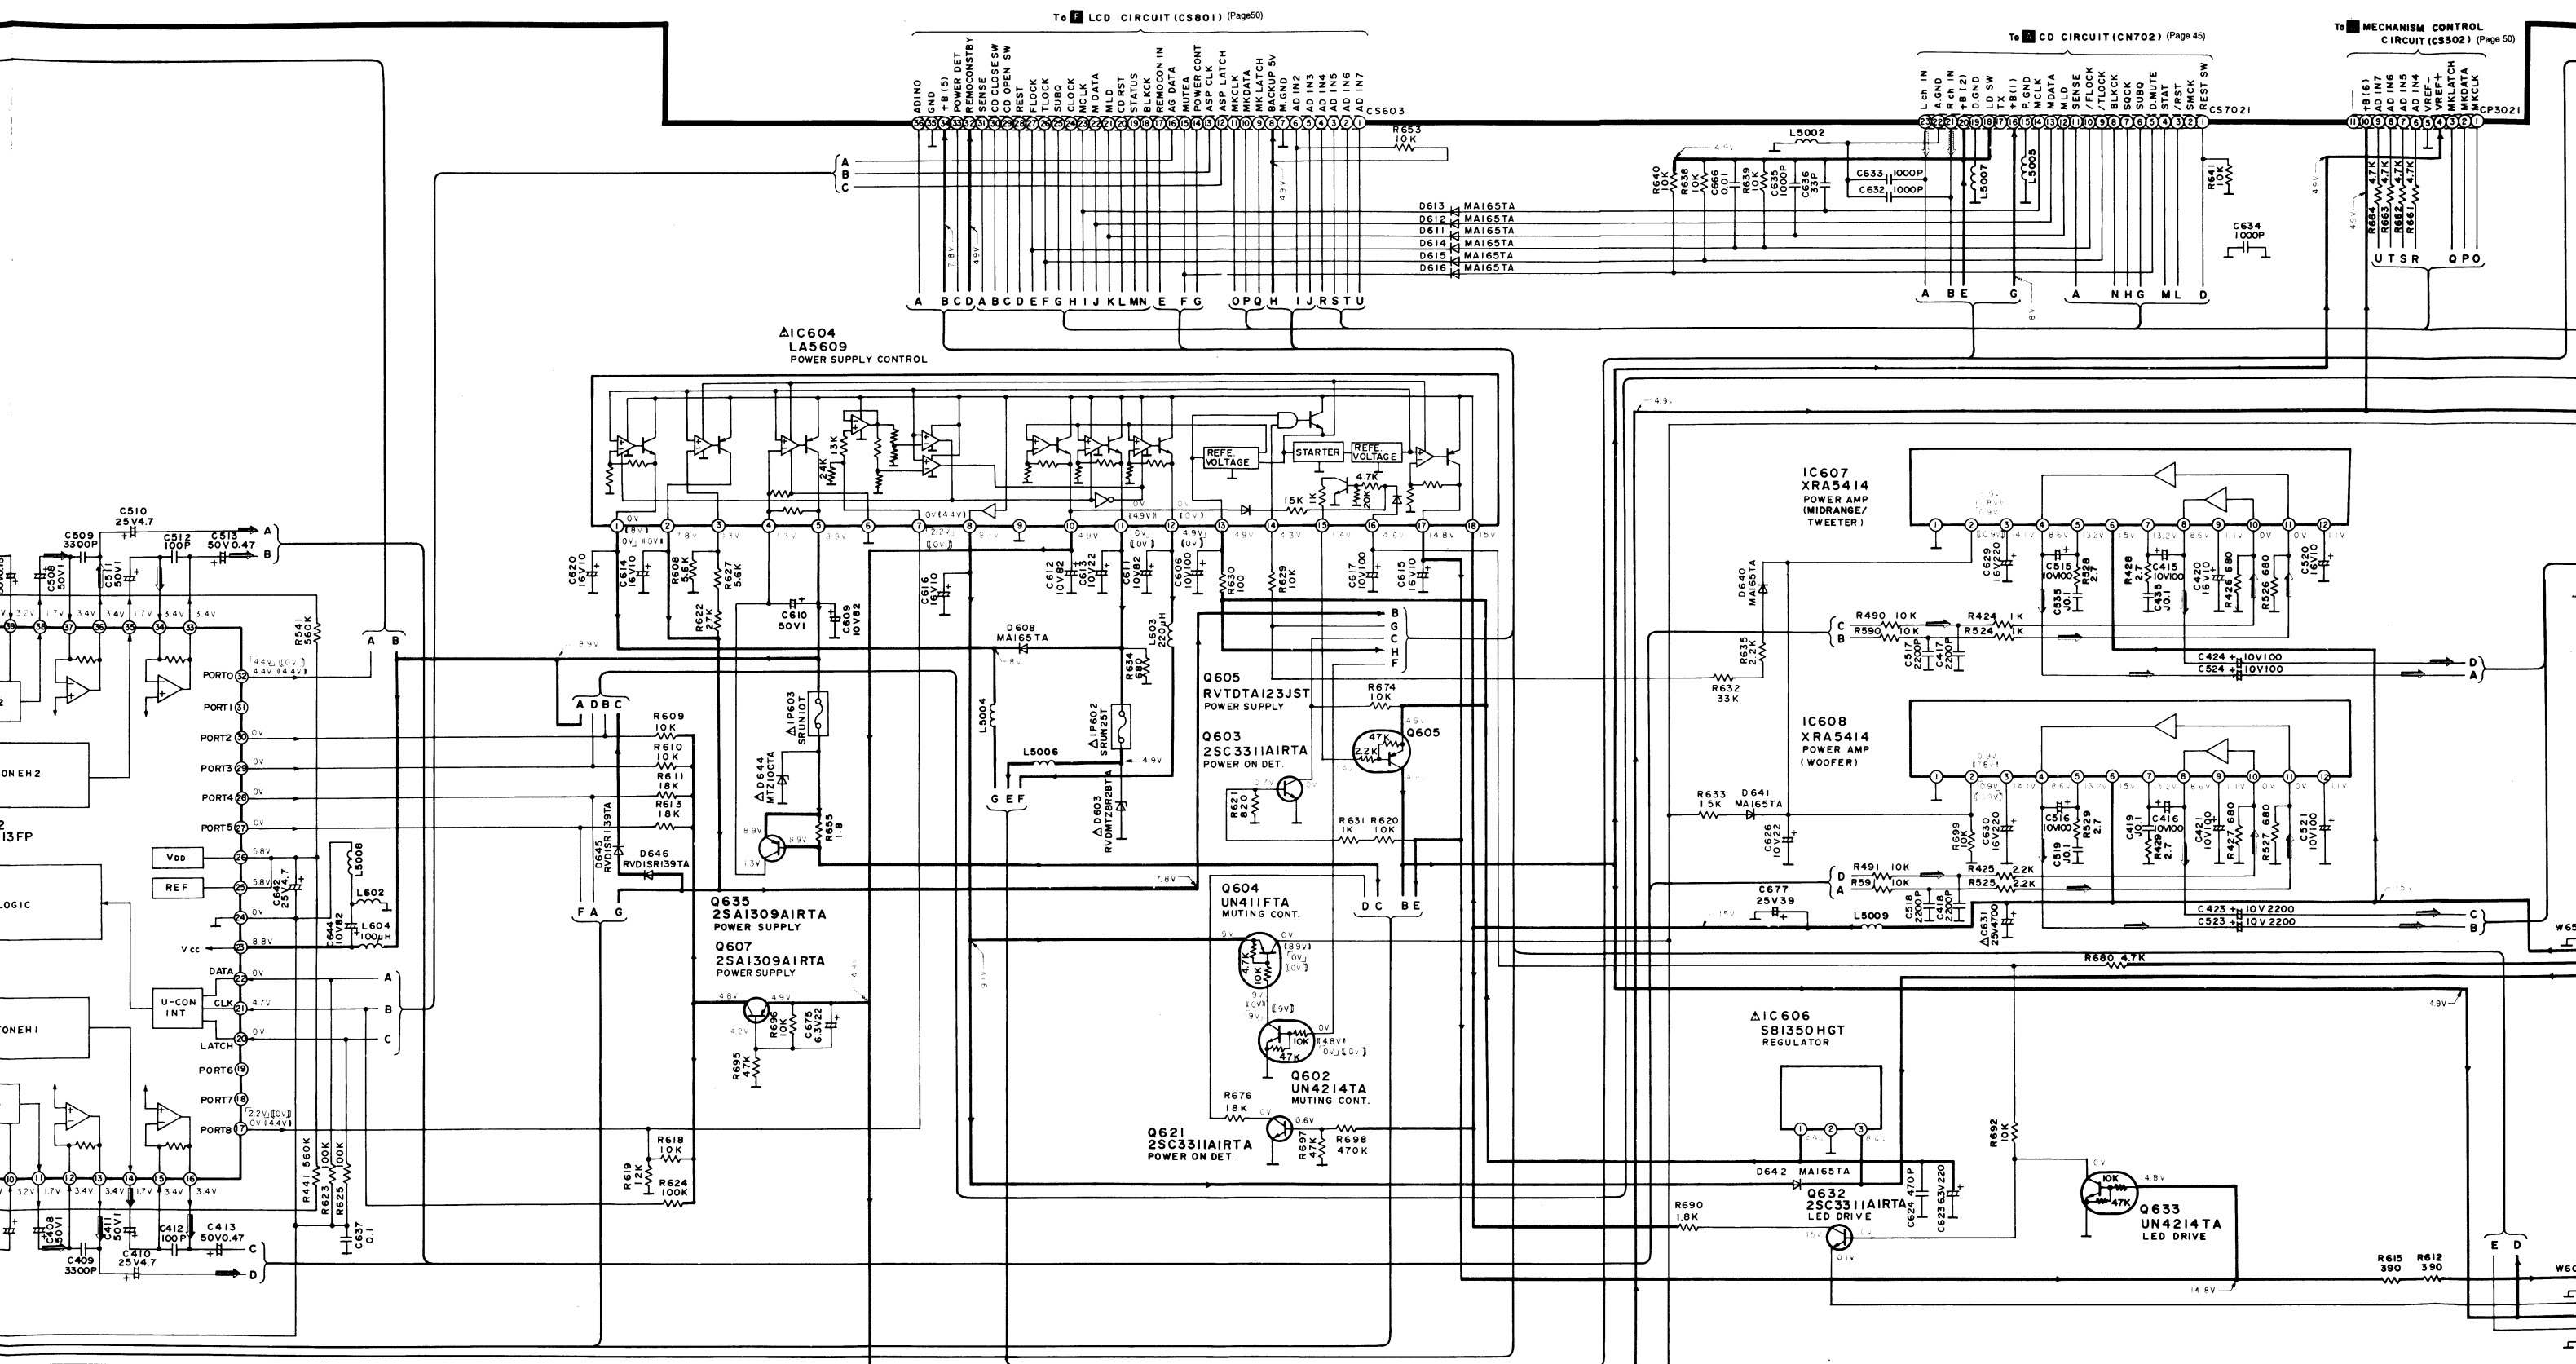


12 13 14 15 16 17 18 19 20 21 22

D CIRCUIT (CS801) (Page 50)

To CD CIRCUIT (CN702) (Page 45)

To MECHANISM CONTROL CIRCUIT (CS302) (Page 50)

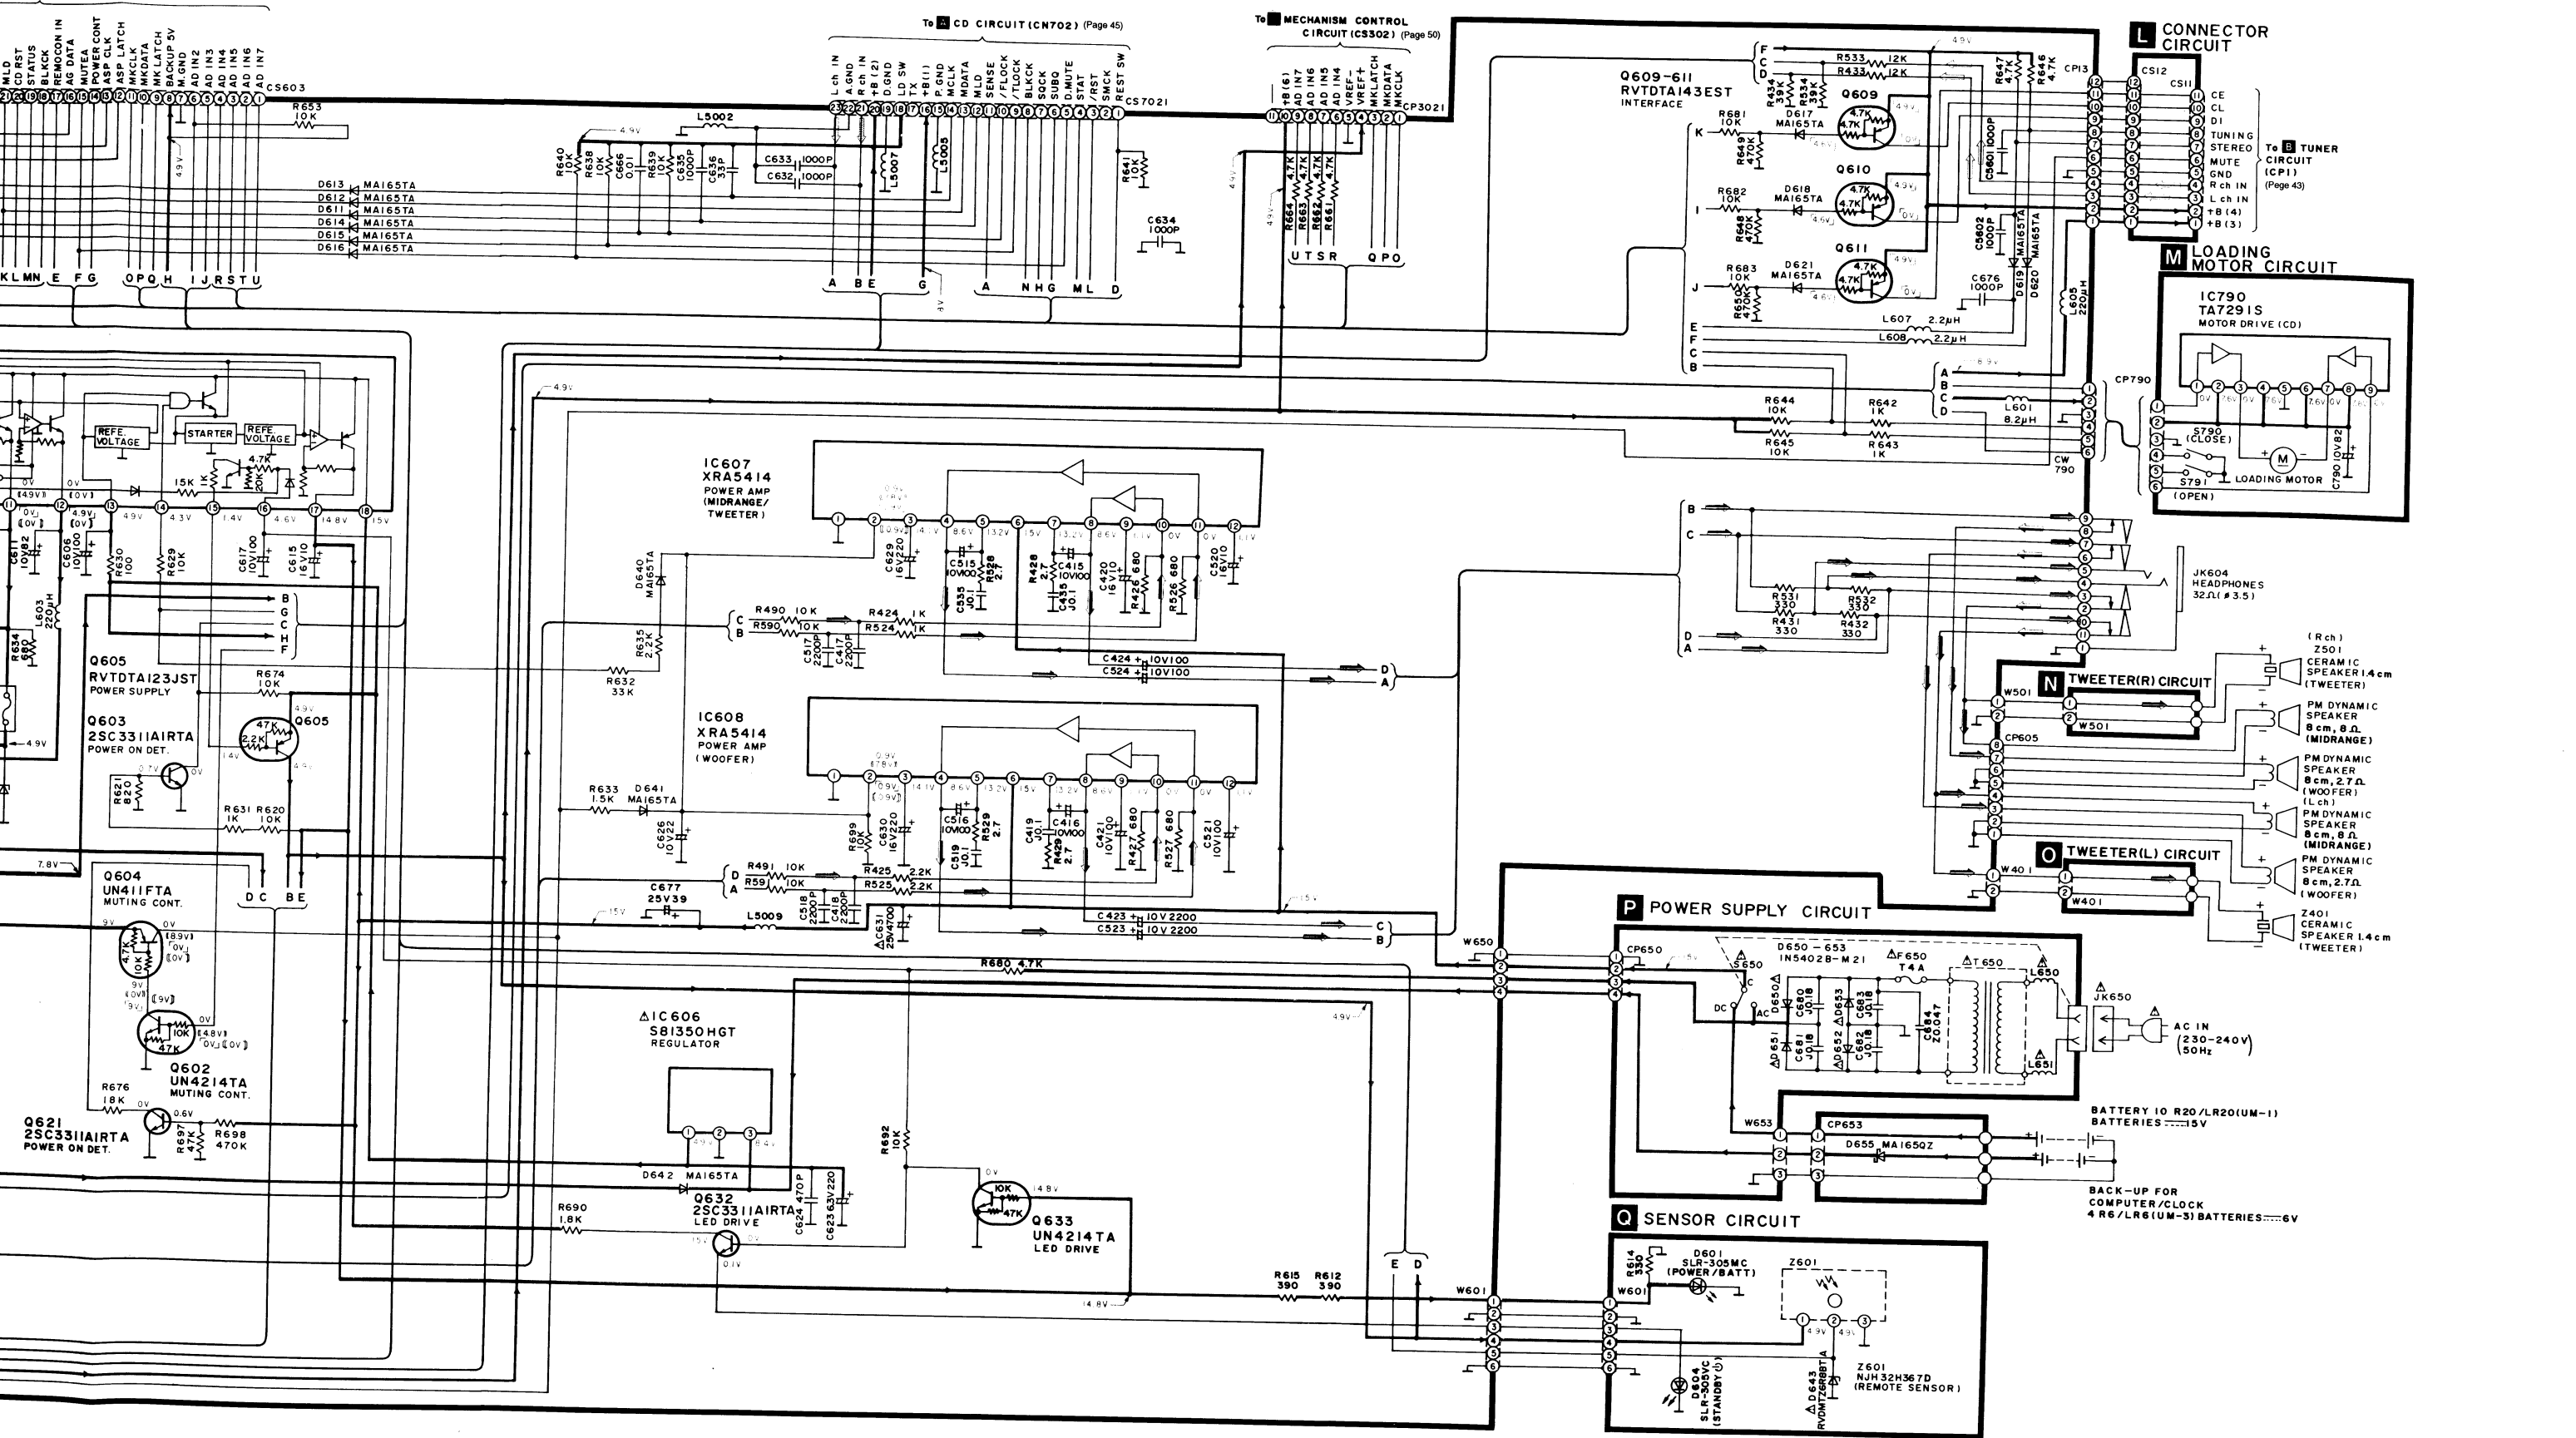

Printed Circuit Board Diagram

Notes:

<Main circuit>

- S650 : AC/DC select switch
- S790 : Disc tray close detect switch
- S791 : Disc tray open detect switch
- S4621 : S4621-1; Top panel open/close detect switch
S4621-2; Top panel timing switch
- S4651 : Tuning/CD skip switch (TUNING/CD >>>/+)
- S4652 : Tuning/CD skip switch (TUNING/CD <<</-)
- S4653 : CD stop/clear switch (□/ CLEAR)
- S4654 : CD play/pause switch (▷ / ◻◻)
- S4655 : Tuner/band select switch (TUNER/BAND)
- S4656 : Deck1/2 select switch (DECK1/2)
- S4657 : Tape forward-side playback switch (FWD ▷)
- S4658 : Tape stop switch (□)
- S4659 : Tape reverse-side playback switch (◁ REV)
- S4660 : Tape FF/TPS switch (◁◁ [TPS] ▷▷)
- S4661 : Tape REW/TPS switch (◁◁ [TPS])
- S4662 : DECK1 cassette cover open/close switch (DECK1 OPEN/CLOSE)
- S4663 : DECK2 cassette cover open/close switch (DECK2 OPEN/CLOSE)
- S4664 : Volume down switch (VOL -)
- S4665 : Power switch (POWER, STDBY/ON)
- S4666 : Volume up switch (VOL +)
- S4667 : CD tray open/close switch (CD OPEN/CLOSE)
- S4668 : Top panel open/close switch (TOP PANEL OPEN/CLOSE)
- VR601 : Top panel open sensitivity adjustment VR

<General>

DC voltage measurements are taken with electronics voltmeter.
The negative terminal of the battery provides negative meter connection point.

No mark...TAPE PLAYBACK (DECK2) ...TUNER ...CD
[[]]...AUX

Battery current:

Vol. min...305 mA (FM)	Vol. min...1600 mA (FM)
290 mA (MW/LW)	1380 mA (MW/LW)
475 mA (TAPE)	1790 mA (TAPE)
510 mA (CD)	1840 mA (CD)

Measurement instruction





- (MW/LW: 74 dB/m, 30% Mod.)
- (FM: 60 dB, 30% Mod.)
- (TAPE: 315 Hz, 0 dB)
- (CD: 1 kHz, 0 dB)

Important safety notice

Components identified by Δ mark have special characteristics important for safety.
When replacing any of these components, use only manufacturer's specified parts.


This schematic diagram may be modified at any time with the development of new technology.

- : FM Signal Line
- : Record Signal Line
- ▬→ : Tape Playback Signal Line
- ▨→ : CD Signal Line
- ▧→ : Mic Signal Line
- ▬→ : Main Signal Line
- : +B Line

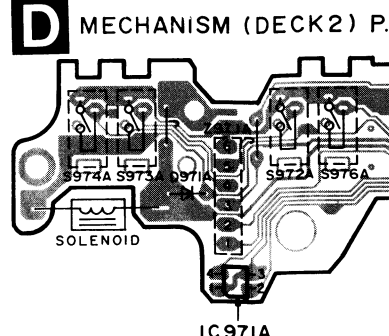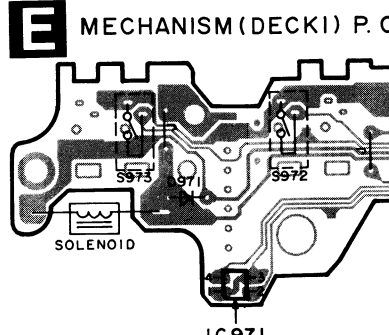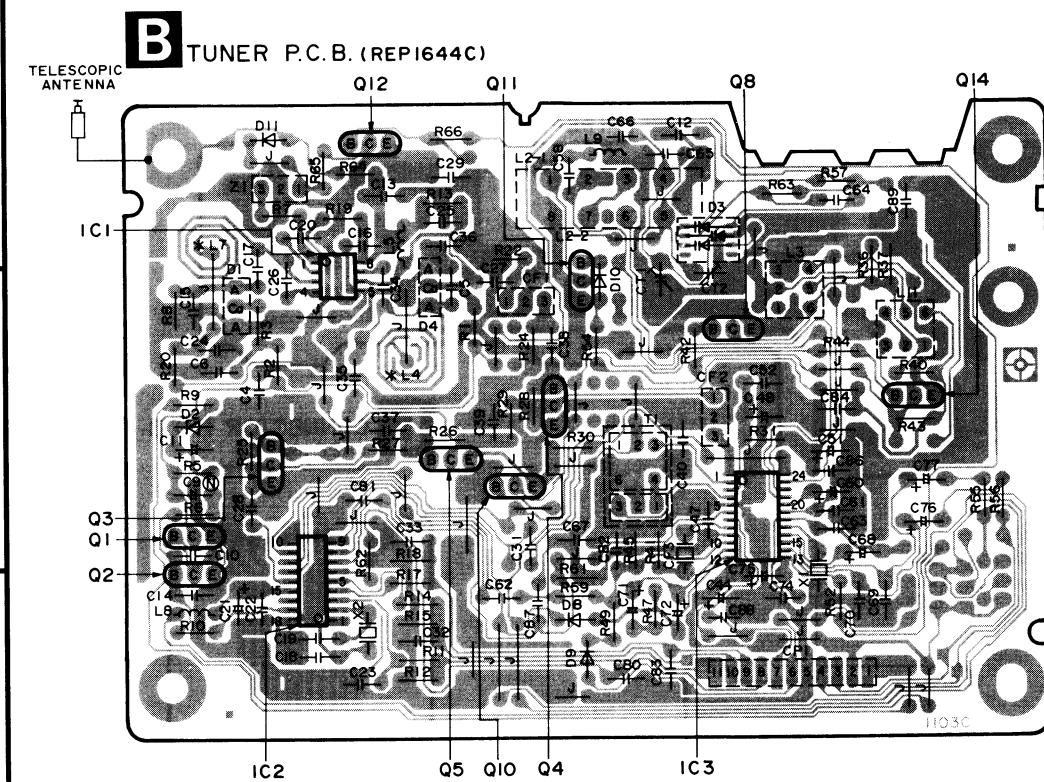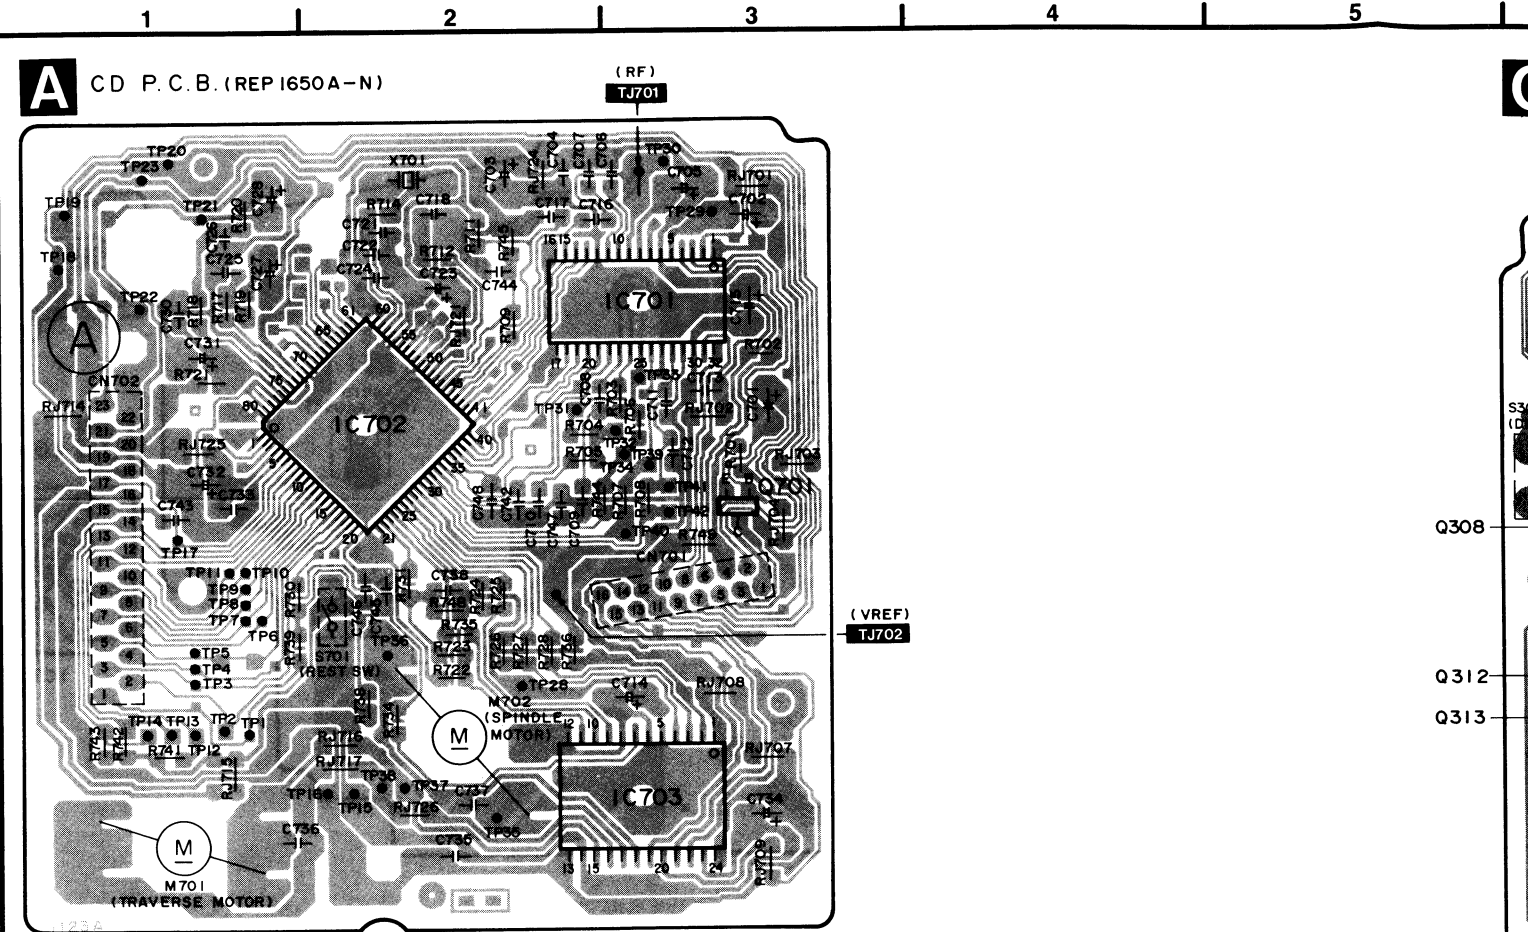


Note:
This circuit board diagram may be modified at any time with the development of new technology.


C MECHANISM CONTROL P.C.B. (REP I687B)

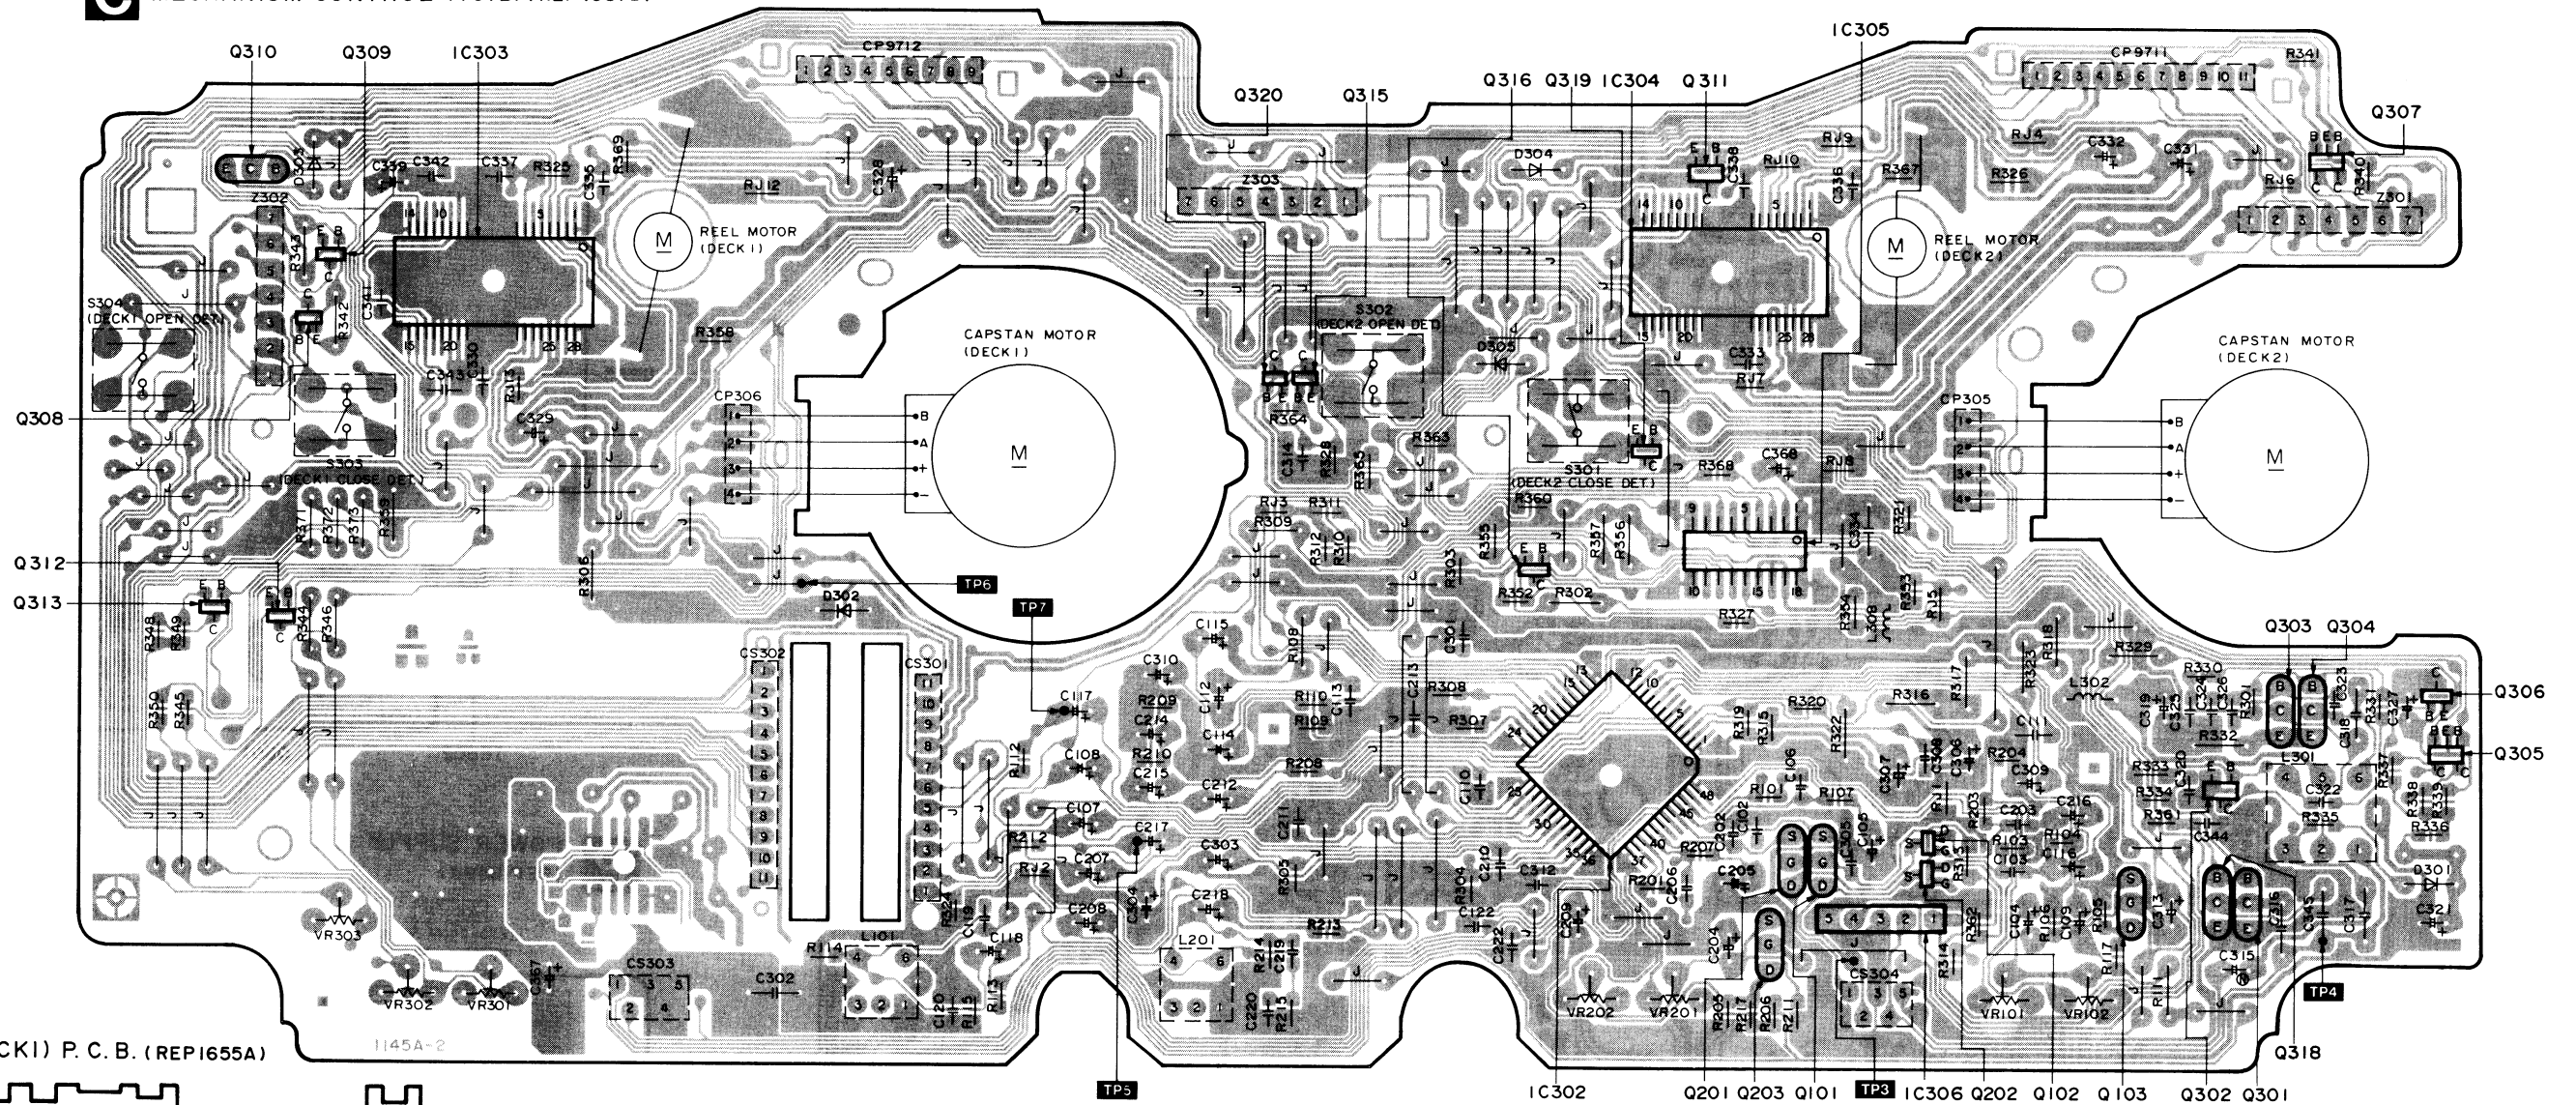


E MECHANISM (DECK1) P.C.B. (REP I655A)

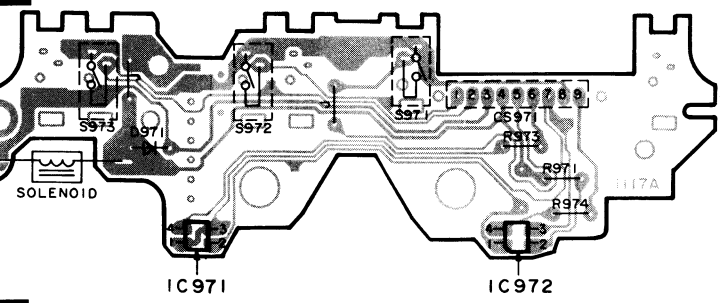


D MECHANISM (DECK2) P.C.B. (REP I656A)

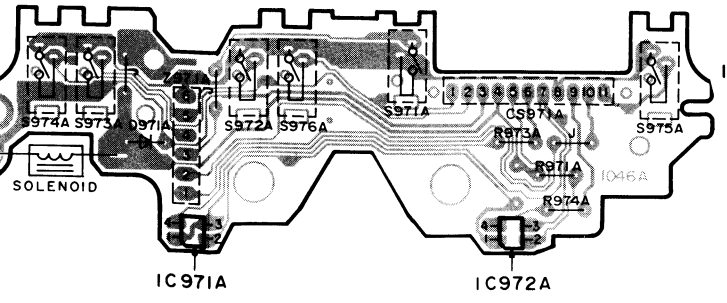


K MOTOR P.C.B. (REP I692A)

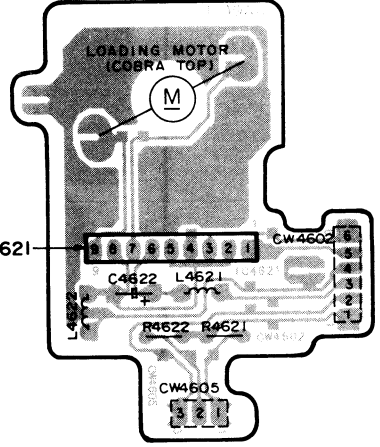


H OPERATION (1) P.C.B. (REP I689C)

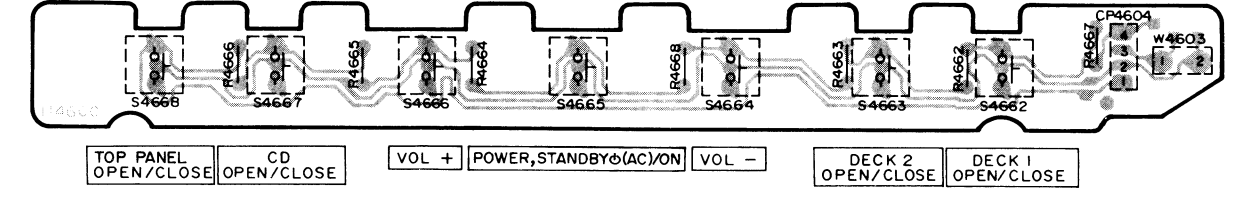


I OPERATION (2) P.C.B. (REP I689C)







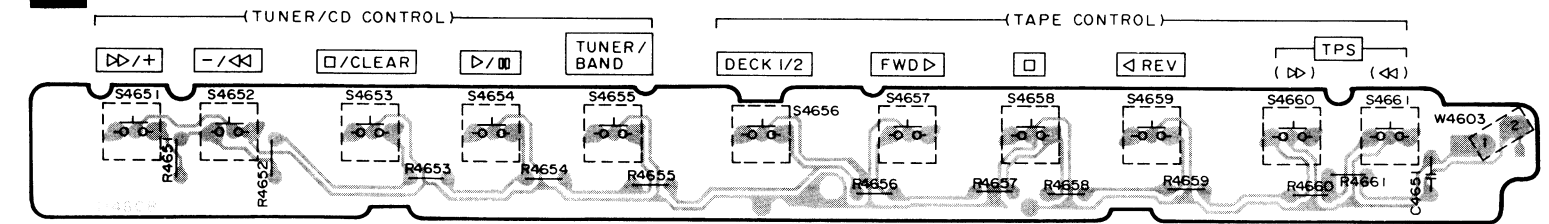


J MODE SW P.C.B. (REP I692A)

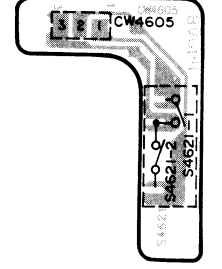

Printed Circuit Board Diagram

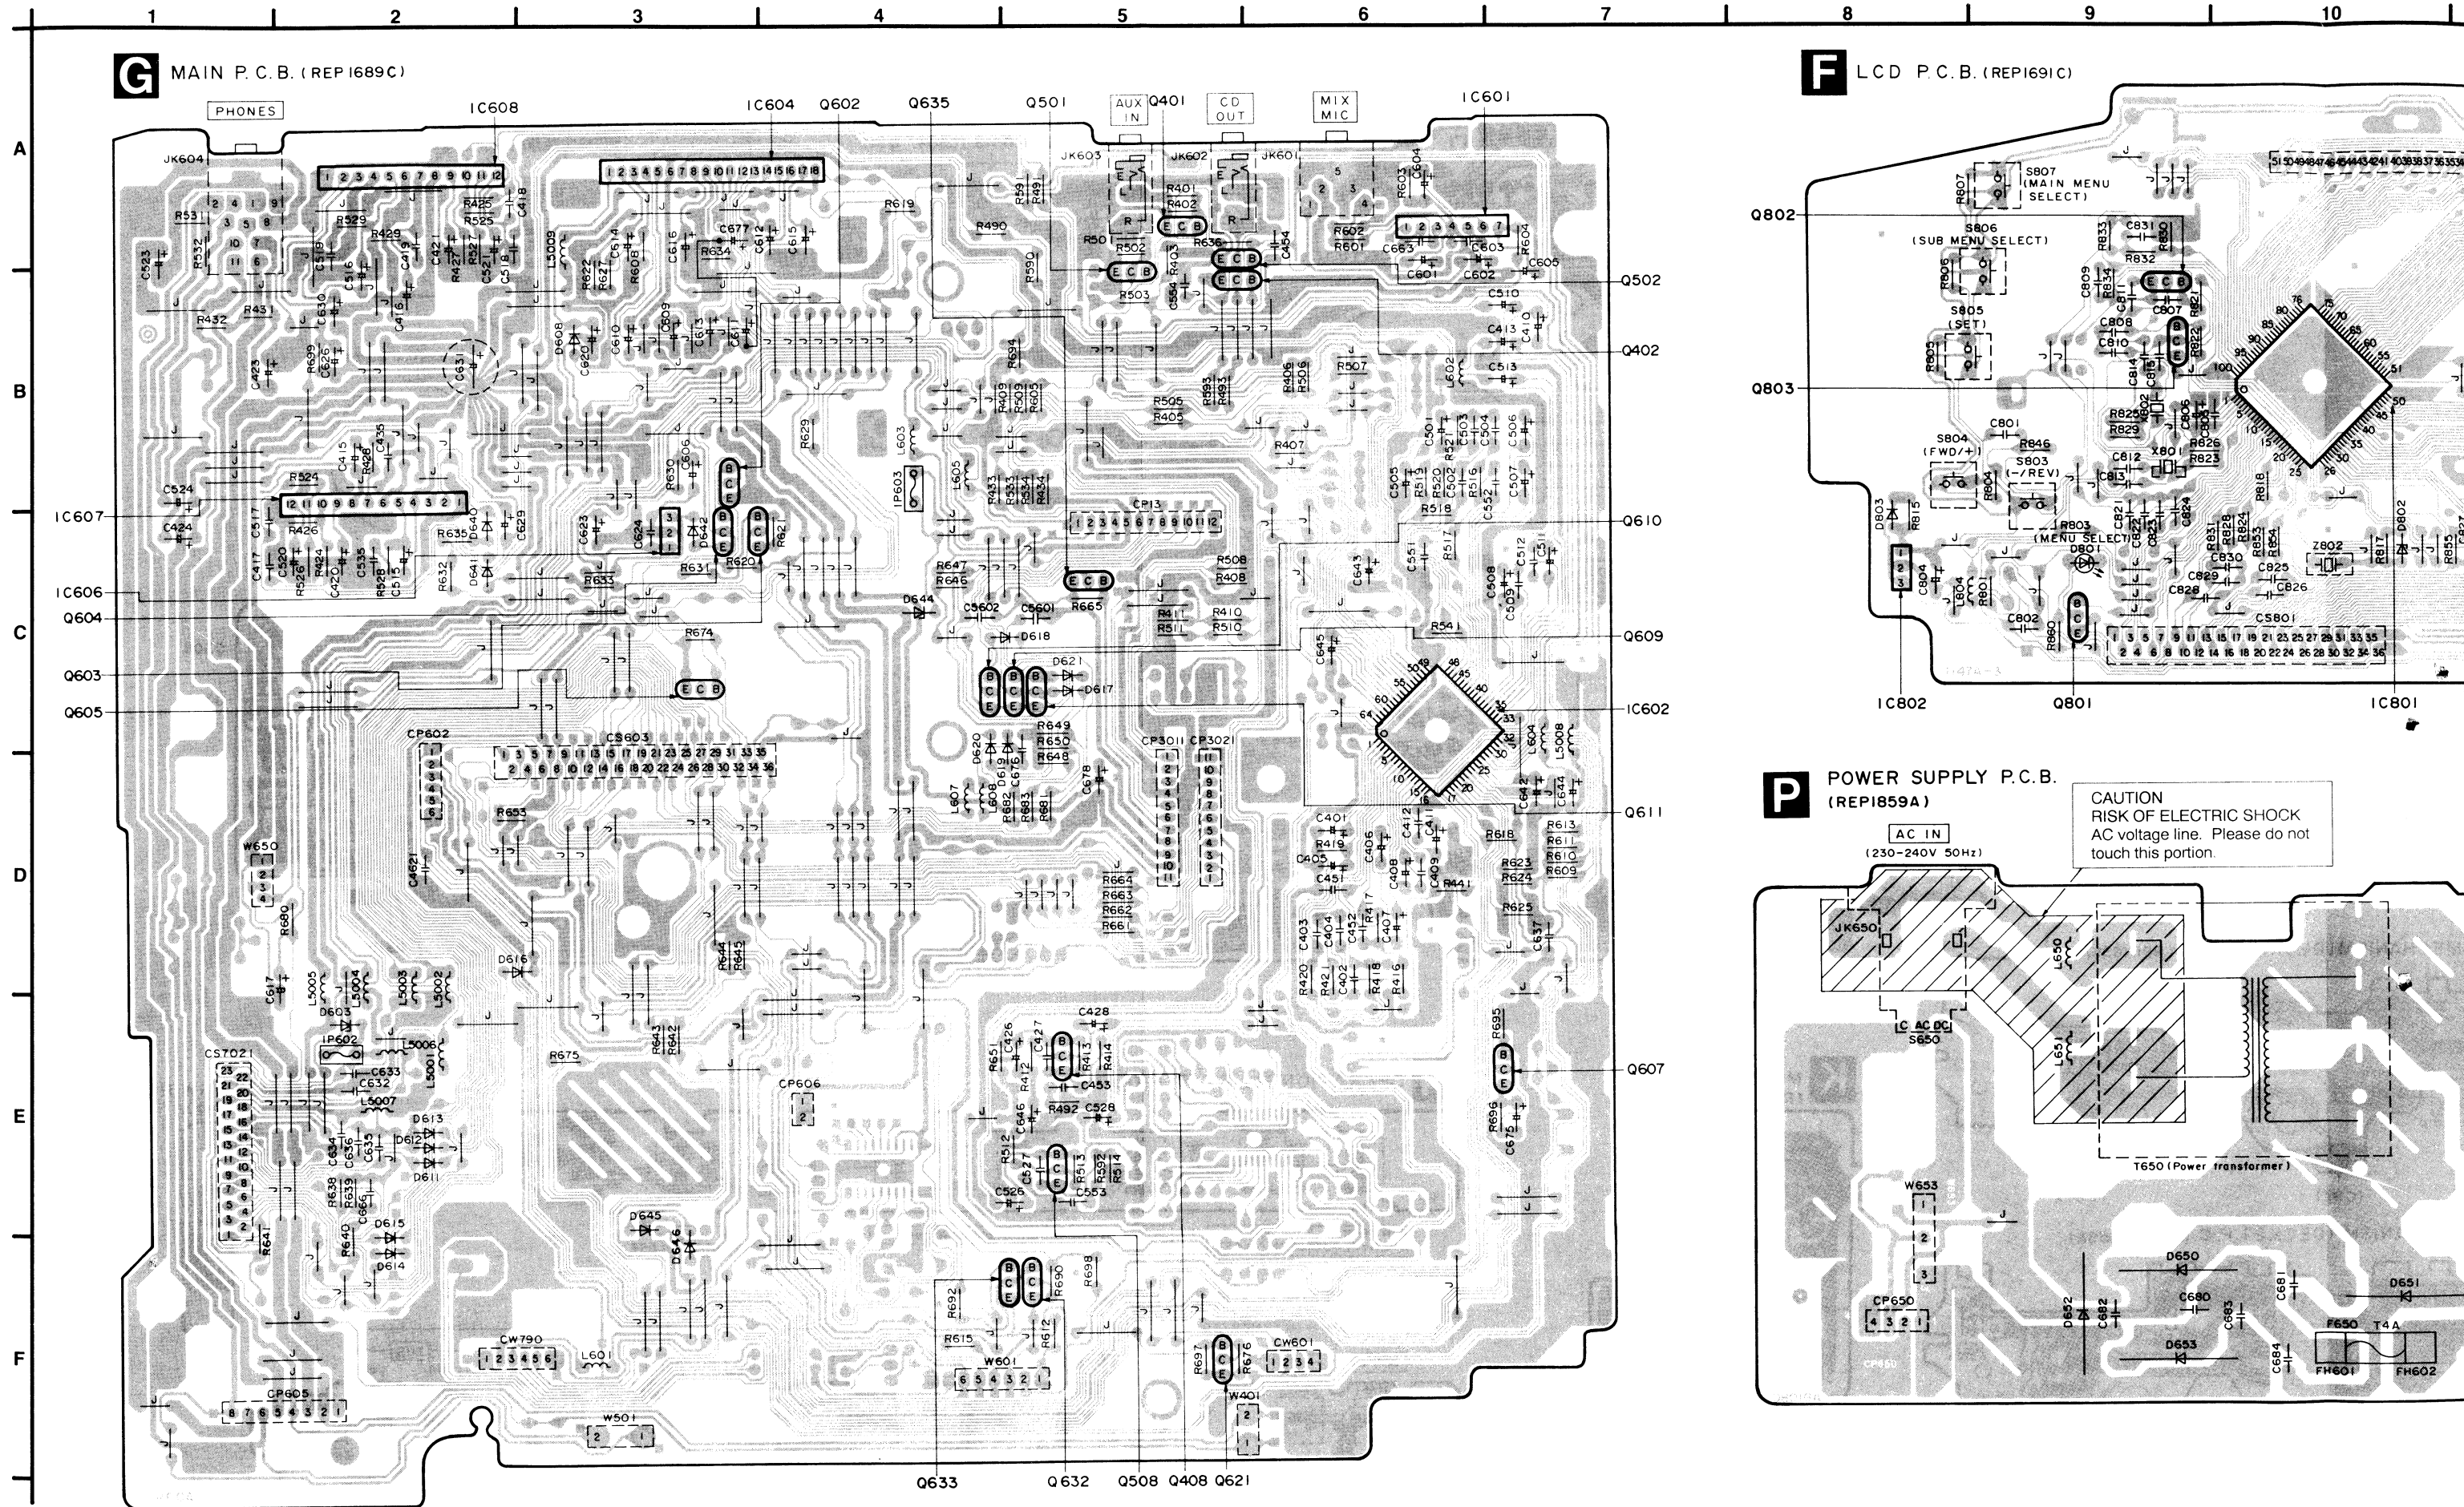


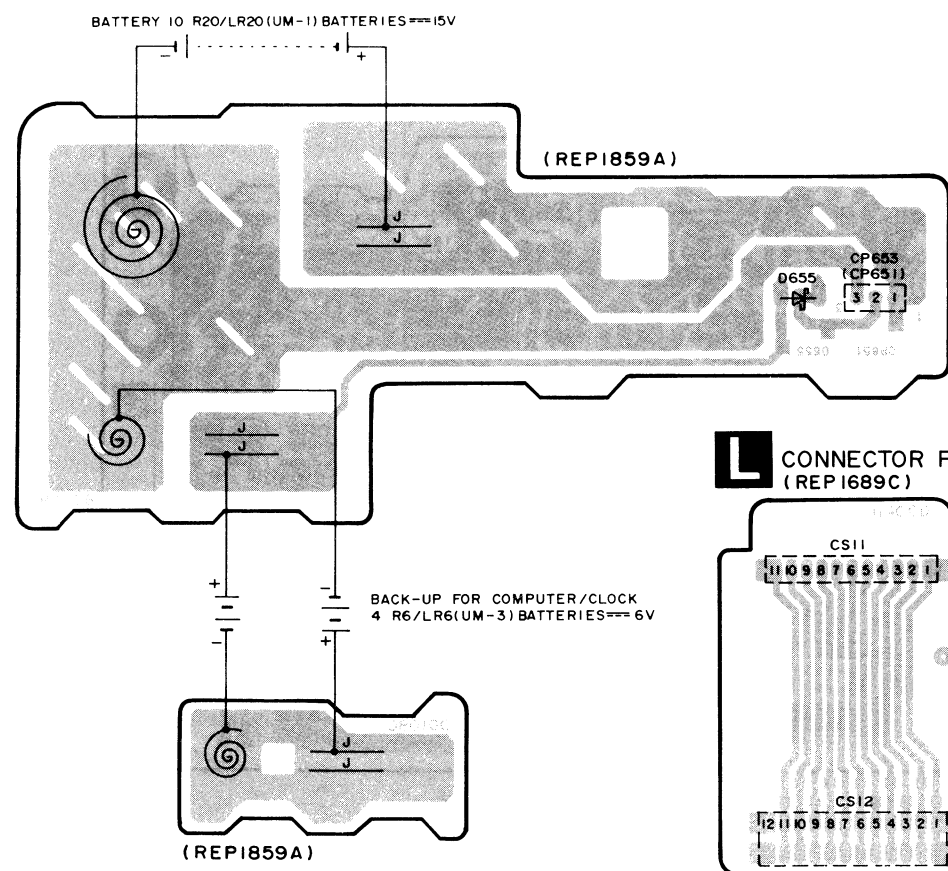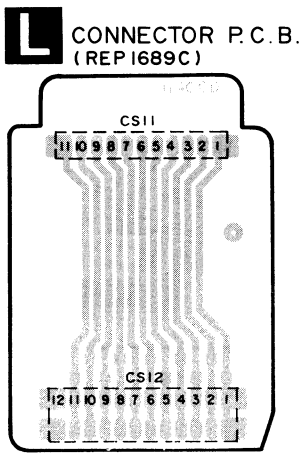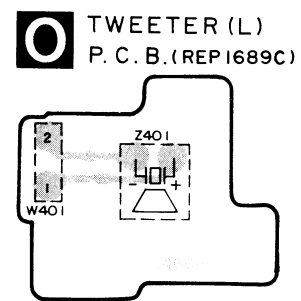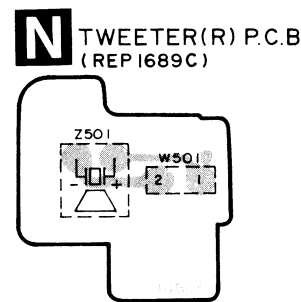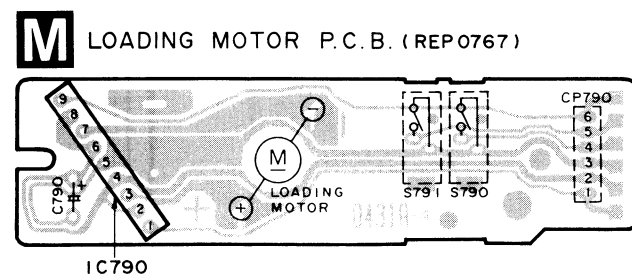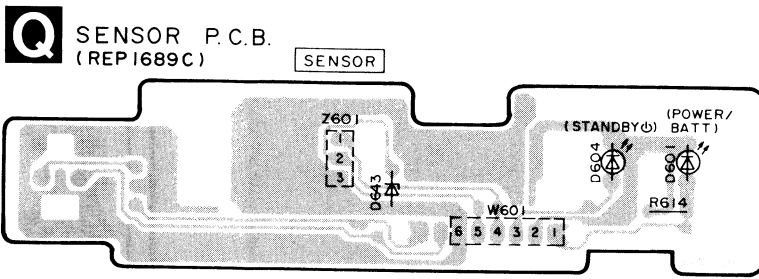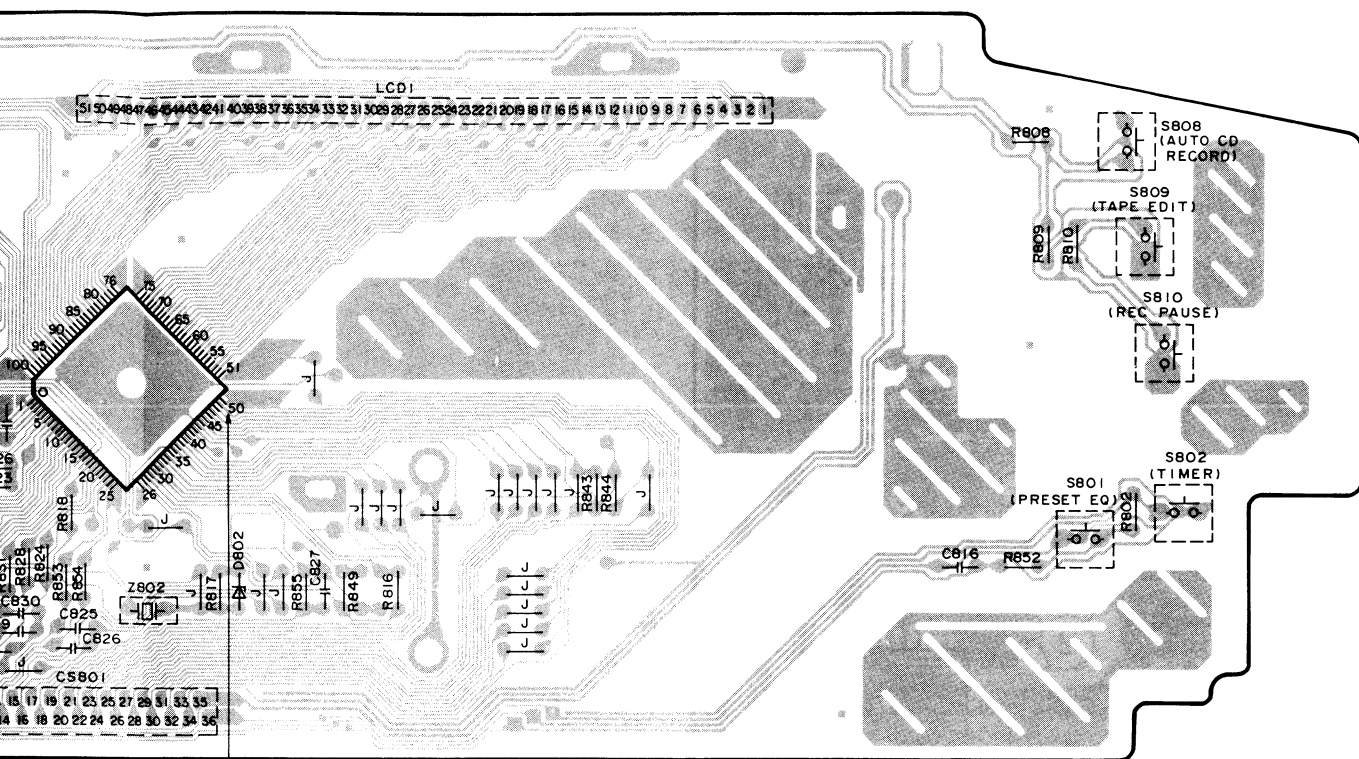


Note:
This circuit board diagram may be modified at any time with the development of new technology.

<table border="1"> <tr><td>TA7358FMATEL</td><td>8Pin</td><td>LA1831MSATEL</td><td>24Pin</td></tr> <tr><td>BU2042FE1</td><td>18Pin</td><td>AN8802SCE1V</td><td>32Pin</td></tr> <tr><td>XLU2616F-E1</td><td>18Pin</td><td></td><td></td></tr> </table>	TA7358FMATEL	8Pin	LA1831MSATEL	24Pin	BU2042FE1	18Pin	AN8802SCE1V	32Pin	XLU2616F-E1	18Pin			AN8389SE1 24 12								
TA7358FMATEL	8Pin	LA1831MSATEL	24Pin																		
BU2042FE1	18Pin	AN8802SCE1V	32Pin																		
XLU2616F-E1	18Pin																				
<table border="1"> <tr><td>CXA1697QT6</td><td>48Pin</td><td>XRA6264FPE1</td><td>28</td></tr> <tr><td>M62413FP</td><td>64Pin</td><td></td><td>15</td></tr> <tr><td>MN66271RA</td><td>80Pin</td><td></td><td>14</td></tr> <tr><td>MND3210REAN</td><td>100Pin</td><td></td><td></td></tr> </table>	CXA1697QT6	48Pin	XRA6264FPE1	28	M62413FP	64Pin		15	MN66271RA	80Pin		14	MND3210REAN	100Pin			<table border="1"> <tr><td>TA2011S</td><td>7Pin</td></tr> <tr><td>TA7291S</td><td>9Pin</td></tr> </table>	TA2011S	7Pin	TA7291S	9Pin
CXA1697QT6	48Pin	XRA6264FPE1	28																		
M62413FP	64Pin		15																		
MN66271RA	80Pin		14																		
MND3210REAN	100Pin																				
TA2011S	7Pin																				
TA7291S	9Pin																				
XRA5414 12	LA5609 18	XRA6418N 9	S-806H-T S81350HG 3 2 1																		
BA7755A 5	E C B	2SA1309AIRTA 2SC2786LTA 2SC3311AIRTA 2SC3311R 2SC3312S 2SC3313B	2SD1450RTA UN411FTA 2SD1450STA UN4214TA																		
RVSGP2S24BC Ca C E A A E C Ca	RVTDTA123JST RVTDTA143EST 2SC2389SSTA DTC114EST	B C E	UN5114TX 2SB709S 2SB1218RTX 2SD1819RTX 2SD2436STXRA																		
2SJ40CDTA S G D	2SK664TX G S D	XN1210TX XN1501TX B C C E B	MA165 RVD1SR139TA RVD1SS133TA RVD1SS135TA Anode Cathode																		
MA188TA Ca Cathode A Anode	1N5402B-M21 Ca Cathode A Anode	MA165QZ Ca Cathode A Anode	MA4051MTA MA4082MTA Ca Cathode A Anode																		
LN873RPX-TA3 Anode Cathode A Ca	RVDMTZ6R8BTA RVDMTZ8R2BTA MTZ10CTA Ca Cathode A Anode	SLR-305MC SLR-305VC Anode Cathode A Ca	KV1360NT Anode Cathode A Ca																		
			KV1583BMTL Cathode Anode																		

Wiring Connection Diagram

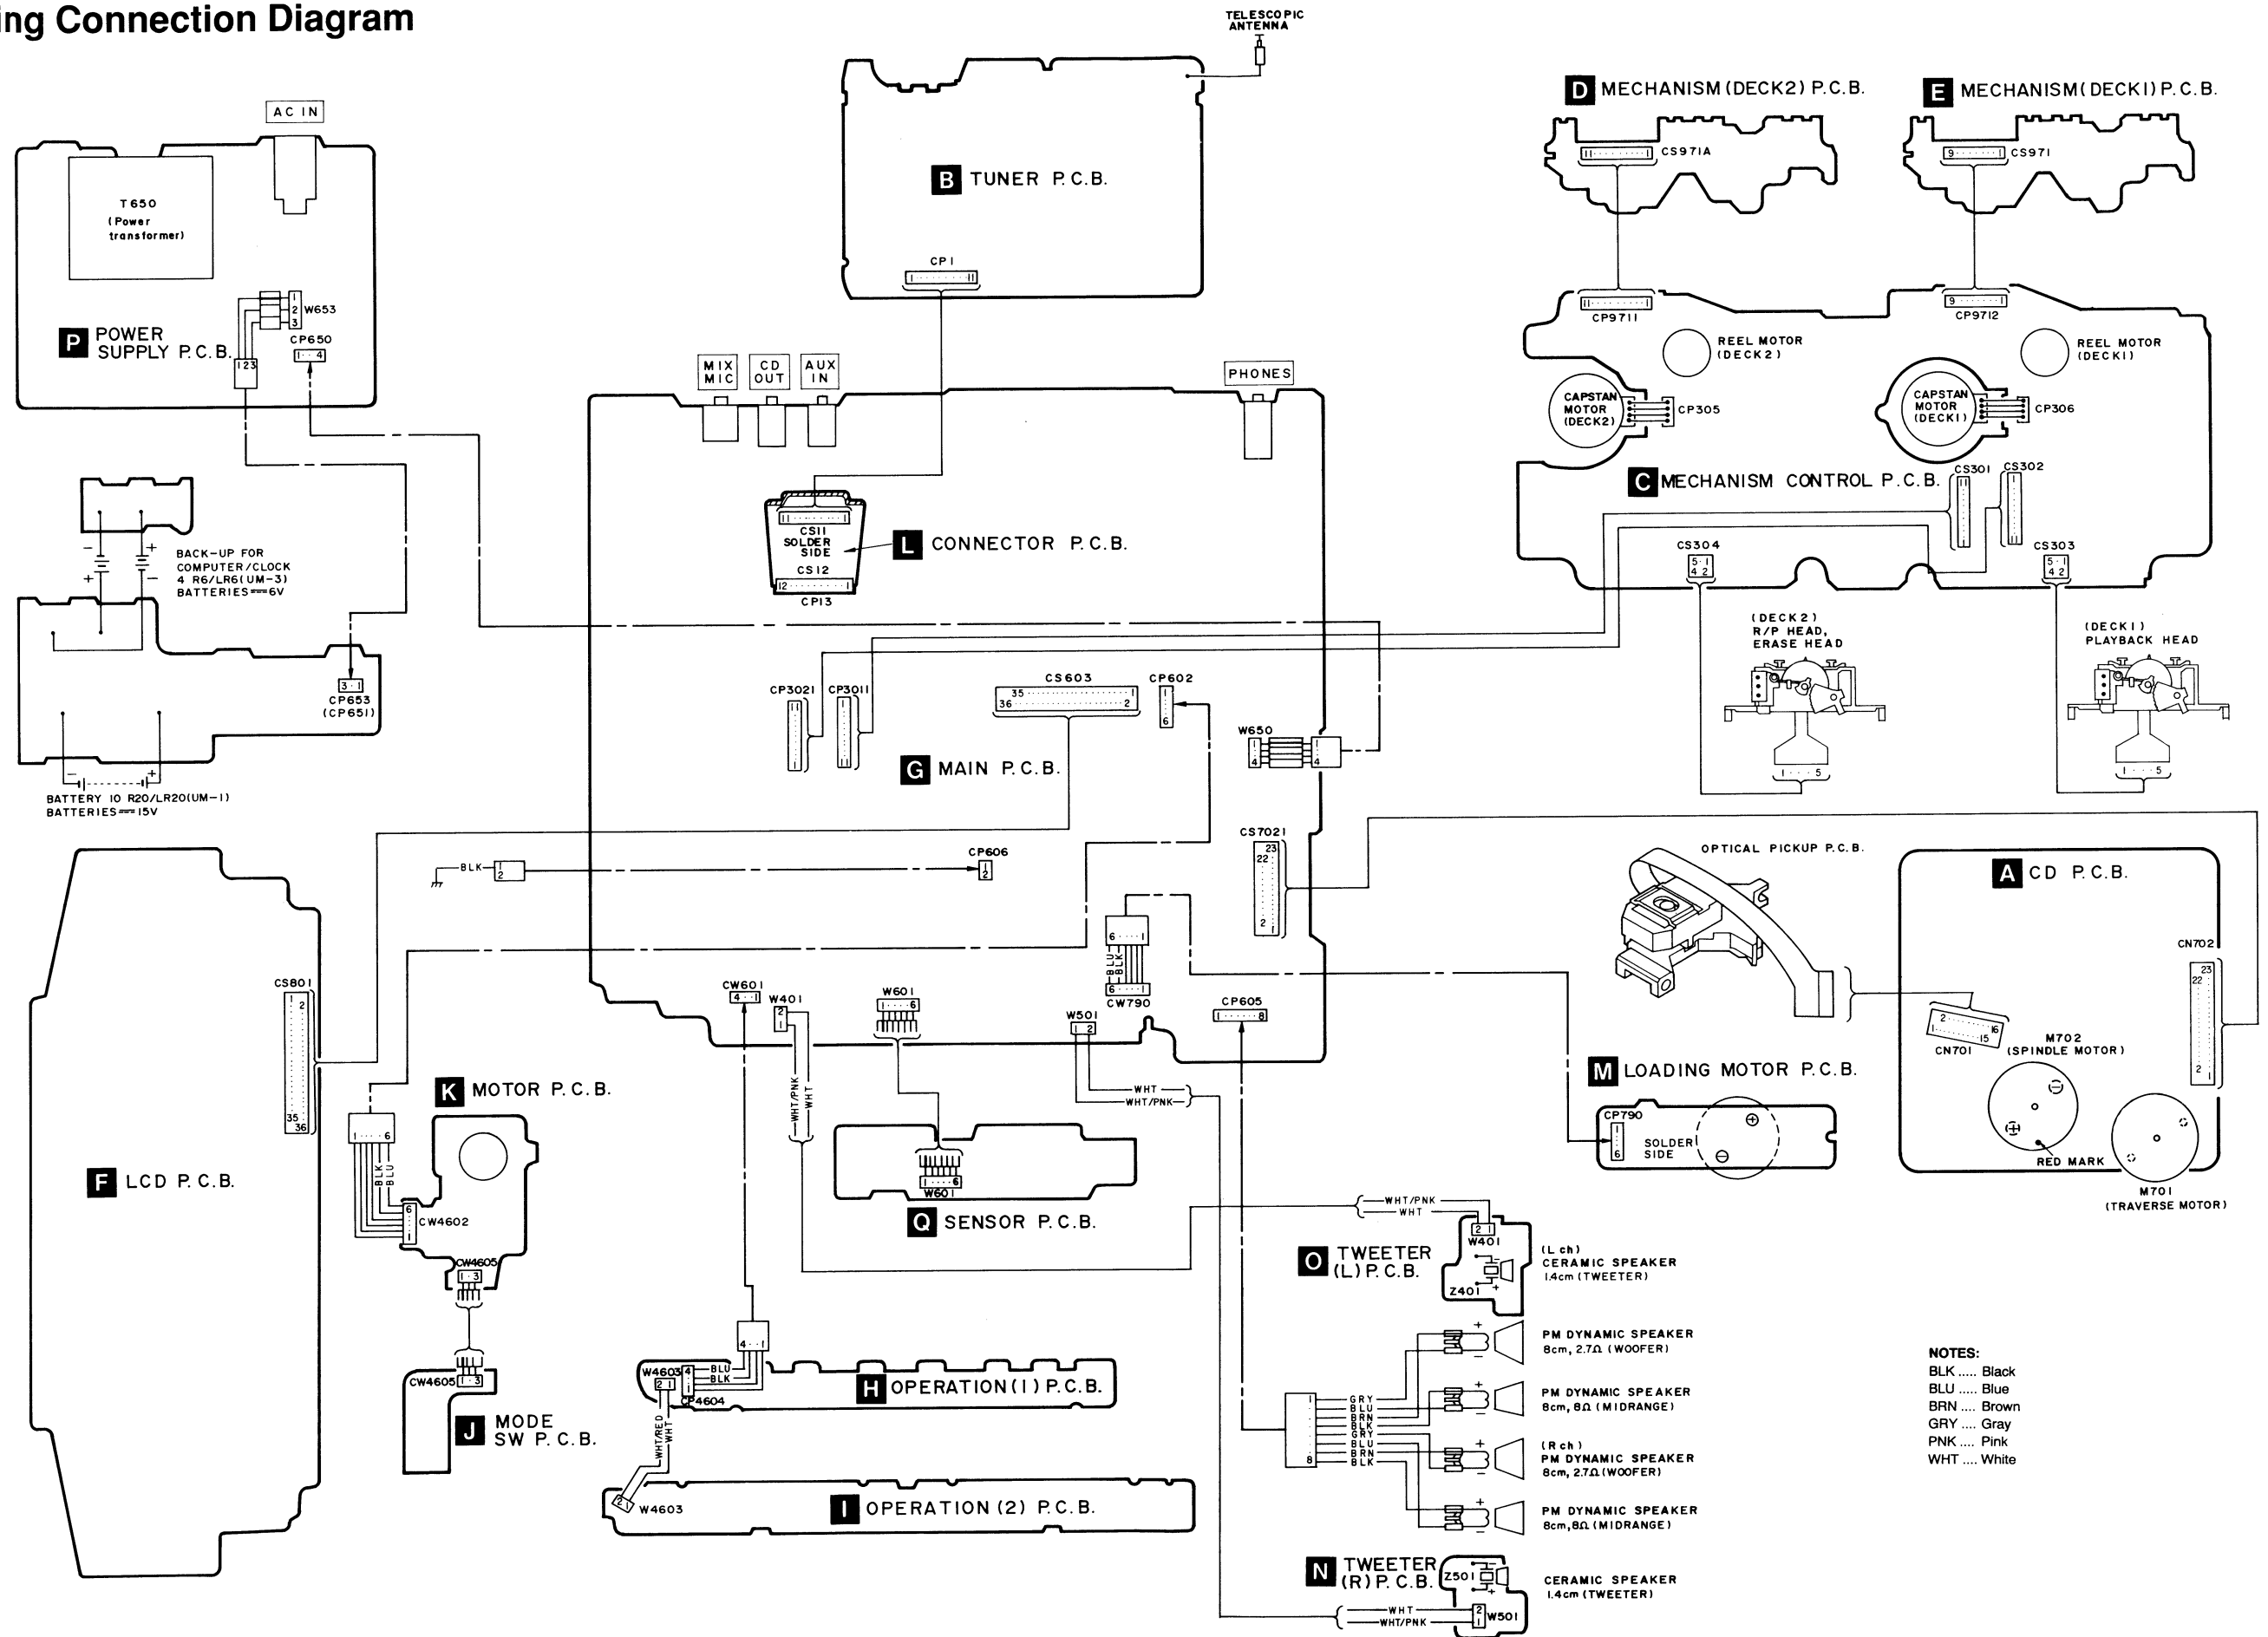


CD Circuit Troubleshooting

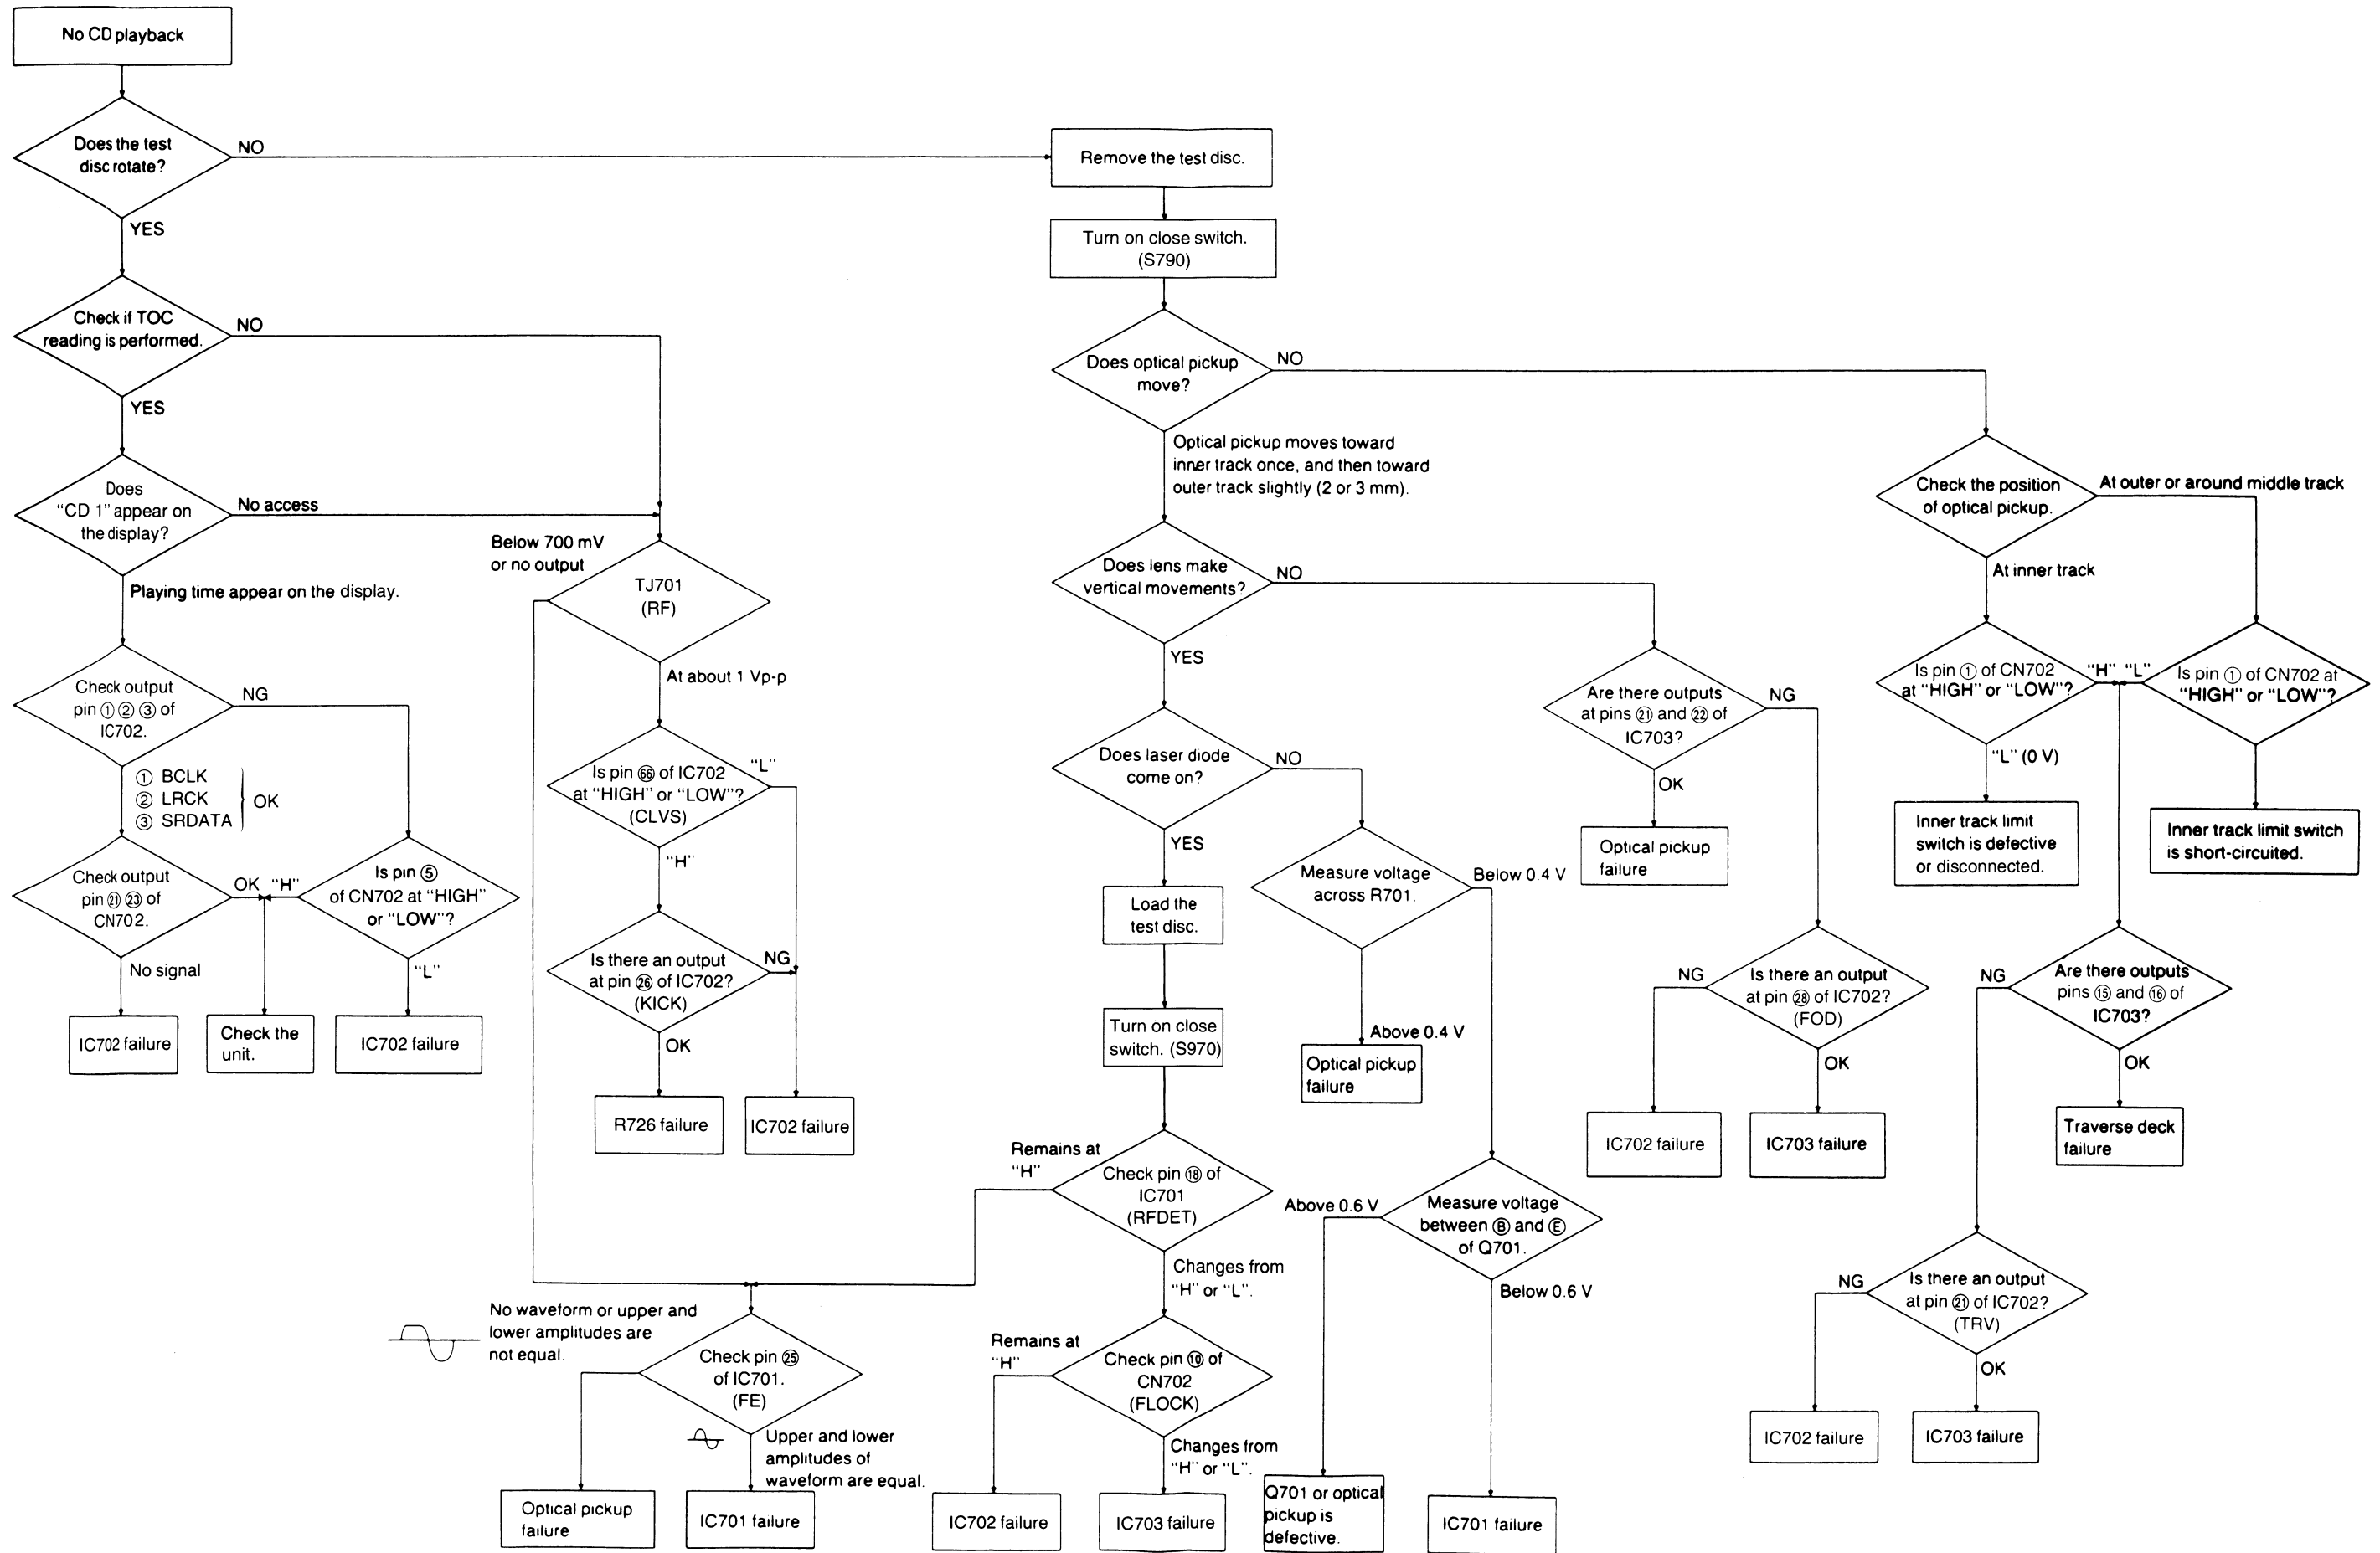

Mechanism Block Troubleshooting


The cassette deck of this model uses a new automatic loading type mechanism. When repairing the cassette section, observe the following instructions that will help you repair it in a shorter time.

1. Preparation

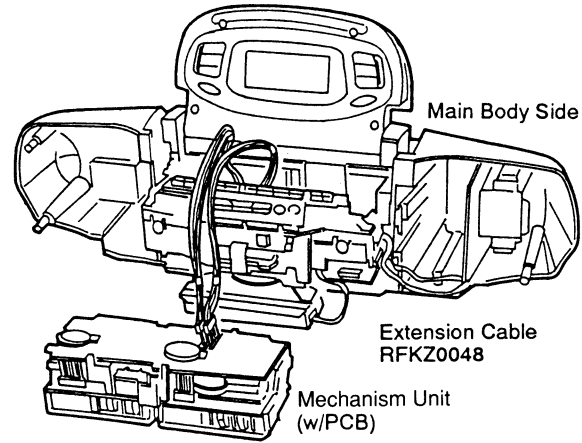

- ① Remove the mechanism unit from the unit. (Refer to page 19.)
 - ② Make connection between the main body side (CP3011, CP3021) and the mechanism unit (CS301, CS302) by extension cables. (Part No. RFKZ0048)
- Carry out check, diagnosis and troubleshooting without separating the mechanism from the mechanism control P.C.B.


2. Main Block of Mechanism Control P.C.B.

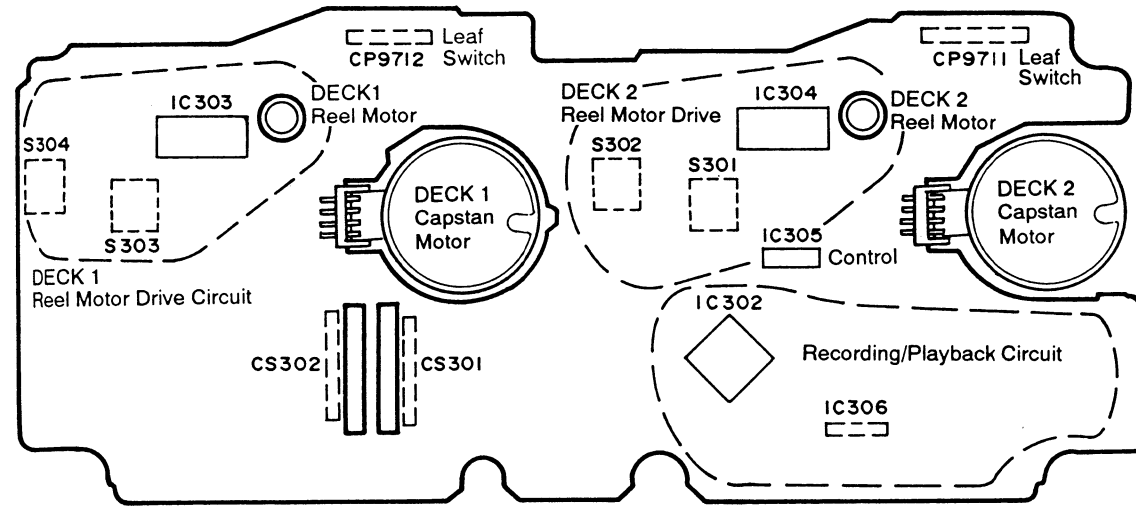

3. Object and Description

A troubleshooting guide is prepared for each main block of mechanism control P.C.B. (Defective part can be determined by checking if the faulty condition is in the electrical section or in the mechanism even without removing the mechanism control P.C.B.)

- Reel Motor Drive (Cassette Open/Close)
- Capstan Motor
- Leaf Switch and Plunger
- Signal (Playback)
- Mechanism

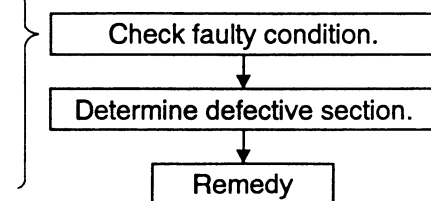


4. Summary of Troubleshooting Guide

Symptom	Checking Procedure	Presumed Defective Part
Open/close failure	Check reel motor terminal voltage. <ul style="list-style-type: none"> OK → Check continuity across both ends of reel motor. <ul style="list-style-type: none"> OK → Mechanism Block NG → Reel Motor Normal voltage (13V when opening, 13V when closing) → Normal resistance (30 Ω approx.) <ul style="list-style-type: none"> NG → Cassette Holder Open/Close Relations (See page 69.) 	
	Check capstan motor terminal voltage. <ul style="list-style-type: none"> OK → Check continuity across both ends of capstan motor. <ul style="list-style-type: none"> OK → Mechanism Block NG → Capstan Motor Normal voltage (15V approx. during playback) → Normal resistance (100k Ω approx.) <ul style="list-style-type: none"> NG → Capstan Motor, Reel Motor Relations (See page 70.) 	
Not operation Mechanism (Open/close O.K.)	Check plunger terminal voltage. <ul style="list-style-type: none"> OK → Check continuity across both ends of plunger. <ul style="list-style-type: none"> OK → Mechanism Block NG → Plunger NG → Plunger, Leaf Switch Relations (See page 71.) 	
	Half switch and mode switch	
No playback (Dead)		Playback Relations (See page 72.)


5. Electrical Block Troubleshooting

Cassette Holder Open/Close Relations

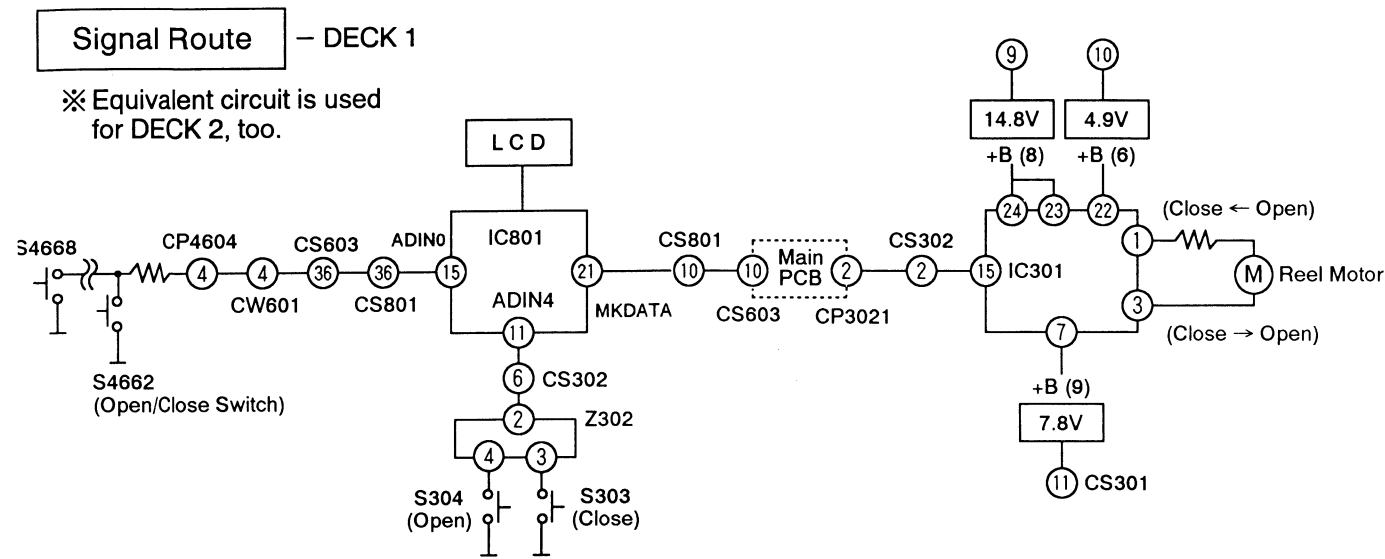


Symptom	Checking Procedure/Presumed Defective Part	Presumed Defective Block
1. Fails to open.	<p>Check reel motor voltage IC301 Pin ③</p> <p>13V Pin ③ 0V GND</p> <p>IC301 ③ ① Voltage (13V)</p> <p>OK → Mechanism Block Reel motor</p> <p>NG → IC301 ⑦, ②②, ②③, ②④</p> <p>OK → System Controller Line</p> <p>NG → Check +B voltage</p> <p>Check +B line CS302 ⑨ ⑩ CS201 ⑪</p>	<ul style="list-style-type: none"> Mechanism Block Reel motor System Controller Line
2. Fails to close.	<p>Check reel motor voltage IC301 Pin ①</p> <p>13V 0V GND</p> <p>IC301 Pin ① Voltage (13V)</p> <p>OK → Mechanism Block</p> <p>NG → Check +B line CS302 ⑨ ⑩ CS201 ⑪</p>	<ul style="list-style-type: none"> Mechanism Block
3. Opens but closes soon.	<p>S304 (Opening Detection Switch)</p> <p>Z302 ④ Voltage 0V → Z302 ② Voltage 2.4V</p> <p>4.15V → Z302 ④ 1.2V → Z302 ②</p>	<ul style="list-style-type: none"> System Controller Line Z302 S304 Mechanism Block
4. Closes but opens soon.	<p>S303 (Closing Detection Switch)</p> <p>Z302 ③ Voltage 0V → Z302 ② Voltage 1.2V</p> <p>3.8V → Z302 ③ 2.4V → Z302 ②</p>	<ul style="list-style-type: none"> System Controller Line Z302 S303 Mechanism Block
System controller line	<p>Check tact switch and system controller by self-check function. (See page 85.)</p>	

Capstan Motor and Reel Motor Relations

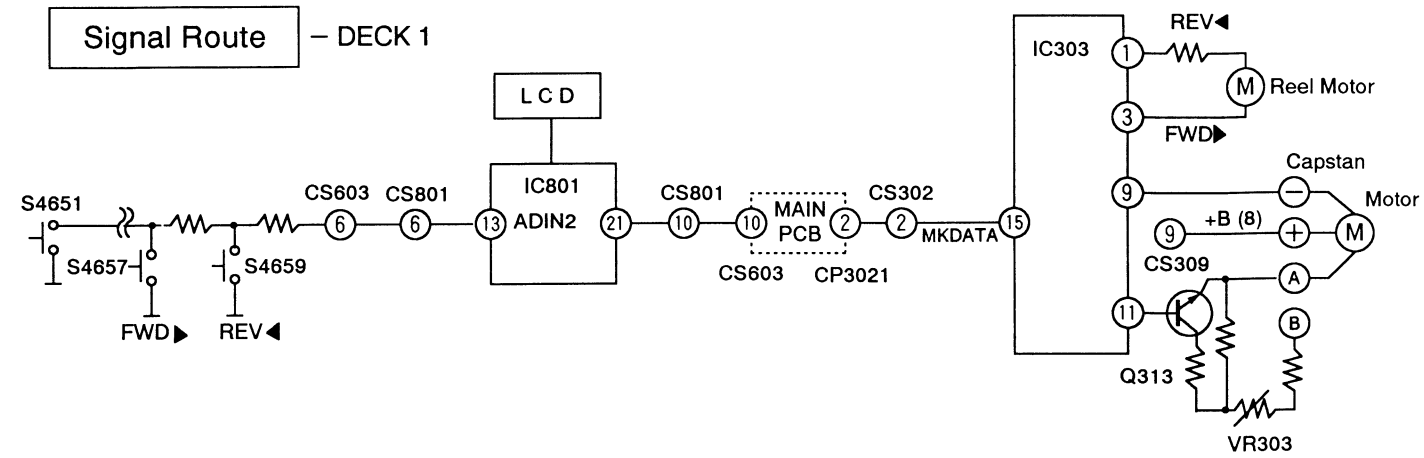


Symptom	Checking Procedure/Presumed Defective Part	Presumed Defective Block
1. Reel motor fails to rotate during playback.	<p>Check voltage at IC303 ① ③.</p> <p>③ +3.6V GND FWD ▶</p> <p>① +3.6V REV ◀</p> <p>Voltage</p> <p>OK → Reel Motor Mechanism Block</p> <p>NG → IC303 +B (+3.6V) Check</p> <p>OK → IC303</p> <p>NG → MDATA Tuner/Connector Relation</p>	<ul style="list-style-type: none"> Reel Motor Mechanism Block IC303 MDATA Tuner/Connector Relation
2. Capstan motor fails to rotate during playback.	<p>FWD ▶ Check capstan motor voltage (constant speed)</p> <p>OK → Capstan Motor Mechanism Block</p> <p>NG → Check MOTOR Terminal ⊖ when FWD ▶ 0V</p> <p>NG → IC303</p> <p>OK → Check MOTOR Terminal ⊕, ⊗ when FWD ▶ ⊕ 14.4V ⊗ 12.8V</p> <p>NG → Q313</p> <p>Check +B(8) – CS309 ⑨ when voltage is not 14.7V. → +B (8)</p>	<ul style="list-style-type: none"> Capstan Motor Mechanism Block IC303 Q313 +B (8)
3. Capstan motor	<p>Capstan motor judgment criterion: Motor rotates when 14.7V approx. is applied between ⊕ and ⊖ terminals of the motor, and 1.6V approx. between A and B.</p>	<ul style="list-style-type: none"> Replace motor if it fails to rotate.
4. No constant-speed rotation.	<p>Check Q313 base voltage (14.1V).</p> <p>OK → Motor is defective. Adjust VR303.</p> <p>NG → IC303</p>	<ul style="list-style-type: none"> Motor is defective. Adjust VR303. IC303
5. No double-speed rotation	<p>Check Q313 base voltage (13.7V).</p> <p>OK → Q313 is defective. Motor is defective.</p> <p>NG → IC303</p>	<ul style="list-style-type: none"> Q313 is defective. Motor is defective. IC303

Leaf Switches and Plunger Relations

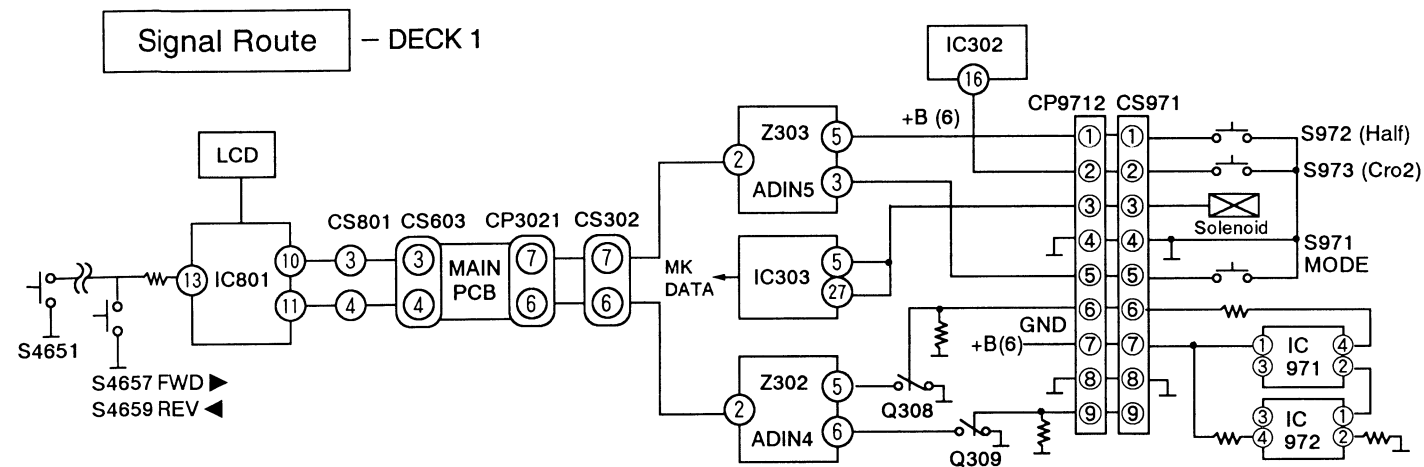

Playback Signal Relations

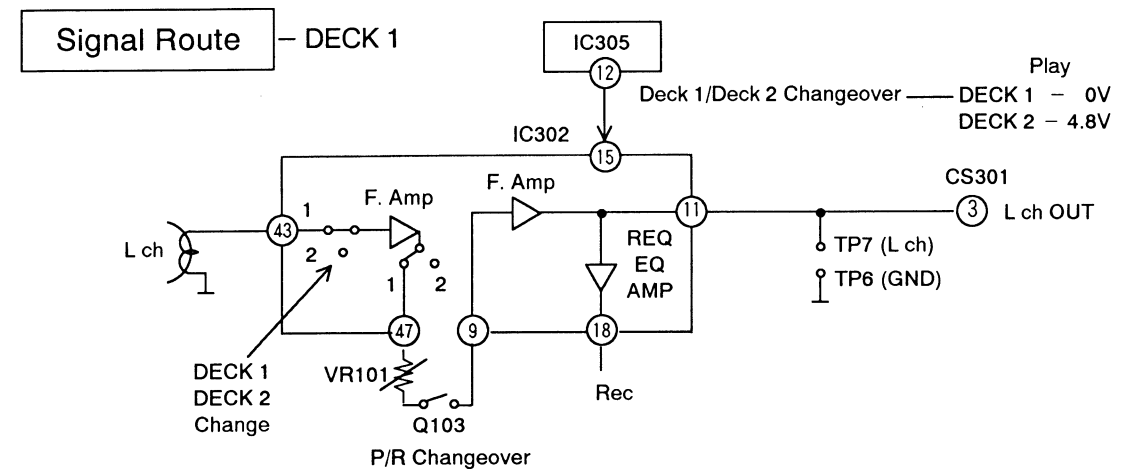

Symptom	Checking Procedure/Presumed Defective Part	Presumed Defective Block
1. Play-stop repeated.	<p>Check voltage at CS971 Pin ⑤ during playback, H (4.9V). → H(4.9V) Remains H as it → → L (0V) Z303 ② 1.1V → NG → OK Check IC801 Pin ⑪ 1.1V → NG</p>	<ul style="list-style-type: none"> • S971 • Z303 • IC801/LCD
2. No cassette mark indicated on LCD.	<p>CS971 ① No cassette (4.9V). → Cassette exists (0V) → NG → OK Z303 ② 4.3V → 3.7V → NG → OK</p>	<ul style="list-style-type: none"> • S972 • Z303 • IC801/LCD
3. Plunger fails to work.	<p>130ms 14.5V 65ms Play Voltage applied to CS971 Pin ③ ? → OK (14.5V) → NG (0V) Check plunger resistance, 30 Ω approx</p>	<ul style="list-style-type: none"> • Plunger • CS971 • IC303
4. No counter indication on LCD.	<p>Check CS971 Pins ⑥, ⑦ waveform. → NG → 0.5 ~ 0.6V → Varies depending upon tape position. Voltage waveform appears; Check Z302 ⑤, ⑥ waveform → NG → 5.0V</p>	<ul style="list-style-type: none"> • IC971/IC972 • Q308/Q309


Symptom	Checking Procedure/Presumed Defective Part	Presumed Defective Block
1. L ch dead.	<p>Check playback level by using test tape (QZZCFM). (See page 88.) → NG Reference signal – 11dB output between TP5 and TP6. → OK → NG Sequentially check IC302 output line. (Head Output ④③ → ④⑦ → ④⑨ → ④⑪ Sequentially check output.)</p>	<ul style="list-style-type: none"> • CS301 and those that follow – AMP • IC302 • Head
2. No changeover between Decks 1 and 2.	<p>Deck 1/Deck 2 Changeover Signal Check IC302 Pin ⑮ voltage. → Check IC305 Pin ⑫ voltage. DECK 1 Play 0V DECK 2 Play 4.8V → No changeover takes place.</p>	<ul style="list-style-type: none"> • IC302

Deck 1/Deck 2 (L-CH) – (R-CH) Pin Number of IC302.


	DECK 1		DECK 2	
	L ch	R ch	L ch	R ch
IC302 Head Input	④③	④②	④④	④①
F-Amplifier Output	④⑦	③⑧	④⑧	③⑦
Playback Level Adj. VR	VR101	VR201	VR102	VR202
Input after Level Adjustment	④⑨	②⑧	④⑨	②⑧
Output	④③	②⑥	④③	②⑥

6. Mechanism Block Troubleshooting

Surface Mechanism

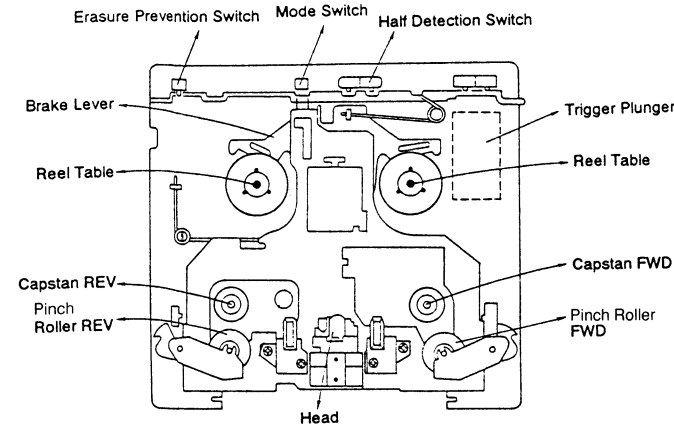

Backside Mechanism

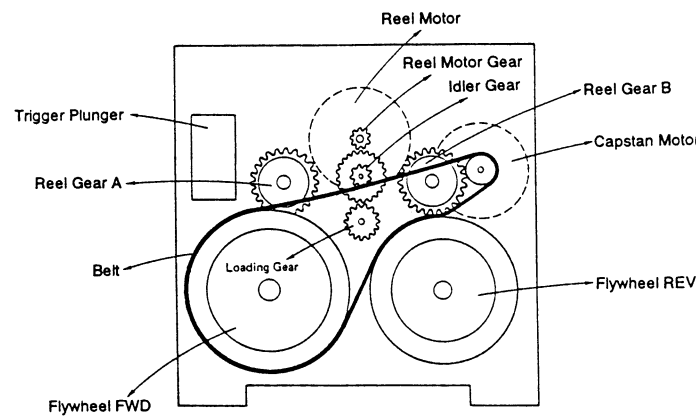

Preparation before Check

Remove mechanism control P.C.B. and cassette holder. Separate loading chassis from mechanism.

Symptom	Checking Procedure	Presumed Defective Part
Open/close failure.	<p>Check drive rack by moving Up and Down by hand.</p> <p>Drive rack, friction gear, intermediate gear, and loading gear move smoothly?</p> <p>OK →</p> <p>NG →</p>	<ul style="list-style-type: none"> • Reel Motor Gear • Idler Gear • Drive Rack • Friction Gear • Intermediate Gear • Loading Gear
<ul style="list-style-type: none"> • Head base plate fails to ascend. • Pressure roller fails to ascend. 	<p>Raise trigger lever by hand ① → Main gear moves a little in direction ②? → OK → FWD flywheel moves a little in direction ③? → OK →</p> <p>Rotate flywheel in direction ③ by hand. → Head base plate ascends? → OK → Capstan and pressure roller come into close contact? → OK →</p> <p>NG →</p>	<ul style="list-style-type: none"> • Main Gear • Flywheel • Trigger Lever • Main Gear • FWD/REV Rod • Pinch Roller • Spring • Main Gear • Head Base Plate • Head Spring

Mechanism Block


Symptom	Checking Procedure	Presumed Defective Part
Takeup reel table fails to rotate.	<p>Push up head base plate by hand. → Press idler gear against reel table gear (A) by hand. → Rotate idler gear clockwise by hand and check if reel table gear (A) rotates.</p> <p>OK →</p> <p>YES →</p> <p>* Release idler gear shaft (B)</p> <p>* Release brake lever.</p>	<ul style="list-style-type: none"> • Reel Table Gear. • Idler Gear • Reel Motor

7. Trouble Examples (Cassette Deck)

Symptom	Cause	Remedy
① Unusual noise is heard during playback.	Head is dirty.	Clean it.
② Running tape makes noise.	Pressure roller spring has slipped off.	Replace the pressure roller.
③ Speed of rotation is too high.	Pressure roller spring has slipped off.	Replace the pressure roller.
④ Tray comes out soon.	Drive rack gear teeth deviated.	Replace drive rack.
⑤ Stops at times during playback. (Deck 1)	CS971 (CP9712) Pins ①, ③ have been soldered improperly.	Solder correctly. ① HALF (S972) ③ SOLENOID
⑥ No counter indication during playback. (Deck 2)	CP9711 Pins ⑤, ⑧ have been soldered improperly.	Solder correctly.
⑦ No playback.	Leaf switch has been broken.	Replace leaf switch.
⑧ Cassette holder fails to close. (Deck 1)	IC303 is defective.	Replace IC303.
⑨ Cassette holder fails in opening and closing, and power supply turns off. (Deck 2)	IC304 is defective.	Replace IC304.
⑩ Tape gets entangled in.	Reel motor is defective.	Replace reel motor.
⑪ Cassette holder fails in opening and closing.	Drive rack gear is defective.	Replace drive rack.
⑫ No FWD play. (REV Play O.K.)	FWD/REV lever is defective.	Replace FWD/REV lever.
⑬ No FWD play. (REV Play O.K.)	FWD/REV spring is defective.	Replace FWD/REV spring.
⑭ No azimuth adjustment can be made.	Head spring is defective.	Replace head block.

8. Mechanism Block Operation

1) Block Diagram (DECK 1 only)

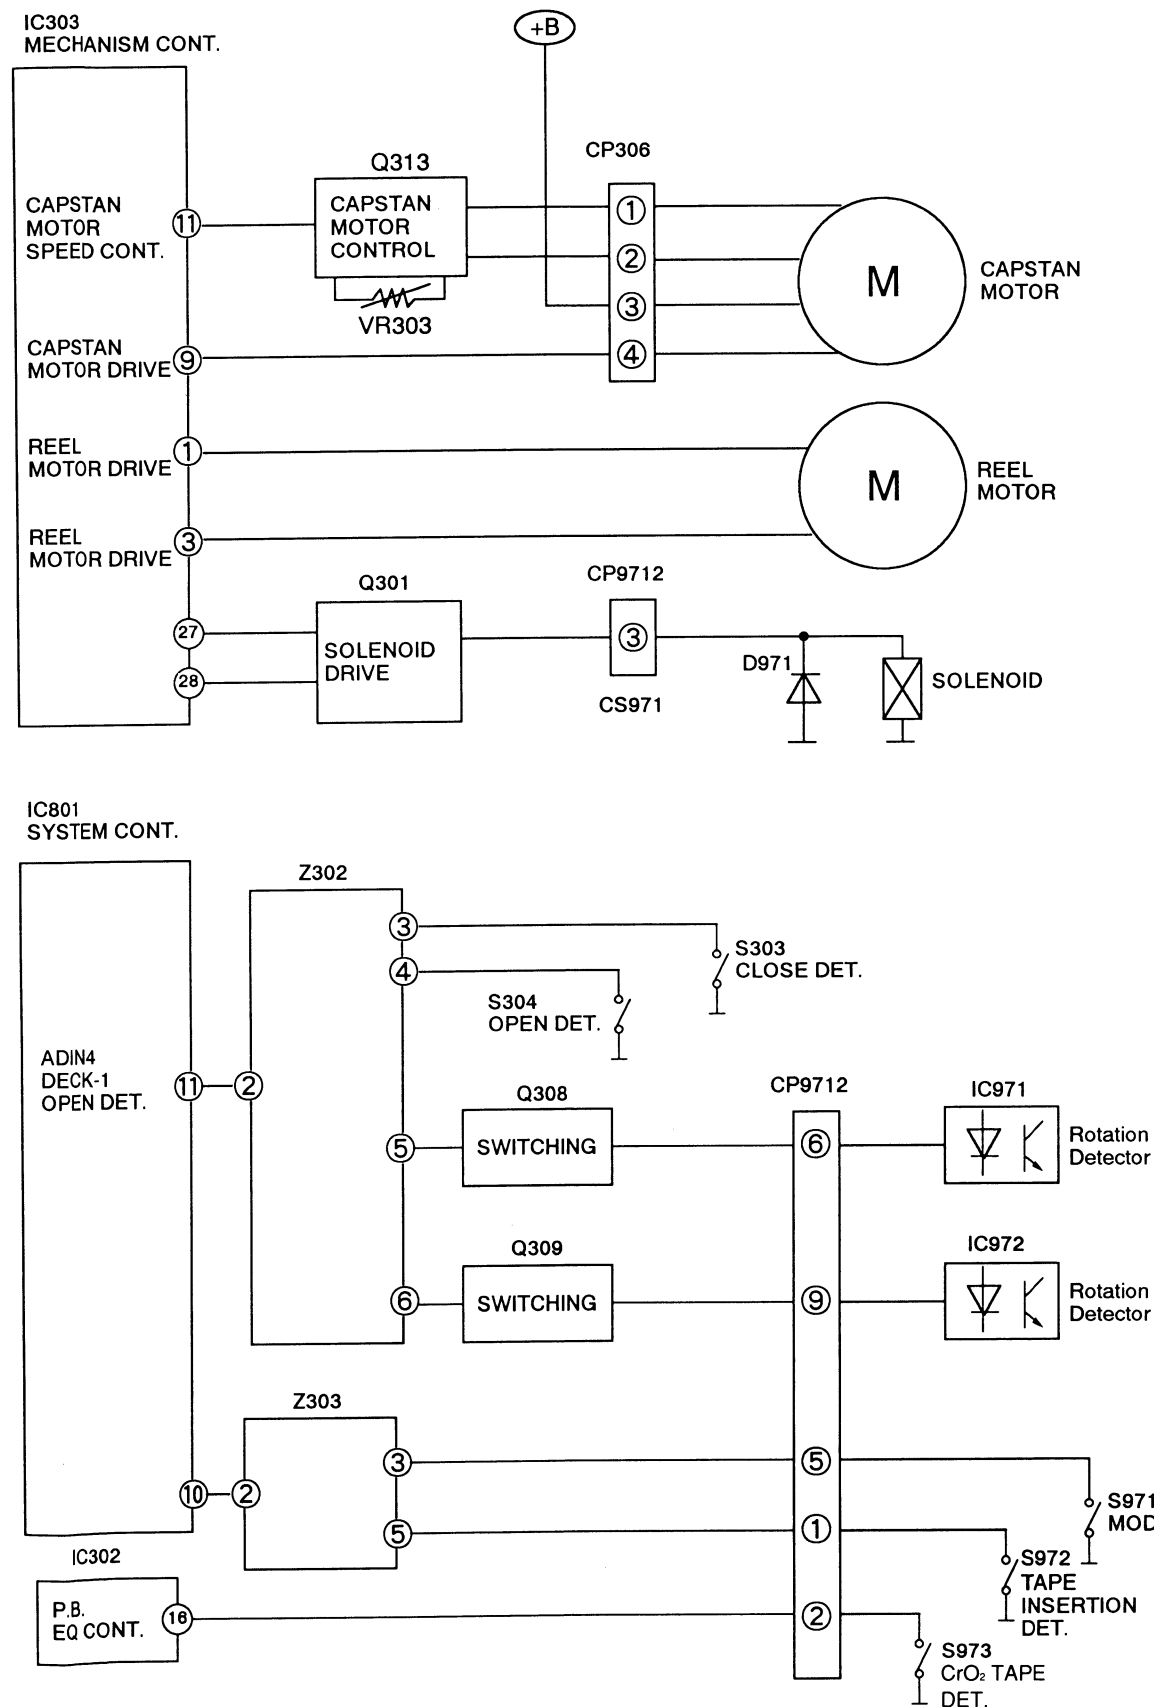


2) Main IC Pins


■ Explanation of Mechanism Control (for DECK 1 Only)

IC	Pin No.	Discription															
IC303	9 11	Capstan motor control signal output.															
		<table border="1"> <thead> <tr> <th>Pin No.</th> <th>STOP</th> <th>NORMAL SPEED</th> <th>HIGH SPEED</th> </tr> </thead> <tbody> <tr> <td>9</td> <td>14.7</td> <td>0.1</td> <td>0.1</td> </tr> <tr> <td>11</td> <td>14.4</td> <td>14.1</td> <td>15.0</td> </tr> </tbody> </table>	Pin No.	STOP	NORMAL SPEED	HIGH SPEED	9	14.7	0.1	0.1	11	14.4	14.1	15.0			
		Pin No.	STOP	NORMAL SPEED	HIGH SPEED												
9	14.7	0.1	0.1														
11	14.4	14.1	15.0														
Reel motor control signal output.																	
IC303	1 3	<table border="1"> <thead> <tr> <th>Pin No.</th> <th>STOP</th> <th>FWD PLAY</th> <th>REV PLAY</th> <th>NORMAL FF</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>0</td> <td>0.2</td> <td>3.9</td> <td>0.8</td> </tr> <tr> <td>3</td> <td>0.1</td> <td>4.0</td> <td>0.2</td> <td>7.2</td> </tr> </tbody> </table>	Pin No.	STOP	FWD PLAY	REV PLAY	NORMAL FF	1	0	0.2	3.9	0.8	3	0.1	4.0	0.2	7.2
		Pin No.	STOP	FWD PLAY	REV PLAY	NORMAL FF											
		1	0	0.2	3.9	0.8											
3	0.1	4.0	0.2	7.2													
<table border="1"> <thead> <tr> <th>Pin No.</th> <th>NORMAL REW</th> <th>HIGH SPEED FF</th> <th>HIGH SPEED REW</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>7.2</td> <td>0.1</td> <td>11.2</td> </tr> <tr> <td>3</td> <td>0.1</td> <td>11.2</td> <td>7.2</td> </tr> </tbody> </table>	Pin No.	NORMAL REW	HIGH SPEED FF	HIGH SPEED REW	1	7.2	0.1	11.2	3	0.1	11.2	7.2					
Pin No.	NORMAL REW	HIGH SPEED FF	HIGH SPEED REW														
1	7.2	0.1	11.2														
3	0.1	11.2	7.2														
IC303	27 28	Solenoid drive control signal output.															
		<table border="1"> <thead> <tr> <th>Pin No.</th> <th>OFF</th> <th>HOLD</th> <th></th> </tr> </thead> <tbody> <tr> <td>27</td> <td>L</td> <td>H</td> <td>FF/FEW 7.3V H = 7.3V</td> </tr> <tr> <td>28</td> <td>L</td> <td>H</td> <td>FF/FEW 0V H = 9V</td> </tr> </tbody> </table>	Pin No.	OFF	HOLD		27	L	H	FF/FEW 7.3V H = 7.3V	28	L	H	FF/FEW 0V H = 9V			
		Pin No.	OFF	HOLD													
27	L	H	FF/FEW 7.3V H = 7.3V														
28	L	H	FF/FEW 0V H = 9V														
IC801	11	Reel table gear rotation detection signal input. Reel talbe gear 1 rotation produces 12 pulses. Cassette holder open/close detection switch signal input.															
IC801	10	Reel table gear rotation detection signal input. Half detection switch signal input.															
IC302	16	Tape select switch signal input.															

3) Cam Gear Action

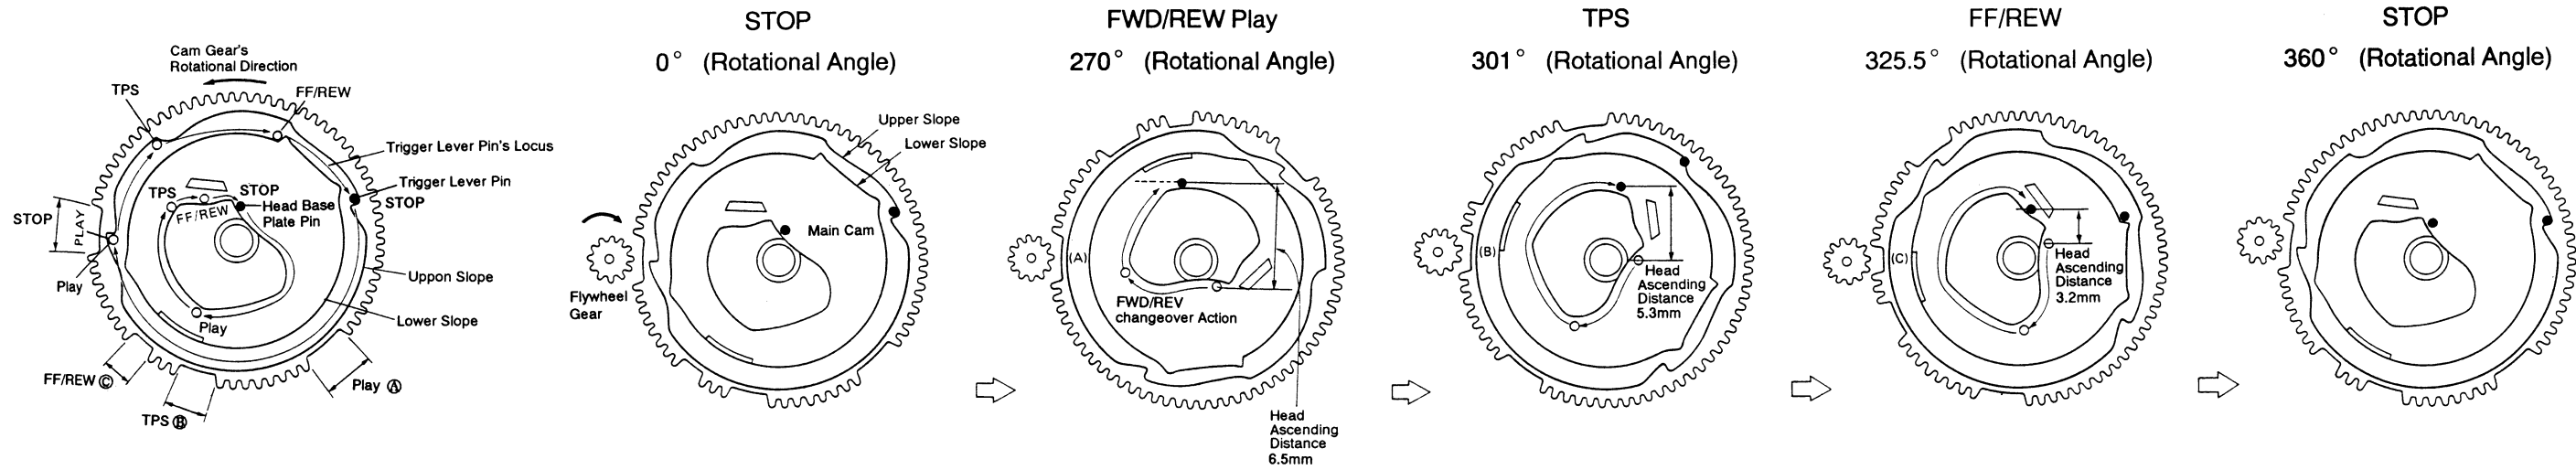


Main Gear Basic Timing Chart

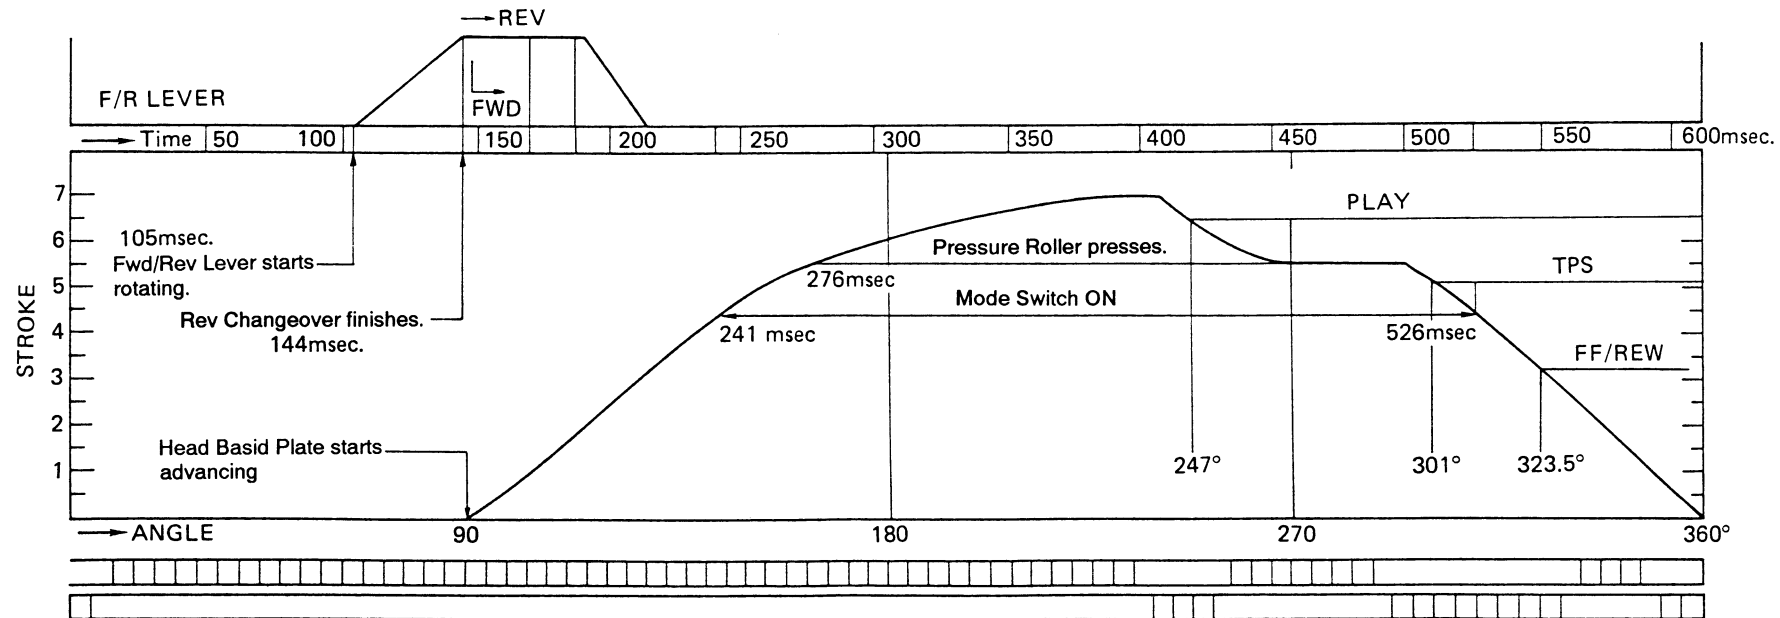

- Flywheel Gear → rotates clockwise.
- Cam Gear → rotates counterclockwise.
- The four modes of STOP, F PLAY/R PLAY, FF/REW, and TPS are determined by the untoothed part position of the cam gear.
- The head base plate ascends and descends as the heat base plate pin moves on the slope of the main cam.
- Position is held at the upper slope for STOP, F PLAY/R PLAY, or TPS (by the trigger lever pin).
- Position is held at the lower slope for FF/REW (by the trigger lever pin).

8. Time Chart


STOP → F. PLAY (▶)

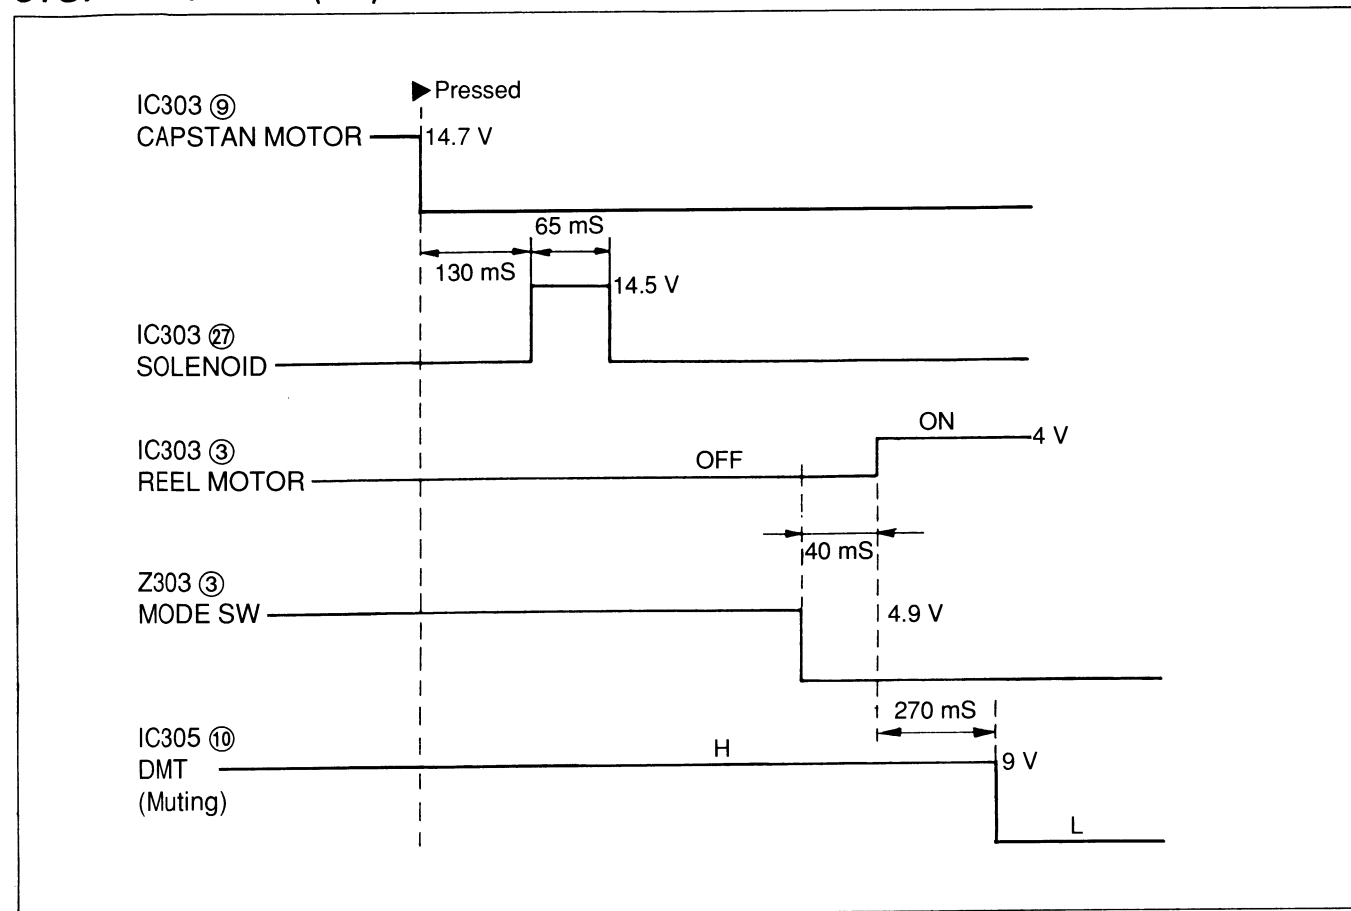

- Pressing the PLAY (▶) key during the cassette holder closed (with tape loaded) causes the capstan motor rotation command to change from H to L level and makes the capstan motor rotate.
- 130 mS after the capstan motor starts running, the plunger attraction command (IC303 ⑳) turns to H level for 65 mS and the plunger is attracted instantaneously.
- As the head base plate ascends, the mechanism mode switch turns ON, the mode switch changes from H to L level. About 40 mS later, the reel motor FWD rotation command (IC303 ③) changes from L to H level and the reel motor is rotated in the FWD direction.
- Muting (for music signal) is canceled 270 mS after the reel motor starts rotating in the FWD direction.

*If the mechanism mode switch fails to turn ON within 800 mS after the plunger is attracted, the mechanism is reset (into the STOP mode).


STOP → R. PLAY (◀)

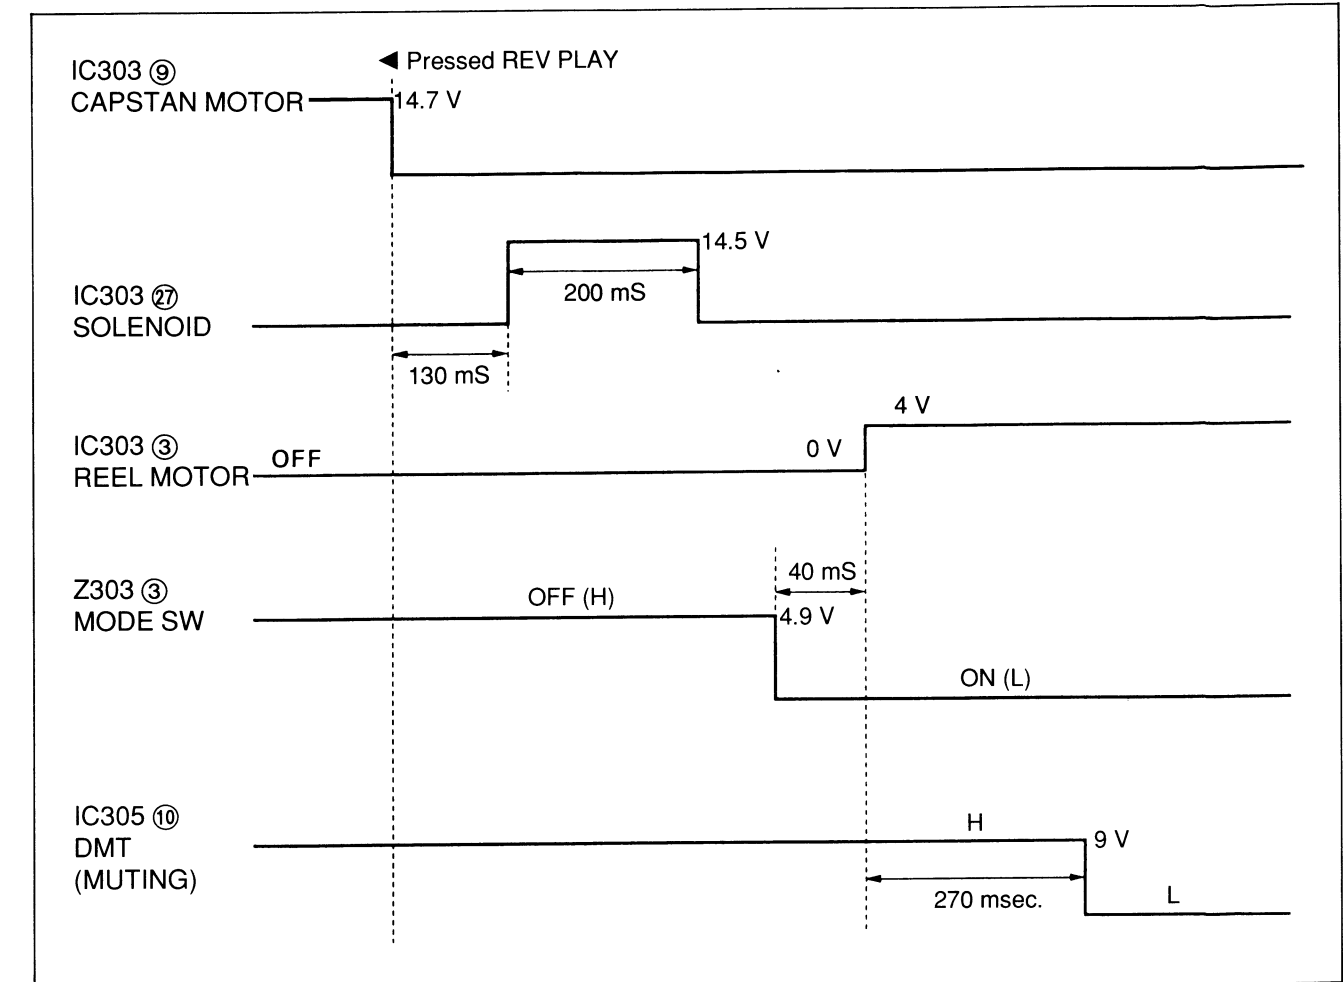

- Pressing the PLAY (◀) key during the LOADING CLOSE time (with tape locked) causes the capstan motor rotation command to change in level from H to L, thereby rotating the capstan motor.
- 130 mS after the capstan motor starts rotating, the plunger attraction command (IC303 ⑳) changes in level to H for 200 mS, bringing the plunger into the state of attraction for 200 mS.
- As the head base plate ascends, the mechanism mode switch turns ON, and the mode switch changes in level from H to L, and 40 mS later, the reel motor REV rotation command (IC303 ③) changes in level from L to H and the reel motor rotates in the REV direction.
- Muting (music signal) is canceled 270 mS after the reel motor starts rotating in the REV direction.

*If the mechanism mode switch does not turn ON within 800 mS after attraction of the plunger, the mechanism is placed into the reset (STOP) mode.

STOP → FF (▶▶)

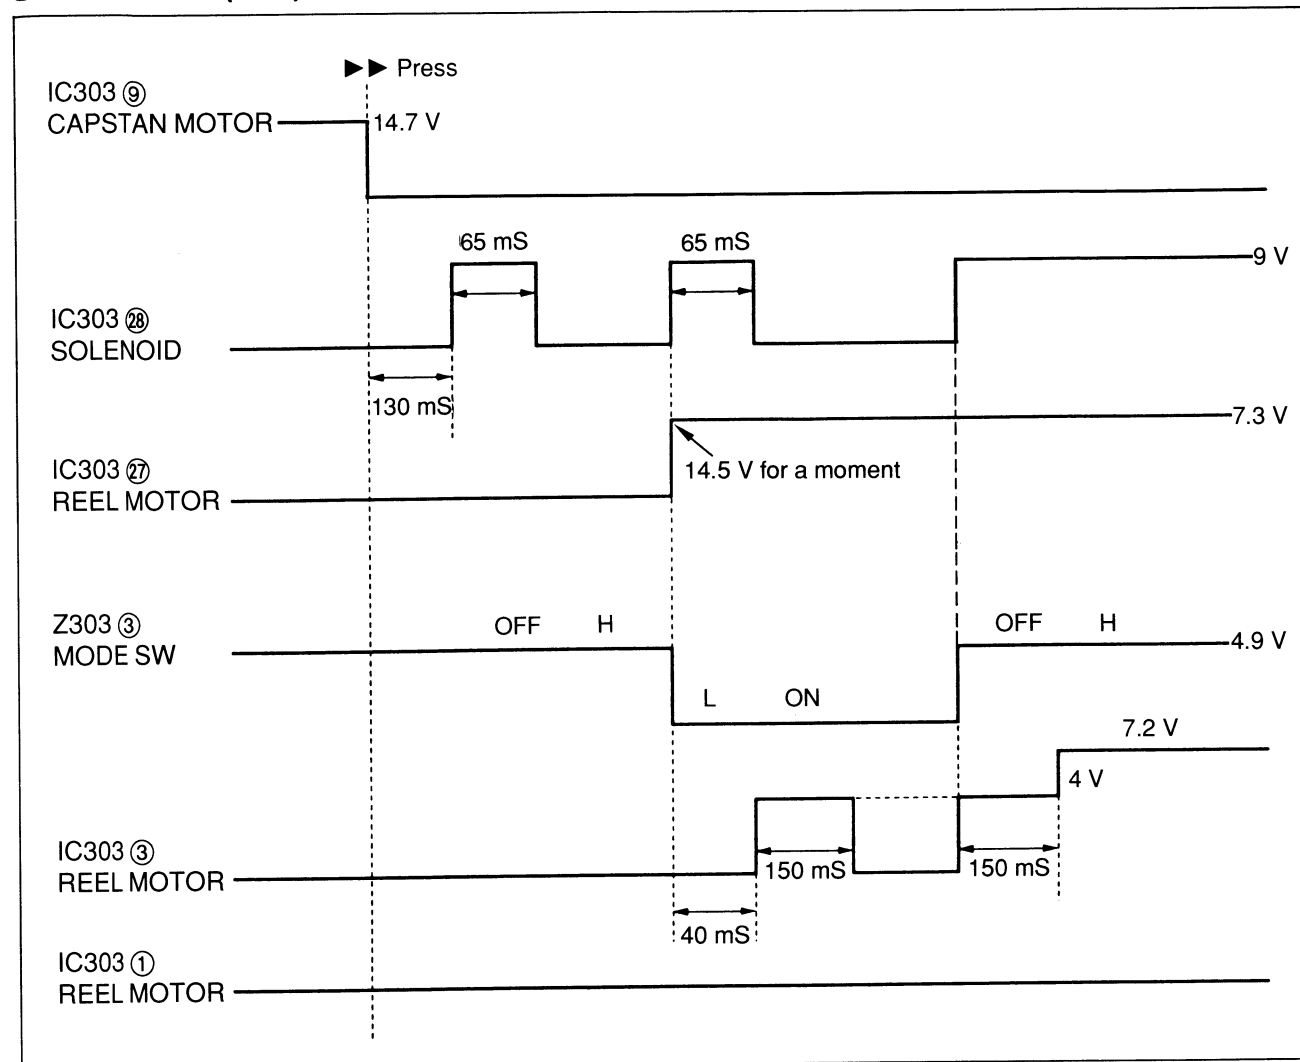

● Pressing the FF key causes IC303 ⑨ (capstan rotation command) to change in level from H to L, and the capstan motor starts rotating.



● 130 mS after the change of the level of IC303 ⑨ to L, IC303 ⑳ (solenoid attraction command) changes in level to H.



● The head base plate ascends, and at the same time that it turns the mechanism mode switch ON, IC303 ⑳ is again changed in level to H for 65 mS. And simultaneously IC303 ㉑ (solenoid attraction hold command) is changed in level to H, and this state is held until FF action comes to a stop.




● The mode switch turns ON, and 40 mS later, IC303 ③ (reel motor FWD rotation command) is kept at the 4 V level for 150 mS. (Looseness straightening action)




● At the same time that the mode switch turns OFF, IC303 ③ is changed again from 4 V (150 mS) to 7.2 V and FF speed begins.

STOP → REW (◀◀)

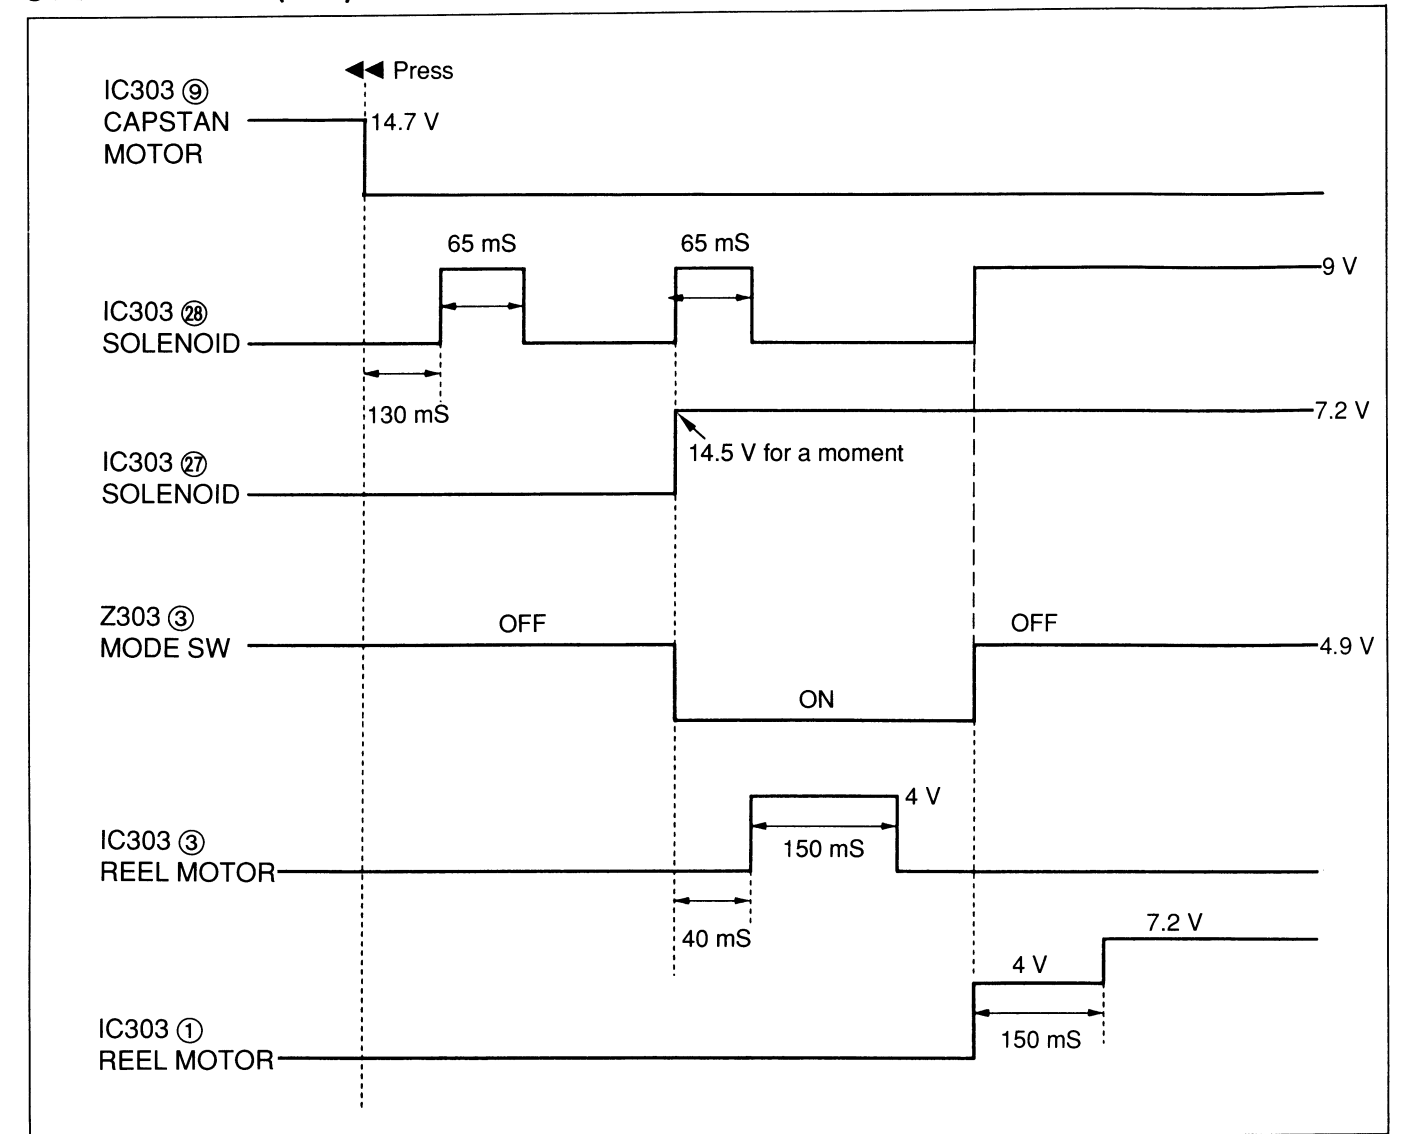


● Differs from FF action in that IC303 ③ and IC303 ① are in reverse order, but remains the same in other points.

LOADING (CLOSE → OPEN)

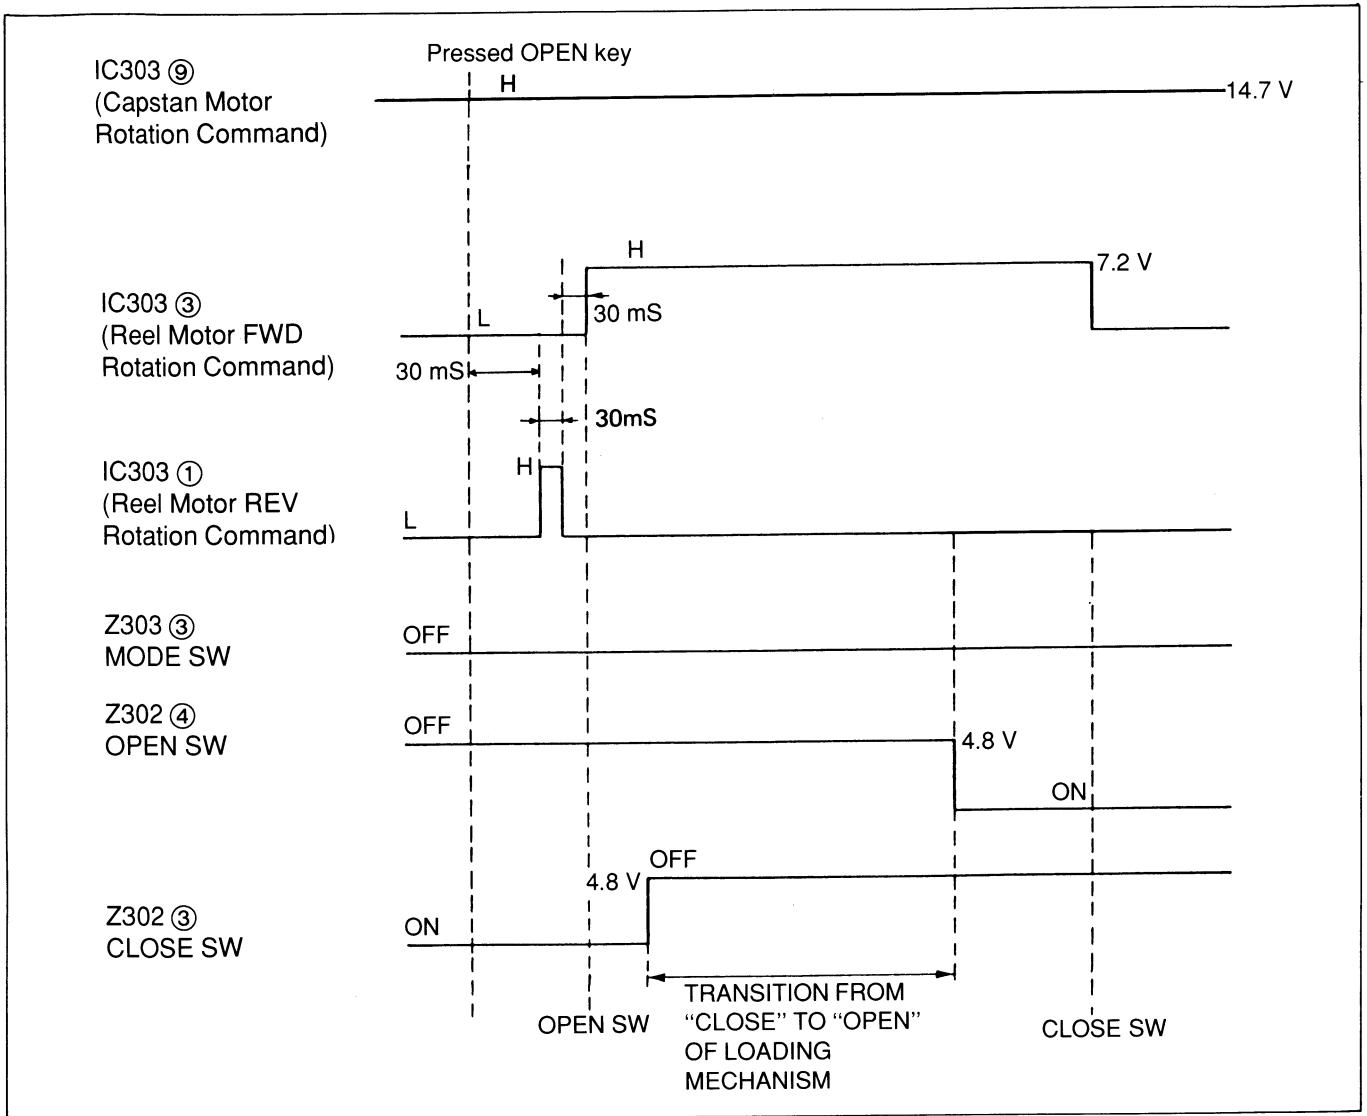

- Pressing the OPEN key from the state of CLOSE causes the capstan motor to rotate for 100 mS to forcibly move down the head base plate in case it has not descended completely even with the mode switch set at OFF.
- ↓
- The reel motor is rotated in the REV direction for 30 mS to forcibly return the idler gear to the neutral position.
- ↓
- 30 mS later, the reel motor FWD rotation command (IC303 ③) changes from L to H level, and the reel motor rotates in the FWD direction. (Loading action starts.)
- ↓
- The CLOSE detection switch changes from ON to OFF.
- ↓
- The OPEN detection switch changes from OFF to ON, and simultaneously the reel motor REV rotation command (IC303 ①) turns from L to H level for 200 mS. (Brake action)
- ↓
- Then the IC303 ① and IC303 ③ commands are turned to L level and the reel motors are stopped.

LOADING (OPEN → CLOSE)

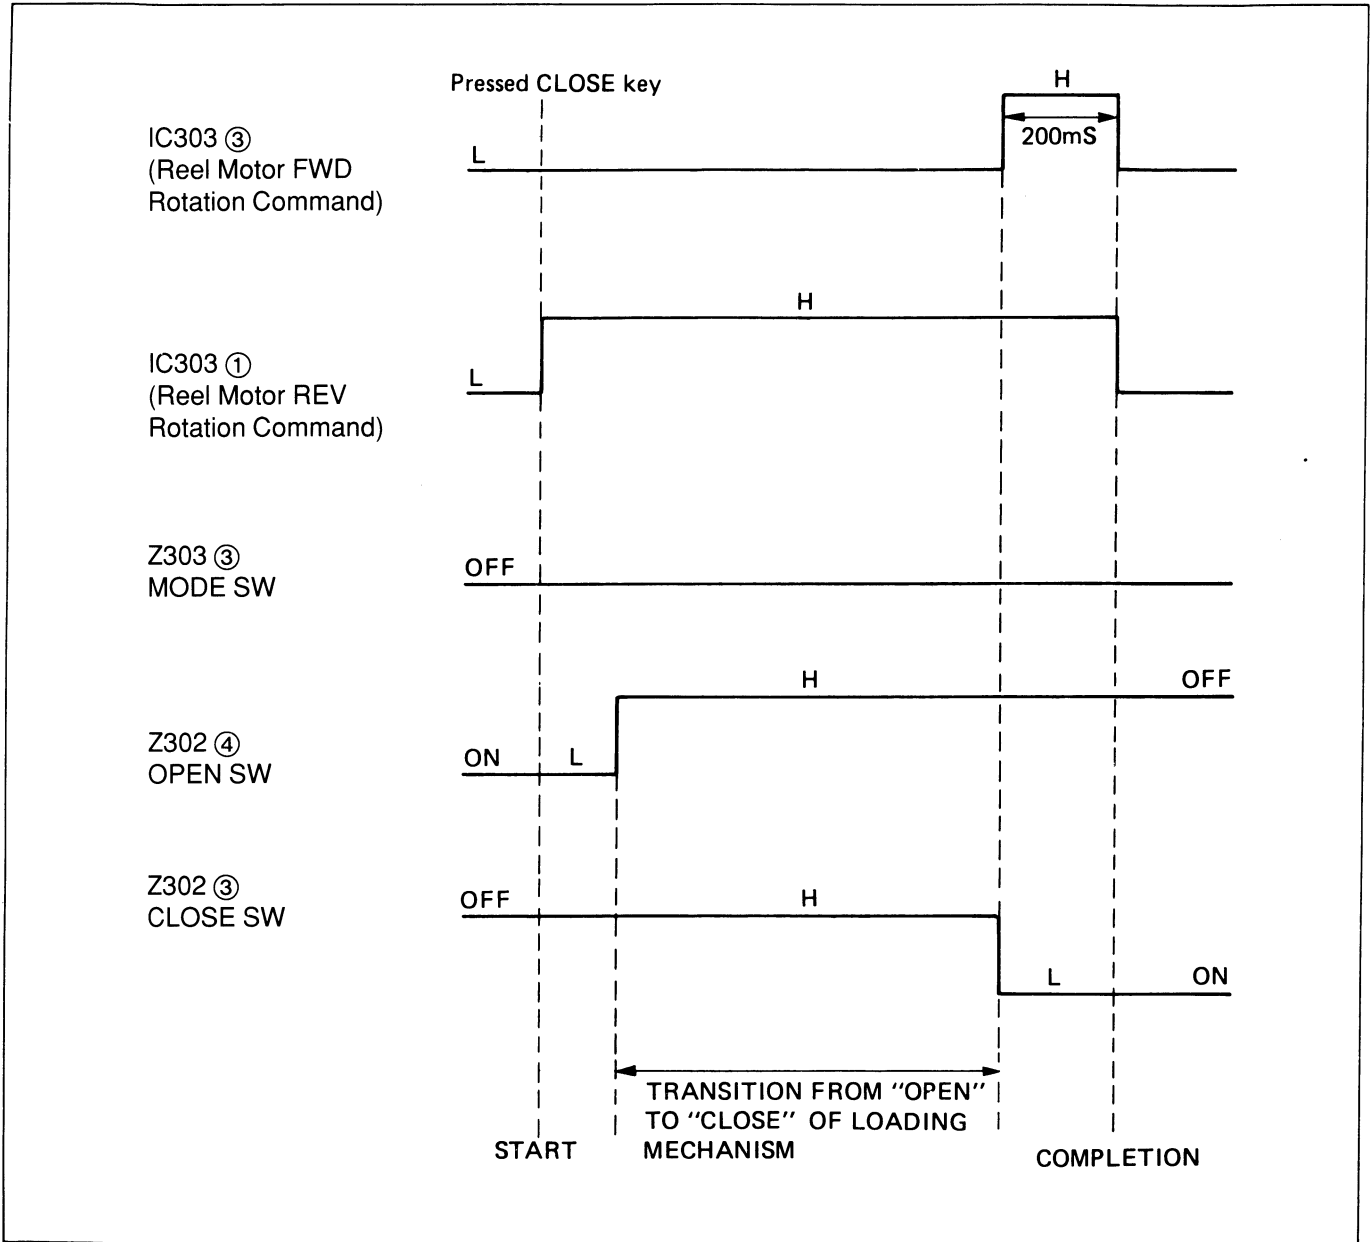

- Pressing the CLOSE key from the state of OPEN causes the reel motor REV rotation command (IC303 ①) to turn to H level and the reel motor rotates in the REV direction. (Loading action starts.)
- The OPEN detection switch changes from ON to OFF.
- The CLOSE detection switch changes from OFF to ON, and simultaneously the reel motor FWD rotation command (IC303 ③) turns from L to H level for 200 mS. (Brake action)
- 200 mS later, the IC303 ① and IC303 ③ commands are turned to L level and the reel motors are stopped.

Self Check Function

The self check function is equipped with this unit, and the condition of the unit can be checked using this function. Use this function before or after repair.

SETTING OF SELF CHECK FUNCTION

1. Connect the AC power cord of this unit to an AC outlet and turn the unit on.
 2. Press the numeric keys "4" and then "7" on the remote controller while holding down the tape stop (□) button on this unit. The LCD indicators will appear as shown in Fig. 1.
- (This display indicates the self check mode is ON.)

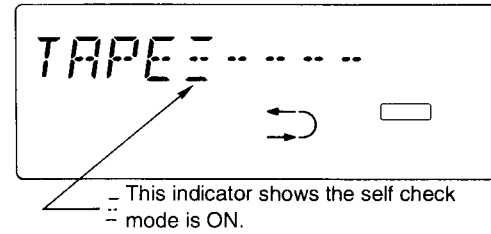


Fig. 1

CHECK OF TAPE EDIT OPERATION

1. Insert a blank tape with erase-prevention tabs into each tape deck 1 and 2.
 - Note:** When a tape with no erase-prevention tabs is inserted, an error indicator will appear on the LCD and the self mode check will be cancelled. During this check mode, the audio volume will come to the maximum level automatically. Therefore, when using a recorded tape, be sure to insert the plug of headphone into the headphones jack.
2. Press the numeric key "1" on the remote controller. (High speed edit will start.)
3. Press the tape stop (□) button on the remote controller after a while (after approx. 20 seconds) to stop the tape.
4. Press the rewind (◀◀) button on the remote controller. (Tape will be rewound.)
5. If the tape is automatically stopped at "00.00" position on the counter (refer to Fig. 2) and self check mode is not cancelled, the tape edit system circuit is proved to be normal.

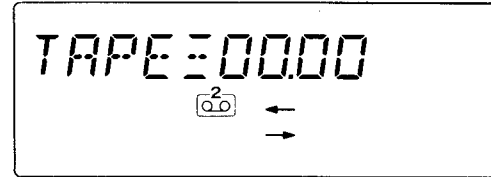


Fig. 2

Segment	Button	Segment	Button	Segment	Button	Segment	Button
①	AUTO CD RECORD	⑪	SET	⑳	FWD▷	㉑	DECK1
②	TAPE EDIT	⑫	FWD/+	㉒	DECK1/2	㉓	---
③	TAPE PAUSE	⑬	-/REV	㉔	TUNER/BAND	㉕	DECK2
④	TIMER	⑭	◀◀	㉖	▷/00	㉗	VOL -
⑤	PRESET EQ	⑮	▷▷	㉘	□/CLEAR	㉙	VOL +
⑥	MAIN MENU SELECT	⑯	◀REV	㉚	-/BN	㉛	CD
⑦	SUB EDIT SELECT	⑰	□	㉜	BN/+	㉝	COBRA TOP

Table 1

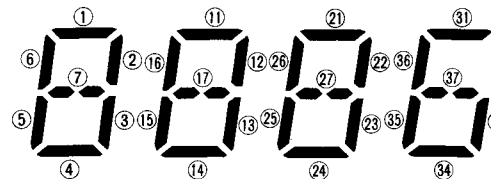


Fig. 3

CHECK OF MALFUNCTION OF SWITCHES (TACT SWITCHES)

1. Press the numeric key "3" on the remote controller.
2. All indicators on the LCD will disappear and back lights on the menu LED and LCD will flash on and off.
3. When the tact switches except POWER switch are pressed in sequence, the corresponding indicators will appear on the LCD as shown in Table 1 and Fig. 3.
 - Note:** Do not press POWER switch. If the switch is pressed, the unit is turned off and self check mode is cancelled.
4. When the display in Fig. 4 appears, all tact switches are normal. If any indicator does not appear on the LCD, the corresponding switch is considered abnormal.


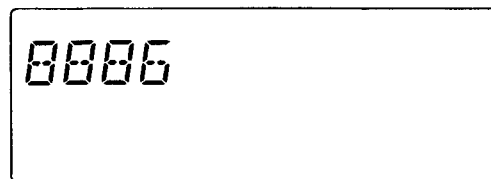


Fig. 4

CHECK OF TPS OPERATION

1. Insert a musical tape with no erase-prevention tabs into each tape deck 1 and 2. (Make the tape rewind till near the center position.)
 - Note:** If a tape with erase-prevention tabs is inserted, an error indicator will appear and self check mode is cancelled.)
2. Press the numeric key "7" on the remote controller. (This unit will start the following operations automatically.)



3. If the self check mode is not cancelled after all operations are finished, the TPS circuit is proved to be normal.

CHECK OF ALL INDICATORS ON THE LCD

1. Press the numeric key "8" on the remote controller.
2. All the LCD indicators will go on. (Refer to Fig. 5.)
 - If any indicator does not appear, the LCD or LCD drive circuit is considered abnormal.


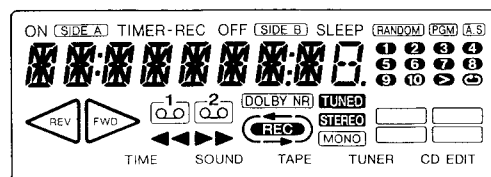



Fig. 5

Preparations for Check and Adjustment of P.C.B.

- Fabricate the measuring instrument as shown below to measure the audio output from the headphones jack for check and adjustment of the P.C.B.

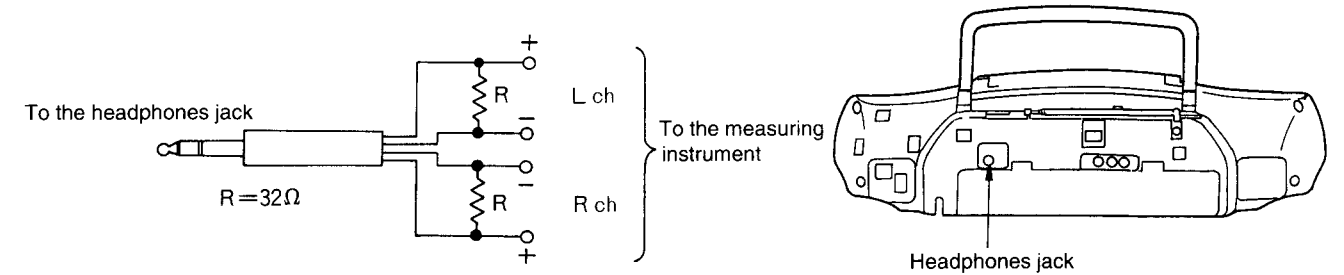


- When you measure the audio output from the speaker without using the measuring instrument for the headphones output, make connections as shown below.

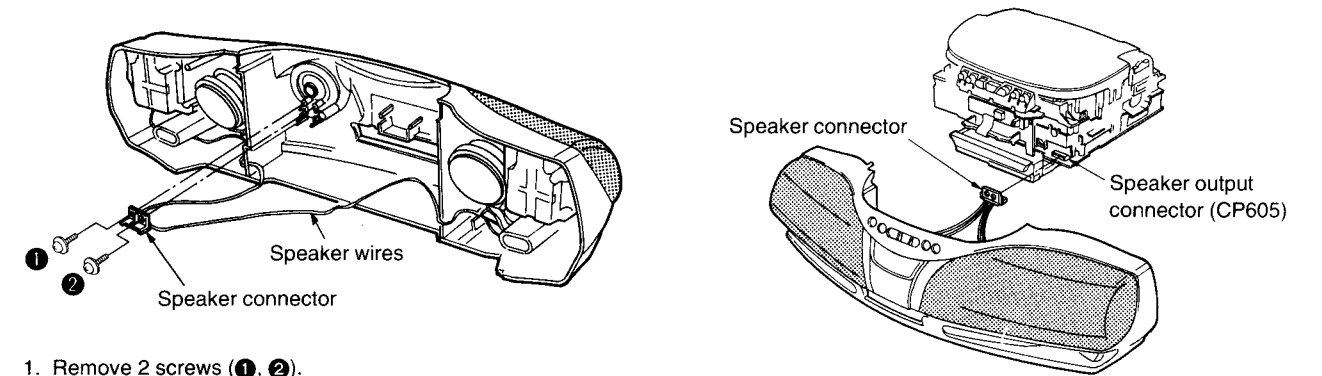

1. Remove 2 screws (①, ②).
2. Remove the speaker wires and the speaker connector from the front cabinet.
3. Connect the speaker connector to the speaker output connector (CP605).


- The following extension cable kit is necessary to check and adjust the unit's P.C.B.

RFKZ0048 (A set of 2 extension cables)

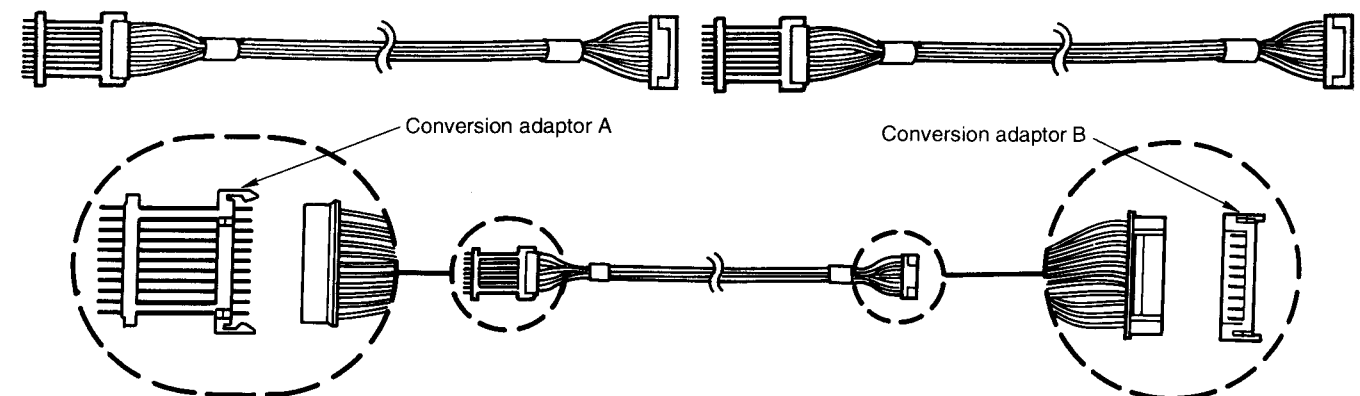

- Use the extension cable with the conversion adaptor A connected when checking and adjusting the mechanism control P.C.B.
 - Use the extension cable with the conversion adaptor B connected when checking and adjusting the tuner P.C.B.
- Note:** Use the extension cable without connecting the conversion adaptor B when checking and adjusting the mechanism control P.C.B.

- When the conversion adaptor for the extension cable is lost, it can be supplied as a single part. (Only cables can not be supplied.)

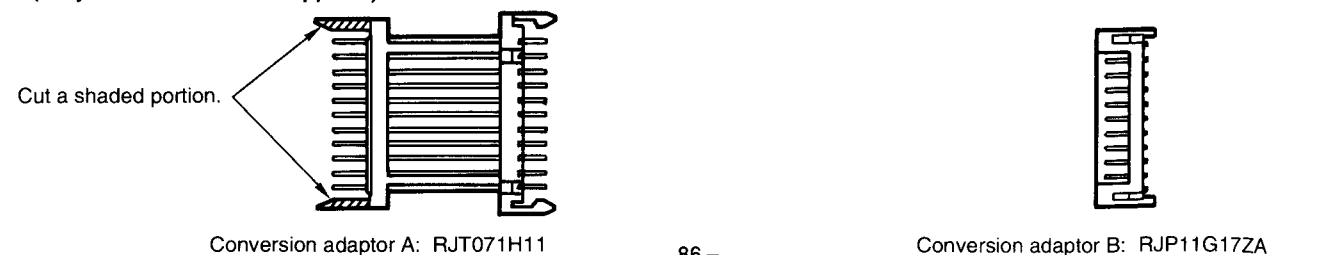


Conversion adaptor A: RJT071H11


Conversion adaptor B: RJP11G17ZA

●Check and Adjustment of the Tuner P.C.B.



1. Remove the main unit as explained on page 16 in the Disassembly Instructions. (Ref. No. 3 Removal of the Main Unit.)

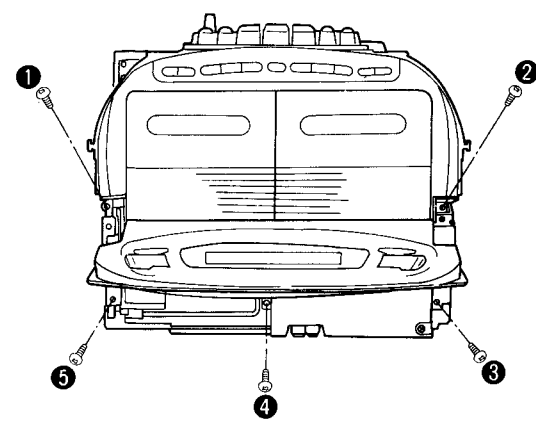


2. Remove 5 screws (1-5).

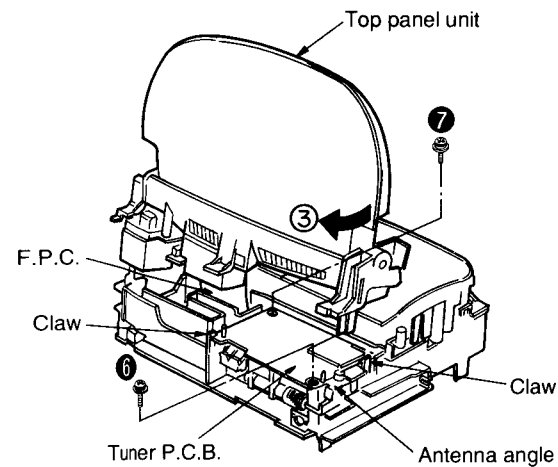

4. Remove the screw (6).
 5. Turn the top panel unit in the direction of the arrow (3) (be careful not to damage the F.P.C. and cables) and remove the screw (7).
 6. Release 2 claws and remove the tuner P.C.B. together with the antenna angle.
- Note:** Do not pull the cables and the F.P.C. to excess.

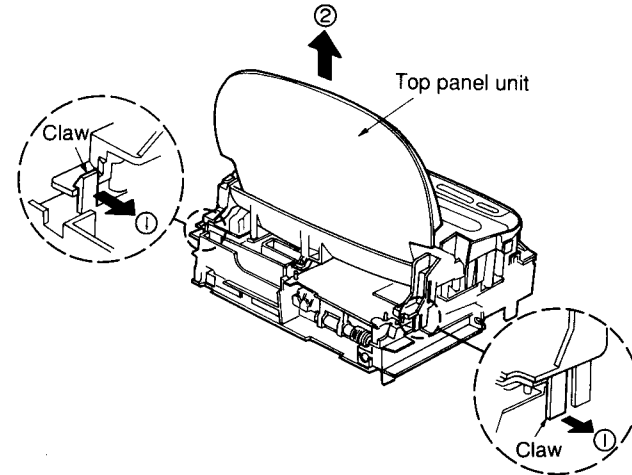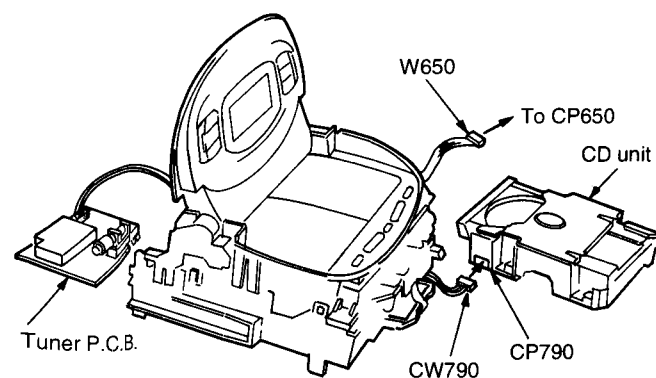

3. Release 2 claws in the direction of the arrows (1) and lift up the top panel unit in the direction of the arrow (2). (The unit can be lifted up just slightly as allowed by the length of the cables.)

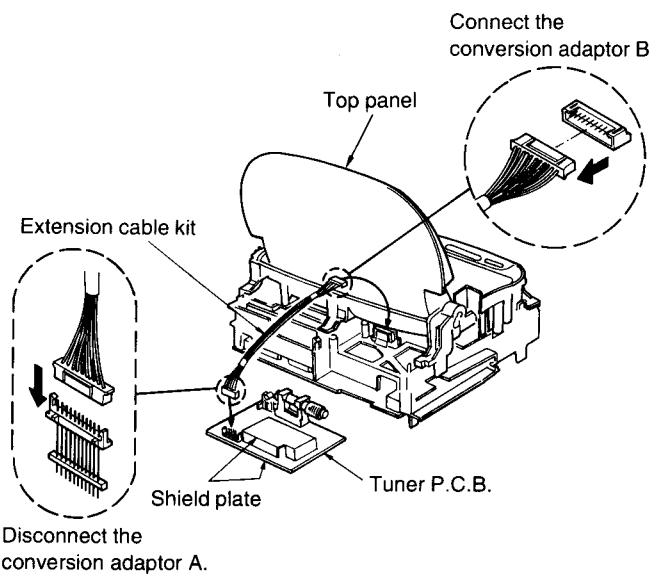

7. Install the top panel unit again.
8. Remove 2 shield plates.
9. Connect the extension cable kit.


10. Connect the cable (CW790) to the connector (CP790) on the CD unit. (If the connector CP790 on the CD unit is not connected, this unit may not operate normally.)
11. Connect the cable (W650) to the connector (CP650) on the power P.C.B.

●Check and adjust the tuner P.C.B. in this condition.

●Check and Adjustment of the Mechanism Control P.C.B.


1. Remove the mechanism unit as explained on page 19 in the Disassembly Instructions. (Ref. No. 12 Removal of the Mechanism Unit.)

2. Connect the extension cable kit.
3. Connect the cable (CW790) to the connector (CP790). (If the connector CP790 on the CD unit is not connected, this unit may not operate normally.)
4. Connect the cable (W650) to the connector (CP650) on the power P.C.B.

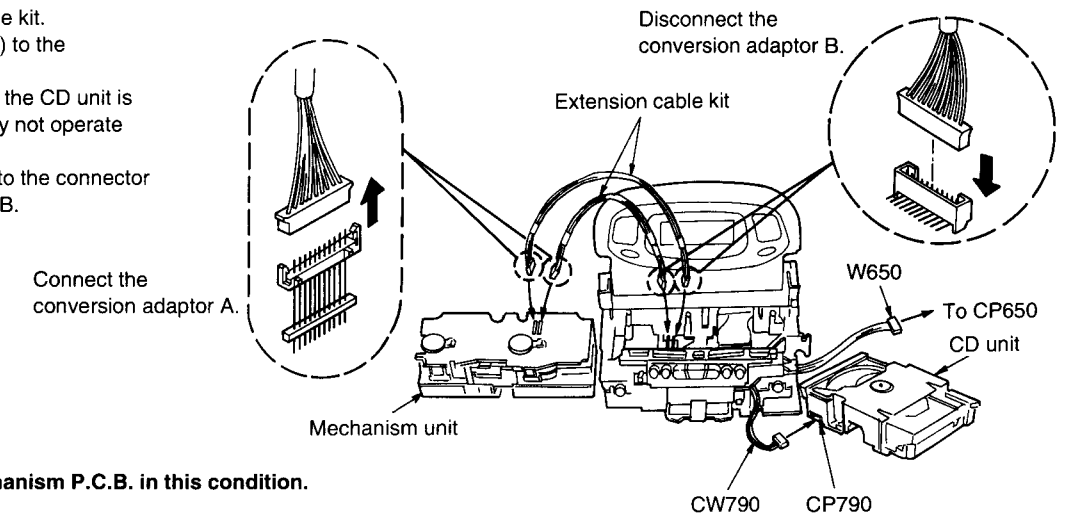


●Check and adjust the mechanism P.C.B. in this condition.

●Check and Adjustment of the CD P.C.B.

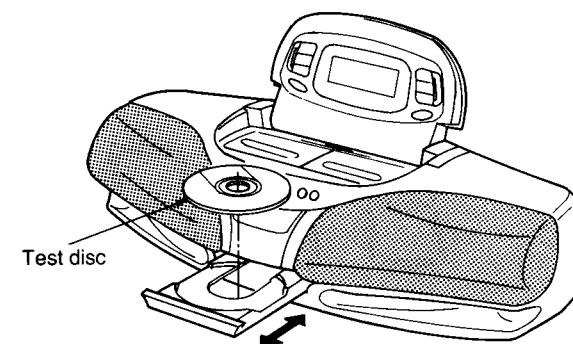

1. Turn the power on and load the test disc into this unit.
2. Remove the CD unit as explained on page 13 in the Disassembly Instructions. (Ref. No. 4 Removal of the CD Unit.)

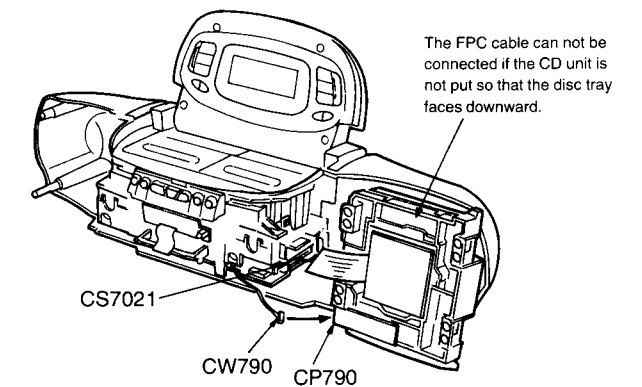


3. Connect the cable (CW790) to the connector (CP790) on the CD unit.
4. Connect the FPC cable from the CD unit to the connector (CS7021) on the main P.C.B. (Note that the extension cable kit RFKZ0009 can not be used.)


●Check and adjust the CD P.C.B. in this condition.

●Check of the Main P.C.B.

1. Remove the main unit as explained on page 16 in the Disassembly Instructions. (Ref. No. 3 Removal of the Main Unit.)

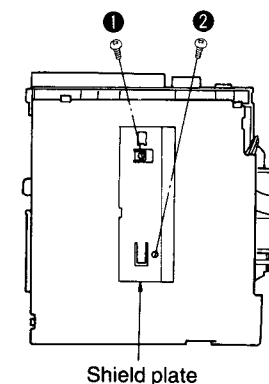

2. Remove 2 screws (1, 2) and the shield plate.

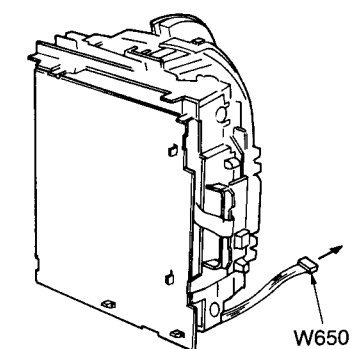


3. Connect the cable (W650) to the connector (CP650).


●Check the main P.C.B. in this condition.

●Check of the Top Panel Open/Close P.C.B.


1. Remove the mechanism unit as explained on page 19 in the Disassembly Instructions. (Ref. No. 12 Removal of the Mechanism Unit.)

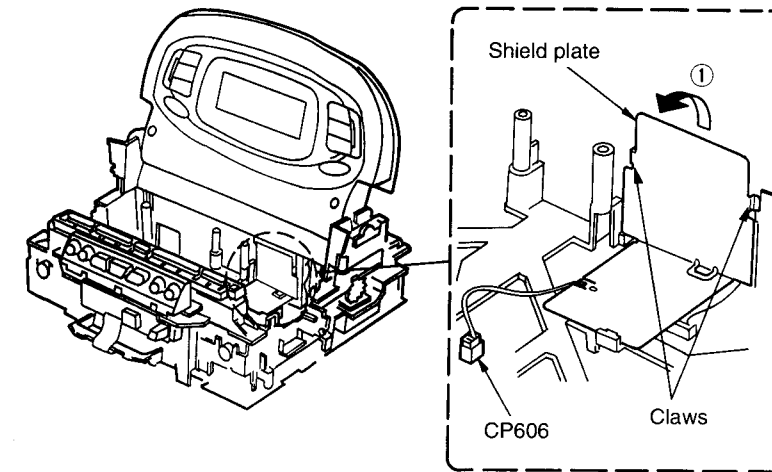


2. Disconnect the connector (CP606).
3. Remove the shield plate in the direction of the arrow ①.

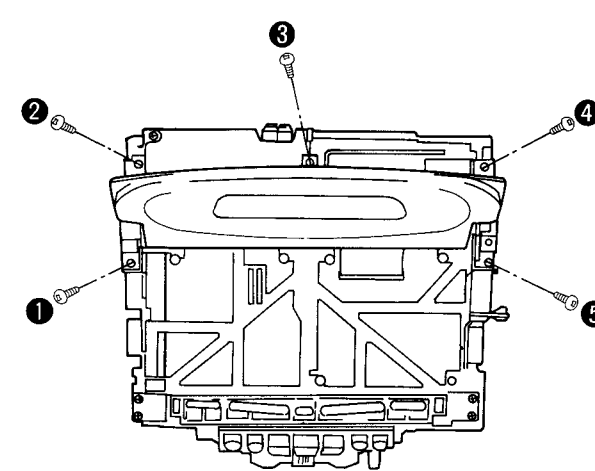

4. Remove 5 screws (①~⑤).

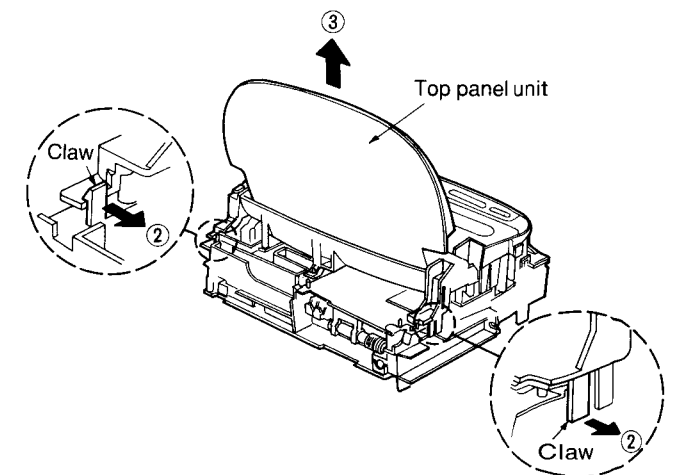

5. Release 2 claws in the direction of the arrows ②.
6. Lift up the top panel unit in the direction of the arrow ③.

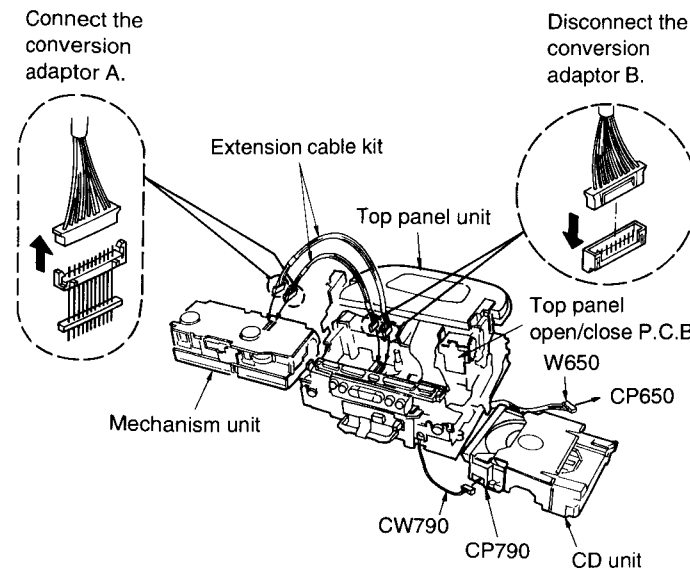


7. Put the top panel unit as shown in the left figure.
8. Connect the mechanism unit using the extension cable kit.
9. Connect the cable (CW790) to the connector (CP790) on the CD unit.
10. Connect the cable (W650) to the connector (CP650) on the power P.C.B.
11. Stand the mechanism unit.


●Check the top panel open/close P.C.B. in this condition.

●Check of the Top Panel Open/Close P.C.B.

1. Remove the mechanism unit as explained on page 19 in the Disassembly Instructions. (Ref. No. 12 Removal of the Mechanism Unit.)

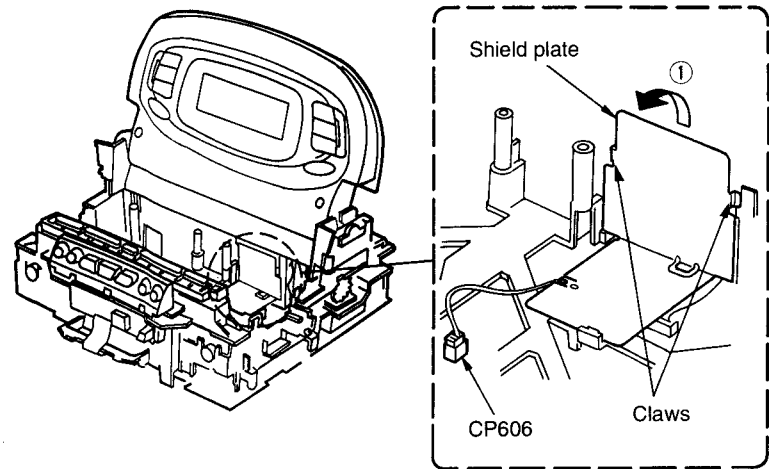


2. Disconnect the connector (CP606).
3. Remove the shield plate in the direction of the arrow ①.

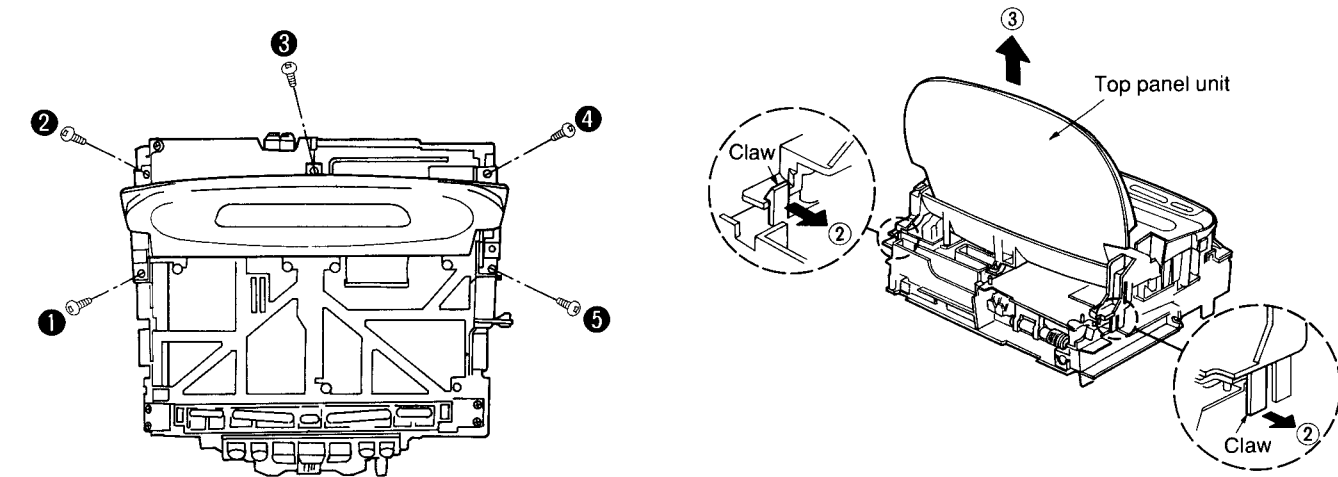

4. Remove 5 screws (①~⑤).

5. Release 2 claws in the direction of the arrows ②.
6. Lift up the top panel unit in the direction of the arrow ③.

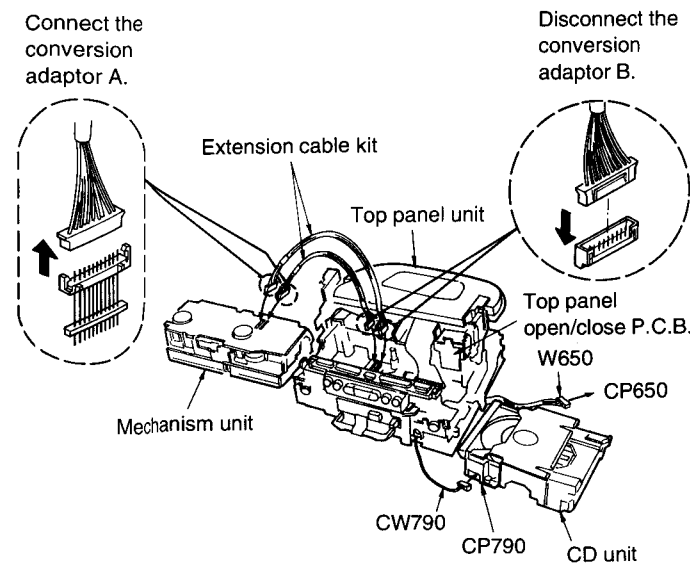


7. Put the top panel unit as shown in the left figure.
8. Connect the mechanism unit using the extension cable kit.
9. Connect the cable (CW790) to the connector (CP790) on the CD unit.
10. Connect the cable (W650) to the connector (CP650) on the power P.C.B.
11. Stand the mechanism unit.

●Check the top panel open/close P.C.B. in this condition.


●Check of the LCD P.C.B.

1. Remove the main unit as explained on page 16 in the Disassembly Instructions. (Ref. No. 3 Removal of the Main Unit.)

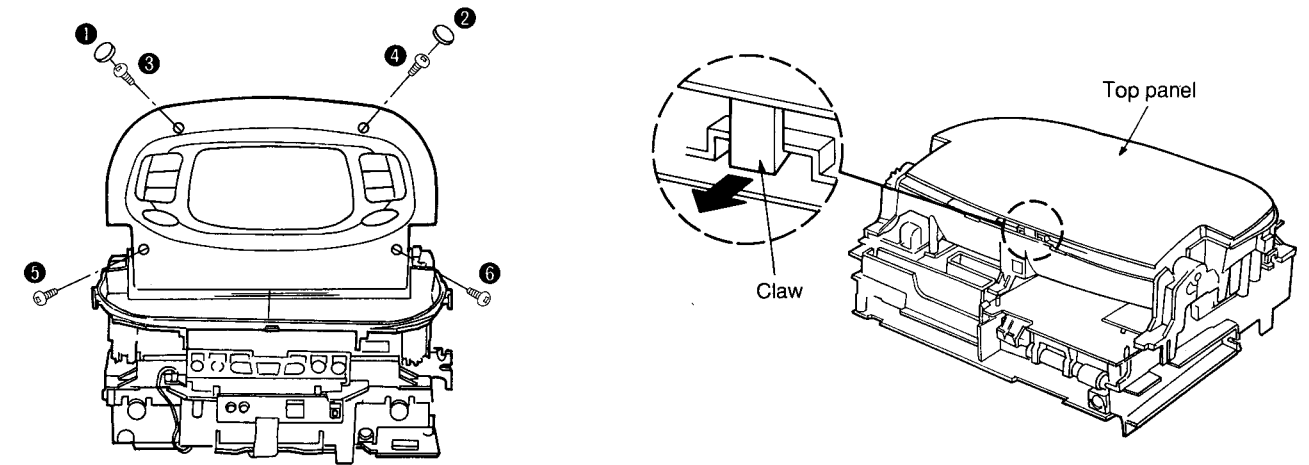


2. Remove 2 rubber caps (①, ②).
3. Remove 4 screws (③~⑥).


4. Shut the top panel and release the claw.

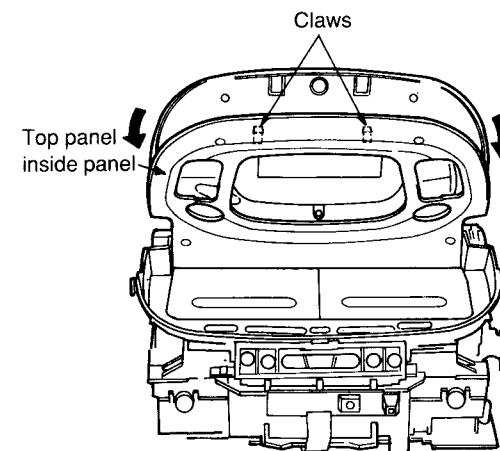

5. With the top panel half opened, release 2 claws inside the top panel.
6. Remove the top panel inside panel.

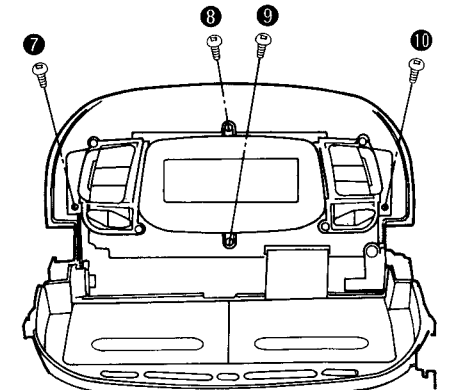

7. Remove 4 screws (⑦~⑩).

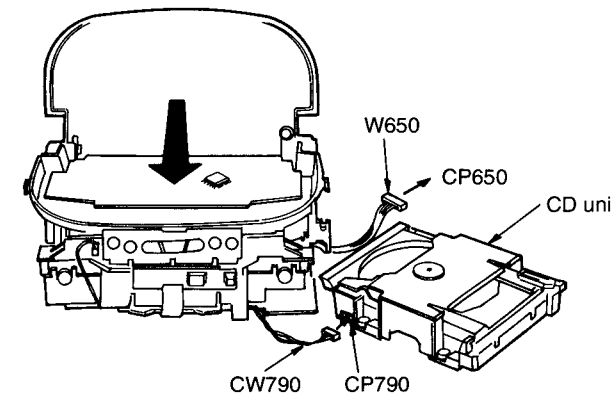

8. Connect the cable (CW790) to the connector (CP790) on the CD unit.
9. Connect the cable (W650) to the connector (CP650) on the power P.C.B.

●Check the LCD P.C.B. in this condition.

■ Measurements and Adjustments

<TUNER SECTION>

●ALIGNMENT INSTRUCTIONS

READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT

- Set power source voltage to 15 V DC.
- Set volume level to -12 dB.
- Set function to TUNER/MW or LW.
- Output of signal generator should be no higher than necessary to obtain an output reading.

●MW-RF ALIGNMENT (The parts other than the ones listed below are aligned at the factory before they are supplied. Therefore, alignment of those parts is unnecessary when used for replacement.)

SIGNAL GENERATOR or SWEEP GENERATOR		RADIO DIAL SETTING	INDICATOR (ELECTRONIC VOLTMETER or OSCILLOSCOPE)	ADJUSTMENT (Refer to Fig. 1.)	REMARKS
CONNECTIONS	FREQUENCY				
Fashion a loop of several turns of wire and radiate a signal into the loop ant. of receiver.	594 kHz	Tune to signal	Headphones Jack (32Ω) Fabricate the plug as shown in Page 86 and then connect the lead wires of the plug to the measuring instrument.	(*1) L2-1 (MW ANT Coil)	Adjust for maximum output. Adjust L2-1 by moving coil along the ferrite core.
"	1503 kHz	"	"	CT1 (MW ANT Trimmer)	Adjust for maximum output.

(*1) Fix antenna coil with wax after completing alignment.

●LW-RF ALIGNMENT

SIGNAL GENERATOR or SWEEP GENERATOR		RADIO DIAL SETTING	INDICATOR (ELECTRONIC VOLTMETER or OSCILLOSCOPE)	ADJUSTMENT (Refer to Fig. 1.)	REMARKS
CONNECTIONS	FREQUENCY				
Fashion a loop of several turns of wire and radiate a signal into the loop ant. of receiver.	153 kHz	Tune to signal	Headphones Jack (32Ω) Fabricate the plug as shown in page 86 and then connect the lead wires of the plug to the measuring instrument.	(*2) L2-2 (LW ANT Coil)	Adjust for maximum output. Adjust L2-2 by moving coil along the ferrite core.
Fashion a loop of several turns of wire and radiate a signal into the loop ant. of receiver.	270 kHz	Tune to signal	Headphones Jack (32Ω) Fabricate the plug as shown in page 86 and then connect the lead wires of the plug to the measuring instrument.	CT2 (LW ANT Trimmer)	Adjust for maximum output.

(*2) Fix antenna coil with wax after completing alignment.

●ALIGNMENT POINT

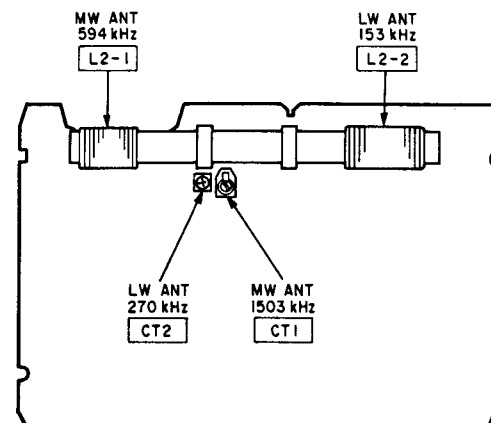


Fig. 1

<CASSETTE DECK SECTION>

●ALIGNMENT INSTRUCTION

READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT

- Set power source voltage to 15 V DC.
- Set volume control to -12 dB.
- Set function to TAPE.
- Output of signal generator should be no higher than necessary to obtain an output reading.

●HEAD AZIMUTH ALIGNMENT

TEST TAPE	INDICATOR (ELECTRONIC VOLTMETER or OSCILLOSCOPE)	ADJUSTMENT	SPECIFICATION	REMARKS
QZZCFM (8 kHz, -20 dB)	Headphones Jack (32Ω) Fabricate the plug shown in Page 86 and then connect the lead wires of the plug to the measuring instrument.	Azimuth Screw (Refer to Fig. 2.)	Maximum output	<ol style="list-style-type: none"> 1. Insert the test tape (QZZCFM) and start playback in the forward direction on DECK1. 2. Adjust the azimuth screw for maximum waveform on the oscilloscope and the similar output on L and R channels. 3. When adjusting the azimuth in the reverse direction, repeat the adjustment a several times because of a little slip on the forward direction side. 4. Adjust the azimuth on the DECK2 as well as the DECK1.

Cautions:

- Be sure to repalce the head azimuth adjustment screws (refer to Fig. 3) and remove the screw-locking bond left on the head base when readjusting the head azimuth.
- Fix the head azimuth adjustment screw using the screw-locking bond after adjusting the head azimuth.

●TAPE SPEED ALIGNMENT (Refer to page 94 when adjusting only tape speed.)

TEST TAPE	INDICATOR (FREQUENCY COUNTER)	ADJUSTMENT	REMARKS
QZZCWAT (3 kHz, -10 dB)	Headphones jack (32Ω) Fabricate the plug shown in page 86 and then connect the lead wires of the plug to the measuring instrument.	DECK2 HIGH SPEED ...VR302 DECK1 NORMAL SPEED ...VR303 DECK2 NORMAL SPEED ...VR301 (Refer to Fig. 4.)	<p>NORMAL SPEED ADJUSTMENT (DECK1) (Specification: 3000±40 Hz)</p> <ol style="list-style-type: none"> 1. Insert a test tape (QZZCWAT) in DECK1 and start playback in forward direction. 2. Adjust VR303 until the frequency is set to 3000±20 Hz on the frequency counter. 3. Check that the frequency is set to within ±40 Hz for playback in forward direction after playback in reverse direction. <p>HIGH SPEED ADJUSTMENT (DECK2) (Specification: F±100 Hz)</p> <ol style="list-style-type: none"> 4. Insert the test tape (QZZCWAT) in DECK1. 5. Insert the tape with erase-prevention tabs in DECK2. 6. Press TAPE EDIT switch twice. (High speed edit starts.) 7. This frequency is defined as "F". 8. Insert the test tape (QZZCWAT) in DECK2. (Do not insert test tape in DECK1.) 9. Press the numeric keys "4" and then "7" on the remote controller with holding tape stop (□) button on the unit. (This unit is set to self check mode and the display shown in Fig. 5 appears on the LCD.) 10. Press the numeric key "9" on the remote controller and start high speed playback in DECK2. 11. Adjust VR302 until the frequency is set to F±40 Hz. (Specification: 3000±40 Hz) <p>NORMAL SPEED ADJUSTMENT (DECK2) (Specification: 3000±40 Hz)</p> <ol style="list-style-type: none"> 12. Insert the test tape (QZZCWAT) in DECK2 and start playback. 13. Adjust VR301 until the frequency is set to 3000±20 Hz. 14. Check that the frequency is set to within ±40 Hz for playback in forward direction after playback in reverse direction.

●RECORD BIAS VOLTAGE CHECK

TEST TAPE	INDICATOR (ELECTRONIC VOLTMETER or OSCILLOSCOPE)	ADJUSTMENT	SPECIFICATION	REMARKS
Use METAL tape, CrO ₂ tape and Normal tape.	TP3 ...(+) TP4 ...(-) (Refer to Fig. 6.)	—	Normal ...16.0~19.0 mV CrO ₂ ...22.5~26.5 mV METAL ...32.0~37.0 mV	Insert the tape with erase-prevention tabs in DECK2 and start recording.

●PLAYBACK LEVEL ADJUSTMENT

TEST TAPE	INDICATOR (FREQUENCY COUNTER)	ADJUSTMENT	SPECIFICATION	REMARKS
QZZCFM (315 Hz, 0 dB)	TP5 ...Lch (+) TP6 ...(-) TP7 ...Rch (+) (Refer to Fig. 7.)	DECK1 Lch...VR101 Rch...VR201 DECK2 Lch...VR102 Rch...VR202 (Refer to Fig. 4.)	-11 dBV (280 mV) ±1 dBV	1. Insert a test tape (QZZCFM) and start playback. 2. Adjust VR until the electronic voltmeter reaches the value of -11 dBV (280 mV)±1 dBV.

●LOCATIONS OF ADJUSTMENTS

(With regard to the test points refer to the schematic diagrams and printed circuit board diagrams.)

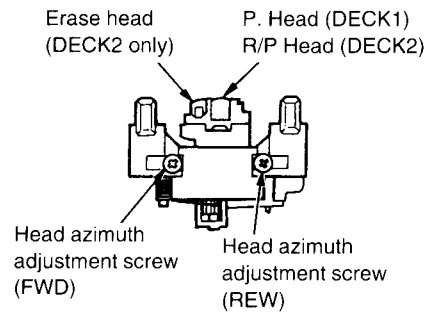


Fig. 2

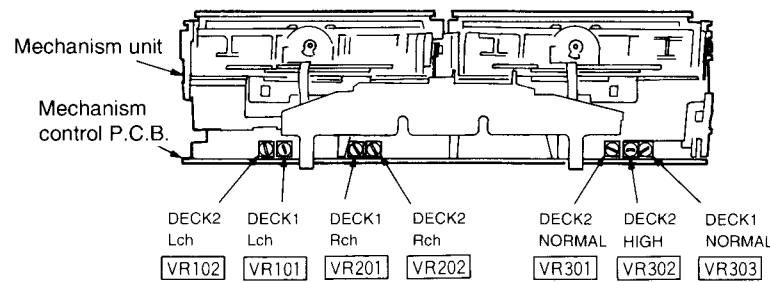


Fig. 4

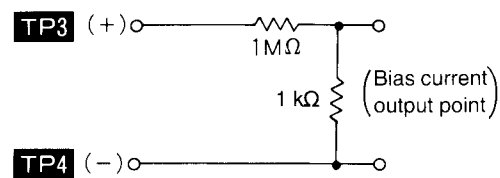


Fig. 6

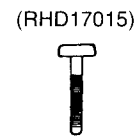


Fig. 3

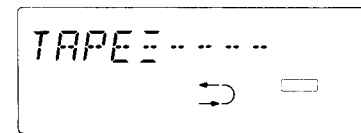


Fig. 5






Fig. 7



●WHEN ADJUSTING ONLY HEAD AZIMUTH

- Adjustment can be performed without disassembly when adjusting only the head azimuth.
- Note:** ●Be sure to replace the head azimuth adjustment screws (refer to Fig. 3) and remove the screw-locking bond left on the head base when readjusting the head azimuth. Otherwise, a fine adjustment is not possible.
- Fix the head azimuth adjustment screws using the screw-locking bond after adjusting the head azimuth.

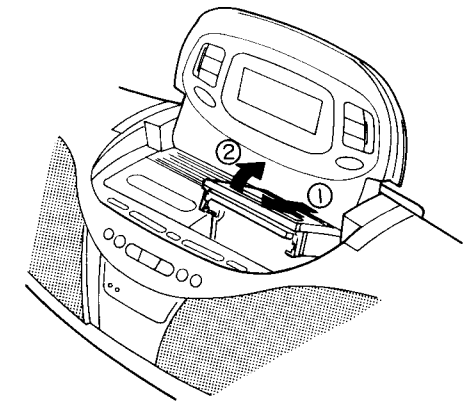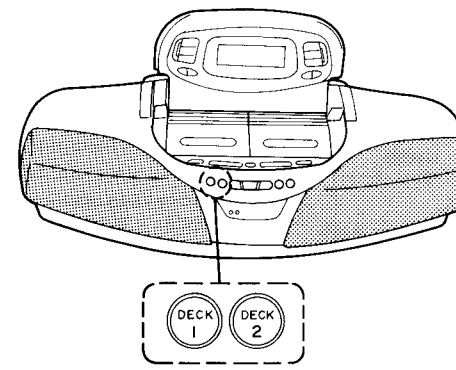

1. Connect the AC power cord of this unit to an AC outlet and turn the unit on. Press the cassette deck open button for on the deck whose head azimuth is to be adjusted and open the cassette cover.

2. Slide the cassette cover panel in the direction of the arrow ① and remove it in the direction of the arrow ②. (Though the figure below shows only DECK2, DECK1 is also removed in the same procedure.)

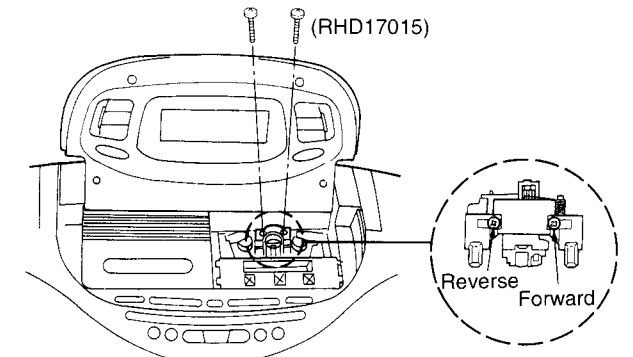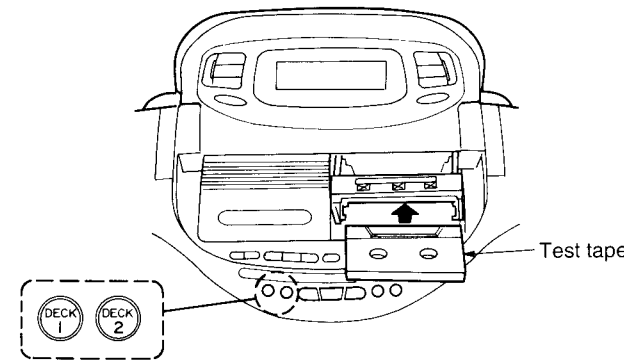


3. Insert a test tape (QZZCWAT) in DECK2 (or DECK1) and press DECK2 (or DECK1) button. And then shut the cassette cover.

4. Remove 2 head azimuth adjustment screws.
5. Remove screw-locking bond left on the head base.
6. After installing new screws (RHD17015), play back the test tape and adjust the head azimuth.
7. After adjustment, fix the screws with screw-locking bond.

●WHEN ADJUSTING ONLY TAPE SPEED

1. Remove the main unit as explained on page 12 in the Disassembly Instructions. (Ref. No. 3 Removal of the Main Unit.)

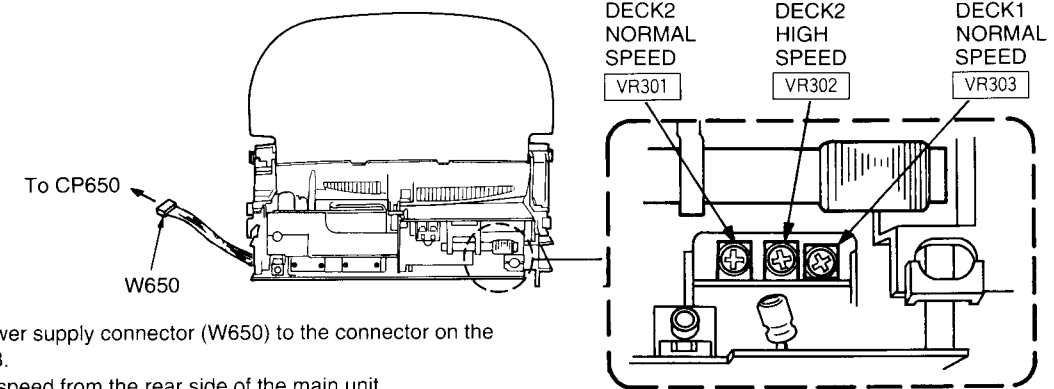

2. Connect power supply connector (W650) to the connector on the power P.C.B.
3. Adjust tape speed from the rear side of the main unit. (Refer to page 88 for adjustment procedure.)


<CD SECTION>

Caution:


It is very dangerous to look at or touch the laser beam. (Laser radiation is invisible.)
With the unit turned "on", laser radiation is emitted from the pickup lens.
Avoid exposure to the laser beam, especially when performing adjustments.

●Preparation for Adjustment


1. Set up the unit following the procedure described in "Check and Adjustment for the CD P.C.B.". (See page 84.)
2. After completing the setup procedure, switch the unit off then switch it on again (to adjust the unit with the CD unit placed in an upright position).

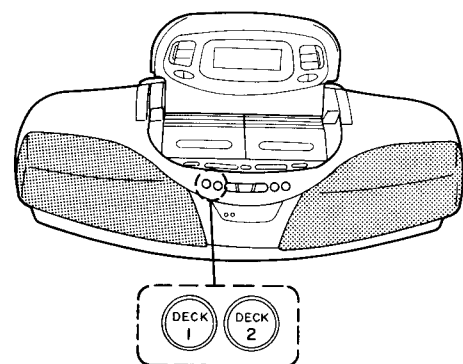


1. Connect the AC power cord of this unit to an AC outlet and turn the unit on. Press the cassette deck open button for on the deck whose head azimuth is to be adjusted and open the cassette cover.

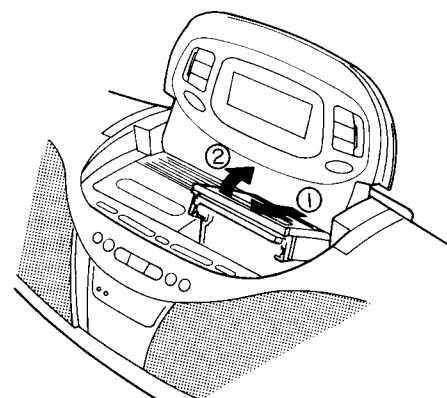

2. Slide the cassette cover panel in the direction of the arrow ① and remove it in the direction of the arrow ②. (Though the figure below shows only DECK2, DECK1 is also removed in the same procedure.)

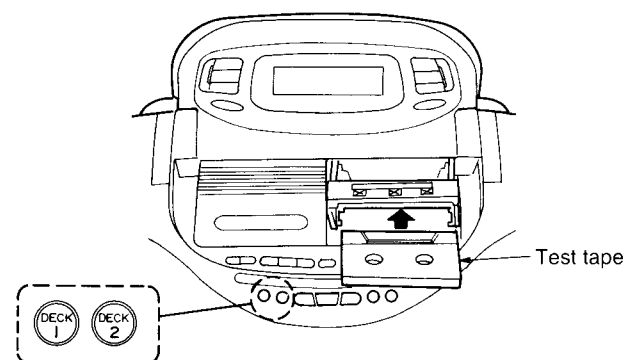


3. Insert a test tape (QZZCWAT) in DECK2 (or DECK1) and press DECK2 (or DECK1) button. And then shut the cassette cover.

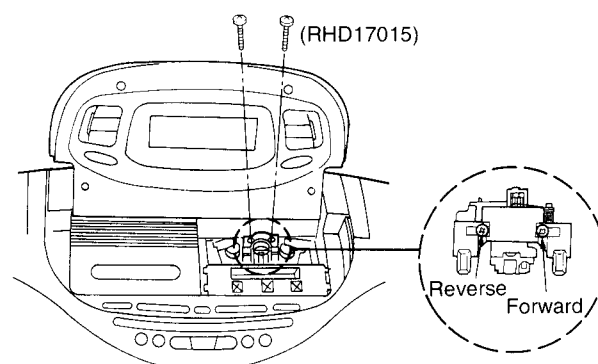

4. Remove 2 head azimuth adjustment screws.
5. Remove screw-locking bond left on the head base.
6. After installing new screws (RHD17015), play back the test tape and adjust the head azimuth.
7. After adjustment, fix the screws with screw-locking bond.

• WHEN ADJUSTING ONLY TAPE SPEED

1. Remove the main unit as explained on page 12 in the Disassembly Instructions. (Ref. No. 3 Removal of the Main Unit.)

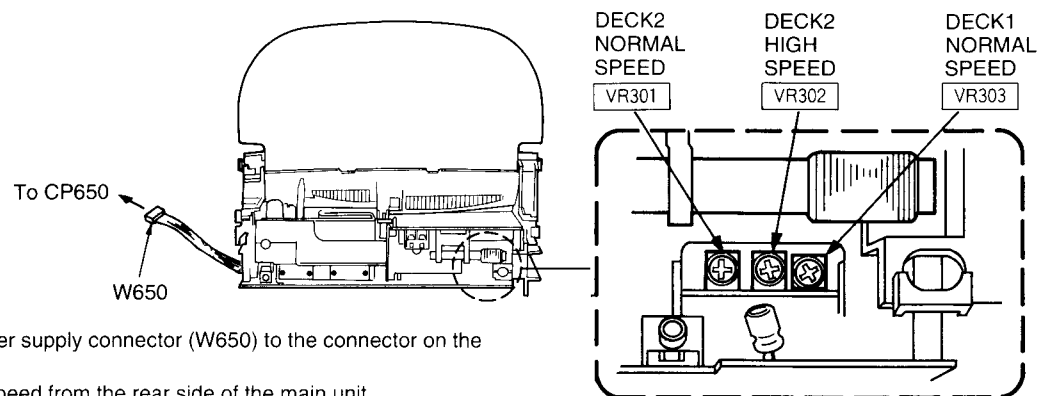

2. Connect power supply connector (W650) to the connector on the power P.C.B.
3. Adjust tape speed from the rear side of the main unit. (Refer to page 88 for adjustment procedure.)

<CD SECTION>

Caution:

It is very dangerous to look at or touch the laser beam. (Laser radiation is invisible.)
With the unit turned "on", laser radiation is emitted from the pickup lens.
Avoid exposure to the laser beam, especially when performing adjustments.

• Preparation for Adjustment

1. Set up the unit following the procedure described in "Check and Adjustment for the CD P.C.B.". (See page 84.)
2. After completing the setup procedure, switch the unit off then switch it on again (to adjust the unit with the CD unit placed in an upright position).

Measuring Instruments and Special Tools

- Test disc
 1. Playability test disc (SZZP1054C)
 2. Uneven test disc (SZZP1056C)

- Hexagonal wrench (M2.0) (SZZP1101C)
- Oscilloscope

(1) MECHANICAL ADJUSTMENT


- When the traverse deck is replaced, making adjustments is not necessary. (The traverse deck ass'y is already adjusted.)
- Make adjustments to improve playability when the traverse deck has not been replaced. Make the electrical adjustments first.

1. Connect the oscilloscope's CH. 1 probe across **TJ701** (+) and **TJ702** (VREF) on the Servo P.C.B.

Oscilloscope setting:

VOLT 200 mV
SWEEP 0.5 μ sec
Input coupling AC

2. Switch the player power ON, and play track 19 on the test disc (SZZP1056C).
3. Leave the player in Play mode and place it as shown in the figure on the right.
4. Alternately adjust the two mechanical adjusting screws with the 2.0 mm allen wrench (SZZP1101C) until the RF signal amplitude on the oscilloscope is maximize. (Shown in Fig. 8)
5. After completing the adjustment, lock the **mechanical adjustments** with lock paint (RZZ0L01).

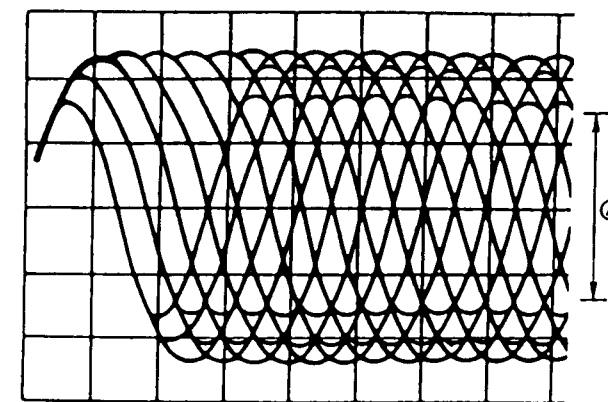

A Maximize the amplitude.

• NEW DIGITAL SERVO CIRCUIT

A digital servo circuit employed in this unit is a new type circuit. All adjustment VRs, which are equipped with conventional digital servo circuits, are removed from the electric section. Therefore, only mechanical adjustments are necessary.

(2) CHECK OF PLAY OPERATION AFTER ADJUSTMENT

• Checking Skip Search

1. Play an ordinary musical program disc.
2. Press the skip button to check for normal skip search operation (in both the forward and reverse directions).

• Checking Manual Search

1. Play an ordinary musical program disc.
2. Press the manual search button to check for smooth manual search operations at either low or high speed (in both the forward and reverse directions).

• Checking playability

1. Play the 0.7 mm black dot and the 0.7 mm wedge on the test disc (SZZP1054C) and verify that no sound skip or noise occurs.
2. Play the middle tracks of the uneven test disc and verify that no sound skip or noise occurs.

• Locations of Adjustments


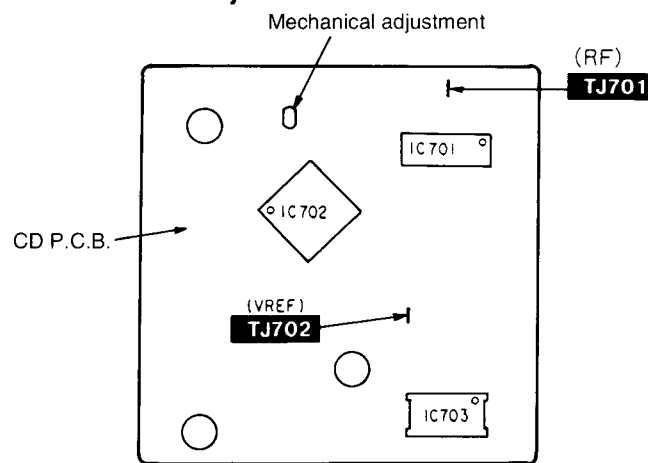


Fig. 8

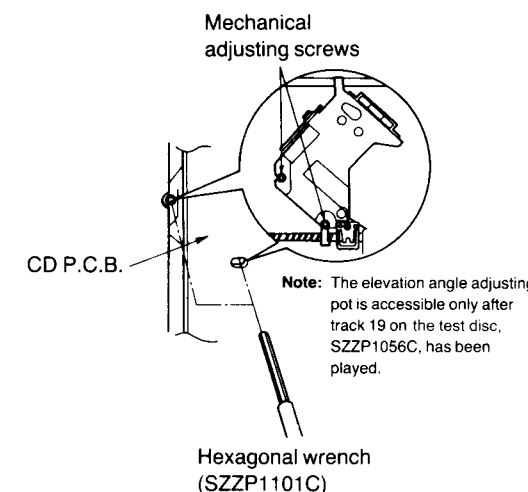

Note: The elevation angle adjusting pot is accessible only after track 19 on the test disc, SZZP1056C, has been played.

Hexagonal wrench (SZZP1101C)

Fig. 9

■ Function of IC Terminals

●IC701 (AN8802SCE1V)

Pin No.	Terminal Name	I/O	Function
1	PDAD	I	PD A channel signal input with delay
2	PDA	I	PD A channel signal input without delay
3	LPD	I	Laser PD connection
4	LD	O	Power supply for LD driving
5	AMPI	I	RF amplifier input
6	Vcc	I	Power supply connection
7	AMPO	O	RF amplifier output (no use, open)
8	CAGC	I	AGC loop filter connection
9	ARF	O	RF AGC output
10	CENV	I	Capacitor connection for RF detection
11	CEA	I	Capacitor connection for HPF amplifier
12	GND	—	Ground connection
13	LDON	I	ON/OFF input of LD APC ("H": ON, "L": OFF)
14	TES	I	Tracking error shunt signal input ("H": shunt)
15	PLAY	I	Play signal input ("H": PLAY)
16	WVEL	I	WVEL control
17	BDO	O	BDO output
18	/RFDET	O	NRFDET output
19	CROSS	O	CROSS output
20	OFTR	O	OFTR output
21	VDET	O	VDET output
22	ENV	O	ENV output
23	TEBPF	I	Vibration detection input
24	TE	O	Tracking error output
25	FE	O	Focus error output
26	PTO	O	Potential amplifier output (no use, open)
27	PTI	I	Potential amplifier inversion input (no use, open)
28	TBAL	I	Tracking balance input
29	FBAL	I	Focus balance input
30	VREF	O	VREF output
31	PDB	I	PD B channel signal input without delay
32	PDBD	I	PD B channel signal input with delay

●IC702 (MN66271RA)

Pin No.	Terminal Name	I/O	Function
1	BCLK	O	Bit clock output for serial data (no use, open)
2	LRCK	O	L/R identification signal output (no use, open)
3	SRDATA	O	Serial data output (no use, open)
4	DV _{DD1}	I	Power supply input (for digital circuit)
5	DV _{SS1}	—	GND (for digital circuit)
6	TX	O	Digital audio interface signal output
7	MCLK	I	Microprocessor command clock signal input (Latches data at first transition)
8	MDATA	I	Microprocessor command data signal input
9	MLD	I	Microprocessor command load signal input
10	SENSE	O	Sence signal output (OFT, FESL, MAGEND, NAJEND, POSAD, SFG)
11	/FLOCK	O	Focus servo feeding signal output ("L": Feed)
12	/TLOCK	O	Tracking servo feeding signal output ("L": Feed)
13	BLKCK	O	Sub-code block clock signal output (fBLKCK = 75 Hz during normal playback)
14	SQCK	I	External clock signal input for sub-code Q register
15	SUBQ	O	Sub-code Q code output
16	DMUTE	I	Muting input ("H": Mute)
17	STAT	O	Status signal output (CRC, CUE, CLVS, TTSTVP, FCLV, SQCK)
18	/RST	I	Reset input
19	SMCK	O	1/2-divided clock signal of crystal oscillating at MSEL = "H" (fSMCK = 8.4672 MHz) 1/4-divided clock signal of crystal oscillating at MSEL = "L" (fSMCK = 4.2336 MHz)
20	PMCK	O	1/192-divided clock signal of crystal oscillating (fPMCK = 88.2 KHz) (no use, open)
21	TRV	O	Traverse forced feed output
22	TVD	O	Traverse drive output
23	PC	O	Spindle motor ON signal output ("L": ON)
24	ECM	O	Spindle motor drive signal output (forced mode output)
25	ECS	O	Spindle motor drive signal output (servo error signal output)
26	KICK	O	Kick pulse output
27	TRD	O	Tracking drive output
28	FOD	O	Focus drive output

Pin No.	Terminal Name	I/O	Function
29	VREF	I	D/A (drive) output (TVD, ECS, TRD, FOD, FBAL, TBAL) Reference voltage input
30	FBAL	I	Focus balance adjustment output
31	TBAL	O	Tracking balance adjustment output
32	FE	I	Focus error signal input (analog input)
33	TE	I	Tracking error signal input (analog input)
34	RFENV	I	RF envelope signal input
35	VDET	I	Vibration detection signal input ("H": detection)
36	OFT	I	Off-track signal input ("H": off track)
37	TRCRS	I	Track cross signal input
38	/RFDET	I	RF detection signal input ("L": detection)
39	BDO	I	Dropout signal input ("H": Dropout)
40	LDON	O	Laser on signal output ("H": ON)
41	TES	O	Tracking error shunt signal output ("H": shunt)
42	PLAY	O	Play signal out ("H": PLAY)
43	WVEL	O	Double speed status signal output ("H": Double speed)
44	ARF	I	RF signal input
45	IREF	I	Reference current input
46	DRF	—	DSL bias (no use, open)
47	DSLIF	I/O	DSL loop filter
48	PLLF	I/O	PLL loop filter
49	VCOF	—	VCO loop filter (no use, open)
50	AVDD2	I	Power supply input (for analog circuit)
51	AVSS2	—	GND (for analog circuit)
52	EFM	—	EFM signal output (not use, open)
53	PCK	—	PLL extraction clock output (fPCK = 4.321 MHz during normal playback) (no use, open)
54	PDO	—	Phase comparison signal of EFM and PCK signals (no use, open)
55	SUBC	—	Sub-code serial data output (no use, open)
56	SBCK	I	Clock input for sub-code serial data (no use, GND)
57	V _{SS}	—	GND
58	X1	I	Crystal oscillating circuit input (f = 16.9344 MHz)
59	X2	O	Crystal oscillation circuit output (f = 16.9344 MHz)
60	VDD	I	Power supply input (for oscillating circuit)
61	BYTCK	—	Byte clock output (no use, open)

Pin No.	Terminal Name	I/O	Function
62	/CLDCK	—	Sub-code frame clock signal output (fCLDCK = 7.35 kHz during normal playback) (no use, open)
63	FCLK	—	Crystal frame clock signal output (fFCLK = 7.35 kHz, double = 14.7 kHz)
64	PFLAG	—	Interpolation flag output ("H": Interpolation) (no use, open)
65	FLAG	—	Flage output (no use, open)
66	CLVS	—	Spindle servo phase synchronizing signal output ("H": CLV, "L": rough servo) (no use, open)
67	CRC	—	Sub-code CRC checked output ("H": OK, "L": NG) (no use, open)
68	DEMPH	—	De-emphasis ON signal output ("H": ON) (no use, open)
69	RESY	—	Frame resynchronizing signal output (no use, open)
70	/RST2	I	Reset input through MASH circuit ("L": Reset)
71	/TEST	I	Test input
72	AVDD1	I	Power supply input (for analog circuit)
73	OUTL	O	Left channel audio signal output
74	AVSS1	—	GND
75	OUTR	O	Right channel audio signal output
76	RSEL	I	RF signal polarity assignment input (at "H" level, RSEL = "H"; at "L" level, RSEL = L)
77	CSEL	I	Crystal oscillating frequency designation input ("L": 16.9344 MHz, "H": 33/8688 MHz)
78	PSEL	—	Test input (normally, "L") (no use, GND)
79	MSEL	—	Output frequency switching for SMCK terminal "H": SMCK = 8.4672 MHz "L": SMCK = 4.2336 MHz (no use, GND)
80	SSEL	I	Output mode switching of SUBQ terminal ("H": Q code buffer mode)

●IC703

Pin No.	Terminal Name	I/O	Function
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			

Pin No.	Terminal Name	I/O	Function
29	VREF	I	D/A (drive) output (TVD, ECS, TRD, FOD, FBAL, TBAL) Reference voltage input
30	FBAL	I	Focus balance adjustment output
31	TBAL	O	Tracking balance adjustment output
32	FE	I	Focus error signal input (analog input)
33	TE	I	Tracking error signal input (analog input)
34	RFENV	I	RF envelope signal input
35	VDET	I	Vibration detection signal input ("H": detection)
36	OFT	I	Off-track signal input ("H": off track)
37	TRCRS	I	Track cross signal input
38	/RFDET	I	RF detection signal input ("L": detection)
39	BDO	I	Dropout signal input ("H": Dropout)
40	LDON	O	Laser on signal output ("H": ON)
41	TES	O	Tracking error shunt signal output ("H": shunt)
42	PLAY	O	Play signal out ("H": PLAY)
43	WVEL	O	Double speed status signal output ("H": Double speed)
44	ARF	I	RF signal input
45	IREF	I	Reference current input
46	DRF	—	DSL bias (no use, open)
47	DSLFL	I/O	DSL loop filter
48	PLLFL	I/O	PLL loop filter
49	VCOF	—	VCO loop filter (no use, open)
50	AVDD2	I	Power supply input (for analog circuit)
51	AVSS2	—	GND (for analog circuit)
52	EFM	—	EFM signal output (not use, open)
53	PCK	—	PLL extraction clock output (fPCK=4.321 MHz during normal playback) (no use, open)
54	PDO	—	Phase comparison signal of EFM and PCK signals (no use, open)
55	SUBC	—	Sub-code serial data output (no use, open)
56	SBCK	I	Clock input for sub-code serial data (no use, GND)
57	Vss	—	GND
58	X1	I	Crystal oscillating circuit input (f=16.9344 MHz)
59	X2	O	Crystal oscillation circuit output (f=16.9344 MHz)
60	VDD	I	Power supply input (for oscillating circuit)
61	BYTCK	—	Byte clock output (no use, open)

Pin No.	Terminal Name	I/O	Function
62	/CLDCK	—	Sub-code frame clock signal output (fCLDCK=7.35 kHz during normal playback) (no use, open)
63	FCLK	—	Crystal frame clock signal output (fFCLK=7.35 kHz, double=14.7 kHz)
64	PFLAG	—	Interpolation flag output ("H": Interpolation) (no use, open)
65	FLAG	—	Flage output (no use, open)
66	CLVS	—	Spindle servo phase synchronizing signal output ("H": CLV, "L": rough servo) (no use, open)
67	CRC	—	Sub-code CRC checked output ("H": OK, "L": NG) (no use, open)
68	DEMPH	—	De-emphasis ON signal output ("H": ON) (no use, open)
69	RESY	—	Frame resynchronizing signal output (no use, open)
70	/RST2	I	Reset input through MASH circuit ("L": Reset)
71	/TEST	I	Test input
72	AVDD1	I	Power supply input (for analog circuit)
73	OUTL	O	Left channel audio signal output
74	AVSS1	—	GND
75	OUTR	O	Right channel audio signal output
76	RSEL	I	RF signal polarity assignment input (at "H" level, RSEL="H"; at "L" level, RSEL=L)
77	CSEL	I	Crystal oscillating frequency designation input ("L": 16.9344 MHz, "H": 33/8688 MHz)
78	PSEL	—	Test input (normally, "L") (no use, GND)
79	MSEL	—	Output frequency switching for SMCK terminal "H": SMCK=8.4672 MHz "L": SMCK=4.2336 MHz (no use, GND)
80	SSEL	I	Output mode switching of SUBQ terminal ("H": Q code buffer mode)

●IC703 (AN8389SE1)

Pin No.	Terminal Name	I/O	Function
1	Vcc	I	Power supply
2	VREF	I	VREF input
3	IN4	I	Motor driver (4) input
4	IN3	I	Motor driver (3) input
5	GND	—	Ground connection
6	NC	—	No connection
7	NRESET	I	Reset input
8	GND	—	Ground connection
9	IN2	I	Motor driver (2) input
10	PC2	I	PC2 (power cut) input
11	IN1	I	Motor driver (1) input
12	PC1	I	PC1 (power cut) input (no use, GND)
13	PVCC1	I	Power supply (1) for driver
14	PGND1	—	Ground connection (1) for driver
15	D1-	O	Motor driver (1) reverse-action output
16	D1+	O	Motor driver (1) forward-action output
17	D2-	O	Motor driver (2) reverse-action output
18	D2+	O	Motor driver (2) forward-action output
19	D3-	O	Motor driver (3) reverse-action output
20	D3+	O	Motor driver (3) forward-action output
21	D4-	O	Motor driver (4) reverse-action output
22	D4+	O	Motor driver (4) forward-action output
23	PGND2	—	Ground connection (2) for driver
24	PVCC2	I	Power supply (2) for driver

●IC2 (XLU2616F-E1)

Pin No.	Terminal Name	I/O	Function
1	X OUT	O	Connect to ceramic oscillator
2	X IN	I	
3	CE	I	PLL tuner strobe signal input
4	DA	I	PLL tuner data input
5	CL	I	PLL tuner clock signal input
6	TUN	O	Tuner sending mode output
7	SD	I	Broadcast receiving signal input
8	IF IN	I	IF signal input
9	P3	O	Tuner mono/stereo switching signal output
10	P0	O	Power control signal output (for AM circuit)
11	P1	O	Power control signal output (for FM circuit)
12	P2	—	—
13	AM IN	I	AM OSC signal input
14	FM IN	I	FM OSC signal input
15	V _{DD}	I	Power supply input (+9 V)
16	PD1	O	Variable capacitor-diode control signal output
17	PD2	—	—
18	GND	—	GND

●RECORD BIAS VOLTAGE CHECK

TEST TAPE	INDICATOR (ELECTRONIC VOLTMETER or OSCILLOSCOPE)	ADJUSTMENT	SPECIFICATION	REMARKS
Use METAL tape, CrO ₂ tape and Normal tape.	TP3 ...(+) TP4 ...(-) (Refer to Fig 6.)	—	Normal ...16.0~19.0 mV CrO ₂ ...22.5~26.5 mV METAL ...32.0~37.0 mV	Insert the tape with erase-prevention tabs in DECK2 and start recording.

●PLAYBACK LEVEL ADJUSTMENT

TEST TAPE	INDICATOR (FREQUENCY COUNTER)	ADJUSTMENT	SPECIFICATION	REMARKS
QZZCFM (315 Hz, 0 dB)	TP5 ...Lch (+) TP6 ...(-) TP7 ...Rch (+) (Refer to Fig. 7.)	DECK1 Lch...VR101 Rch...VR201 DECK2 Lch...VR102 Rch...VR202 (Refer to Fig. 4.)	-11 dBV (280 mV) ±1 dBV	1. Insert a test tape (QZZCFM) and start playback. 2. Adjust VR until the electronic voltmeter reaches the value of -11 dBV (280 mV)±1 dBV.

●LOCATIONS OF ADJUSTMENTS

(With regard to the test points refer to the schematic diagrams and printed circuit board diagrams.)

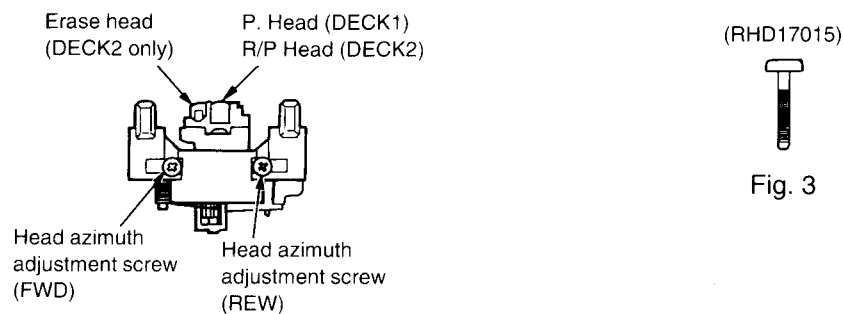


Fig. 2

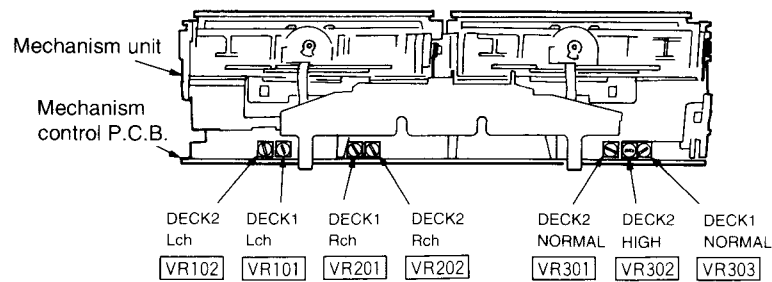


Fig. 4

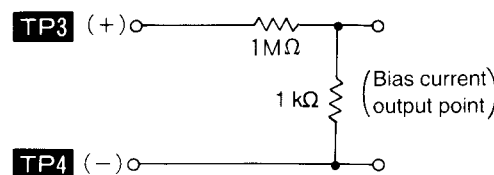


Fig. 6

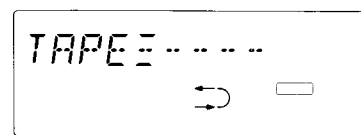


Fig. 5





Fig. 7

●WHEN ADJUSTING ONLY HEAD AZIMUTH


●Adjustment can be performed without disassembly when adjusting only the head azimuth.

Note: ●Be sure to replace the head azimuth adjustment screws (refer to Fig. 3) and remove the screw-locking bond left on the head base when readjusting the head azimuth. Otherwise, a fine adjustment is not possible.


●Fix the head azimuth adjustment screws using the screw-locking bond after adjusting the head azimuth.

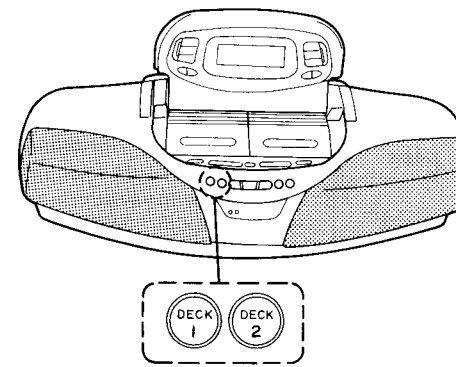


1. Connect the AC power cord of this unit to an AC outlet and turn the unit on. Press the cassette deck open button for on the deck whose head azimuth is to be adjusted and open the cassette cover.

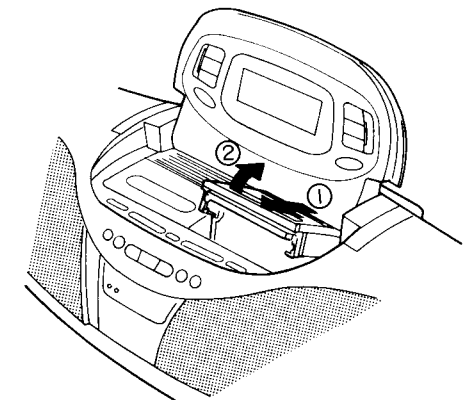

2. Slide the cassette cover panel in the direction of the arrow ① and remove it in the direction of the arrow ②. (Though the figure below shows only DECK2, DECK1 is also removed in the same procedure.)

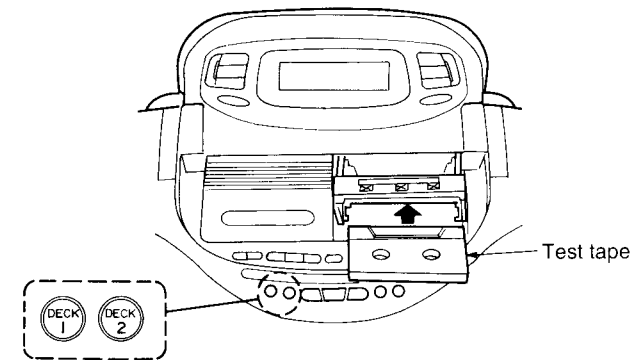


3. Insert a test tape (QZZCWAT) in DECK2 (or DECK1) and press DECK2 (or DECK1) button. And then shut the cassette cover.

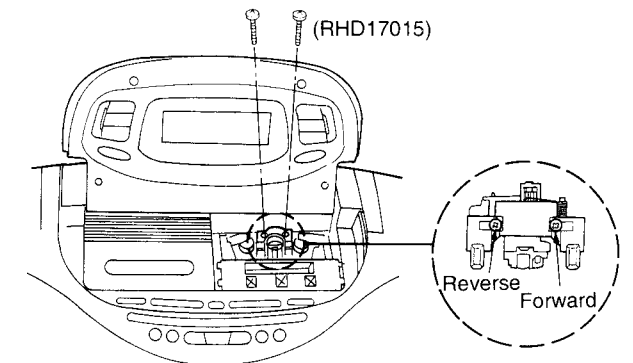

4. Remove 2 head azimuth adjustment screws.
5. Remove screw-locking bond left on the head base.
6. After installing new screws (RHD17015), play back the test tape and adjust the head azimuth.
7. After adjustment, fix the screws with screw-locking bond.

●WHEN ADJUSTING ONLY TAPE SPEED

1. Remove the main unit as explained on page 12 in the Disassembly Instructions. (Ref. No. 3 Removal of the Main Unit.)

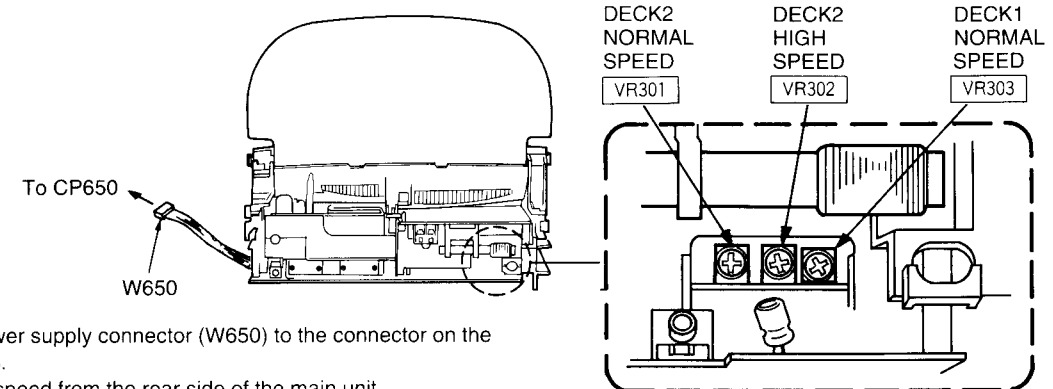

2. Connect power supply connector (W650) to the connector on the power P.C.B.
3. Adjust tape speed from the rear side of the main unit. (Refer to page 88 for adjustment procedure.)


<CD SECTION>

Caution:


It is very dangerous to look at or touch the laser beam. (Laser radiation is invisible.)
With the unit turned "on", laser radiation is emitted from the pickup lens.
Avoid exposure to the laser beam, especially when performing adjustments.

●Preparation for Adjustment


1. Set up the unit following the procedure described in "Check and Adjustment for the CD P.C.B.". (See page 84.)
2. After completing the setup procedure, switch the unit off then switch it on again (to adjust the unit with the CD unit placed in an upright position).

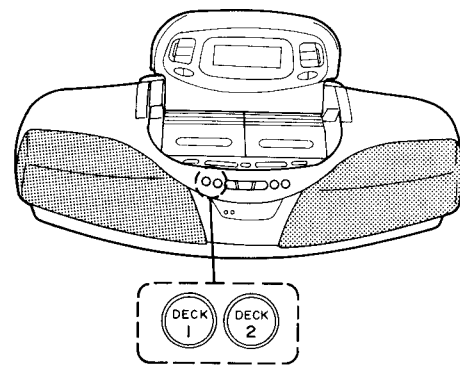


1. Connect the AC power cord of this unit to an AC outlet and turn the unit on. Press the cassette deck open button for on the deck whose head azimuth is to be adjusted and open the cassette cover.

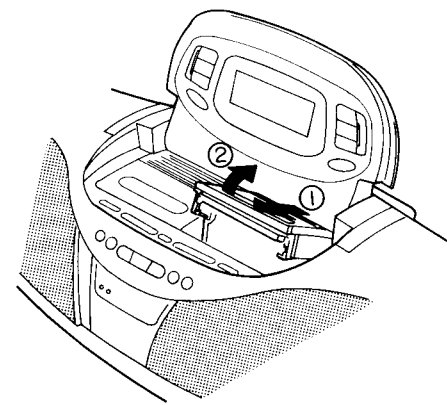

2. Slide the cassette panel in the direction of the arrow ① and remove it in the direction of the arrow ②. (Though the figure below shows only DECK2, DECK1 is also removed in the same procedure.)

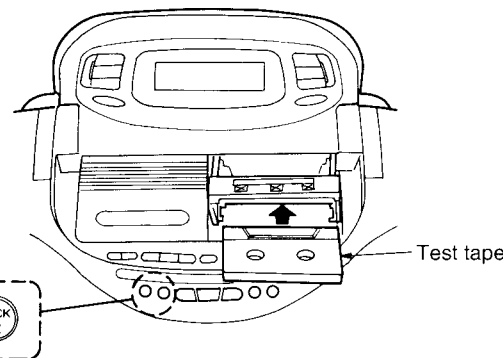


3. Insert a test tape (QZZCWAT) in DECK2 (or DECK1) and press DECK2 (or DECK1) button. And then shut the cassette cover.

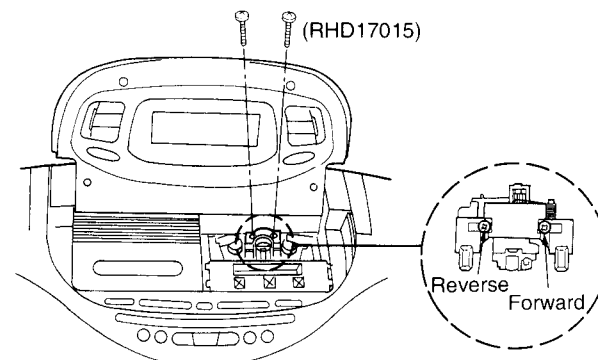

4. Remove 2 head azimuth adjustment screws.
5. Remove screw-locking bond left on the head base.
6. After installing new screws (RHD17015), play back the test tape and adjust the head azimuth.
7. After adjustment, fix the screws with screw-locking bond.

•WHEN ADJUSTING ONLY TAPE SPEED

1. Remove the main unit as explained on page 12 in the Disassembly Instructions. (Ref. No. 3 Removal of the Main Unit.)

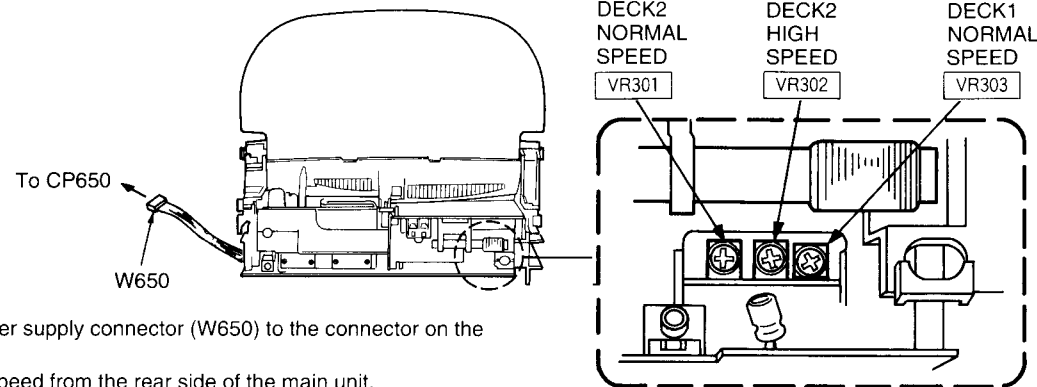

2. Connect power supply connector (W650) to the connector on the power P.C.B.
3. Adjust tape speed from the rear side of the main unit. (Refer to page 88 for adjustment procedure.)

<CD SECTION>

Caution:

It is very dangerous to look at or touch the laser beam. (Laser radiation is invisible.)
With the unit turned "on", laser radiation is emitted from the pickup lens.
Avoid exposure to the laser beam, especially when performing adjustments.

•Preparation for Adjustment

1. Set up the unit following the procedure described in "Check and Adjustment for the CD P.C.B.". (See page 84.)
2. After completing the setup procedure, switch the unit off then switch it on again (to adjust the unit with the CD unit placed in an upright position).

Measuring Instruments and Special Tools

- Test disc
 1. Playability test disc (SZZP1054C)
 2. Uneven test disc (SZZP1056C)

- Hexagonal wrench (M2.0) (SZZP1101C)
- Oscilloscope


(1) MECHANICAL ADJUSTMENT

- When the traverse deck is replaced, making adjustments is not necessary. (The traverse deck ass'y is already adjusted.)
- Make adjustments to improve playability when the traverse deck has not been replaced. Make the electrical adjustments first.

1. Connect the oscilloscope's CH. 1 probe across **TJ701** (+) and **TJ702** (VREF) on the Servo P.C.B.

Oscilloscope setting:

- VOLT 200 mV
 - SWEEP 0.5 μ sec
 - Input coupling AC
2. Switch the player power ON, and play track 19 on the test disc (SZZP1056C).
 3. Leave the player in Play mode and place it as shown in the figure on the right.
 4. Alternately adjust the two mechanical adjusting screws with the 2.0 mm allen wrench (SZZP1101C) until the RF signal amplitude on the oscilloscope is maximize. (Shown in Fig. 8)
 5. After completing the adjustment, lock the **mechanical adjustments** with lock paint (RZZ0L01).

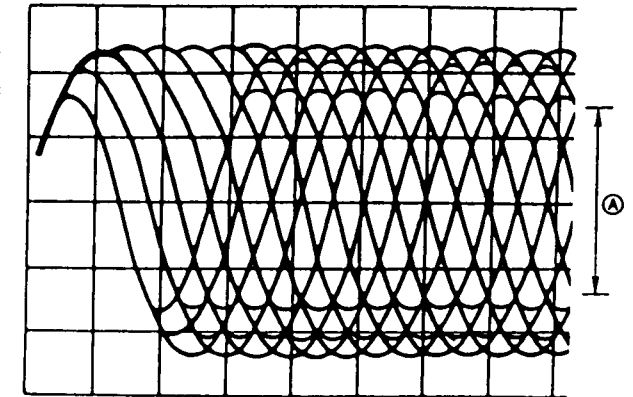

A Maximize the amplitude.

•NEW DIGITAL SERVO CIRCUIT

A digital servo circuit employed in this unit is a new type circuit. All adjustment VRs, which are equipped with conventional digital servo circuits, are removed from the electric section. Therefore, only mechanical adjustments are necessary.

(2) CHECK OF PLAY OPERATION AFTER ADJUSTMENT

•Checking Skip Search

1. Play an ordinary musical program disc.
2. Press the skip button to check for normal skip search operation (in both the forward and reverse directions).

•Checking Manual Search

1. Play an ordinary musical program disc.
2. Press the manual search button to check for smooth manual search operations at either low or high speed (in both the forward and reverse directions).

•Checking playability

1. Play the 0.7 mm black dot and the 0.7 mm wedge on the test disc (SZZP1054C) and verify that no sound skip or noise occurs.
2. Play the middle tracks of the uneven test disc and verify that no sound skip or noise occurs.

•Locations of Adjustments


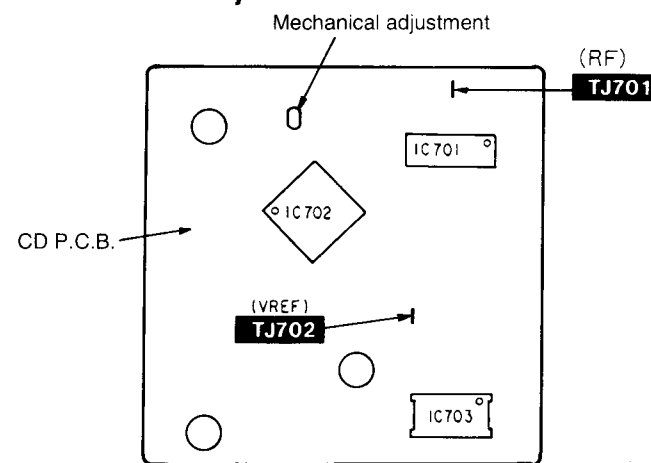


Fig. 8

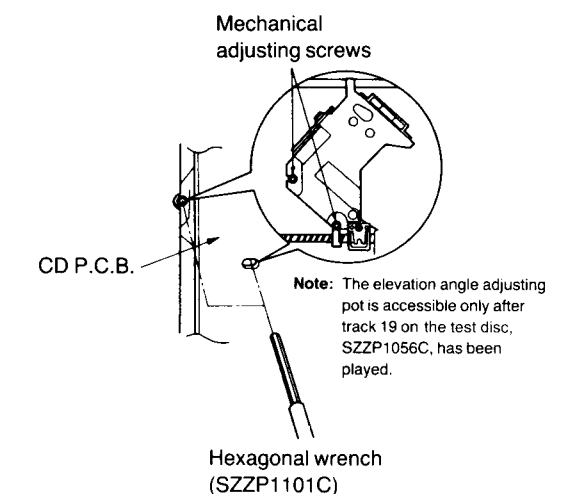

Hexagonal wrench (SZZP1101C)


Fig. 9


■ Block Diagram • CD circuit

● IC801 (MND3210REAN)


Pin No.	Terminal Name	I/O	Function
1	V _{DD}	I	Power supply input (+5 V)
2	OSC2	O	Clock output (3.9 MHz)
3	OSC1	I	Clock input (3.9 MHz)
4	V _{SS}	—	GND
5	XI	I	Clock input (32.7 kHz)
6	XO	O	Clock output (32.7 kHz)
7	VREF-	—	AD converter reference voltage (GND)
8	AD IN7	I	Leaf switch signal input (DECK2)
9	AD IN6	I	Cassette cover close detection signal and reel pulse inputs (DECK2)
10	AD IN5	I	Cassette cover open detection signal and TPS signal inputs (DECK2)
11	AD IN4	I	Cassette cover open/close detection signal input (DECK1)
12	AD IN3	I	Top panel open/close detection signal input
13	AD IN2	I	AD converter signal input (operation switches on Top panel)
14	AD IN1	I	AD converter signal input (operation switches inside top panel)
15	AD IN0	I	AD converter signal input (operation switches on front panel)
16	VREF+	—	AD converter reference voltage (GND)
17	BP2	O	Beat proof control signal output 2
18	BP1	O	Beat proof control signal output 1
19	BEEP	O	Beep signal output
20	MKLATCH	O	Deck control data latch signal output
21	MKDATA	O	Deck control data output
22	MKCLK	O	Deck control clock output
23	LED	O	Display signal output (Menu select LED)
24	ASPLATCH	O	Latch signal output (for ASP)
25	ASPCLK	O	Serial clock signal output (for ASP)
26	POWER CONT	O	Power supply circuit control (H: power on)
27	MUTE A	O	Muting control signal output
28	AGDATA	O	Audio signal control data output (for ASP-IC, sub micro-processor IC602)
29	SPCLK	—	Bit 1 for destination switch
30	RESETOUT	—	Bit 2 for destination switch

Pin No.	Terminal Name	I/O	Function
31	REMOCON IN	I	Remote control signal input
32	BLKCK	I	Sub code block clock input
33	STATUS	I	CD status signal input
34	CDRST	I	CD reset signal input
35	RST	I	System reset signal input
36	MLD/PLL CL	O	CD signal process strobe signal output/ PLL tuner clock signal output
37	MDATA/PLL CE	O	CD signal process data output/PLL tuner strobe signal output
38	MCLK/PLL DI	O	CD signal process clock signal output/ PLL tuner control data signal output
39	CLOCK	O	CD sub-code reading clock output
40	SUBQ	I	CD sub-code data input
41	—	—	—
42	FREQ	—	—
43	CM	I	1-chip microprocessor mode setting input (L: 1-chip)
44	TLOCK/TUNED	I	CD tracking clock signal input/tuner receiving signal input
45	FLOCK/STEREO	I	CD focus lock signal input/tuner stereo signal input
46	REST SW	I	CD traverse position detection switch signal input (H: most inside position)
47	CD OPEN SW	I	CD tray open detection switch signal input
48	CD CLOSE SW	I	CD tray close detection switch signal input
49	SENSE	I	CD sense signal input
50	REMOCON STBY	I	Remote control sensor power control (H: ON, 4 MHz)
51	POWER DETECT	I	Power detection signal input (L: ON)
52 } 93 }	SEG41 } SEG0 }	O	LCD segment signal output
94 } 97 }	COM3 } COM0 }	O	LCD common signal output
98 } 100 }	VLC3 } VLC1 }	I	LCD bias reference voltage input

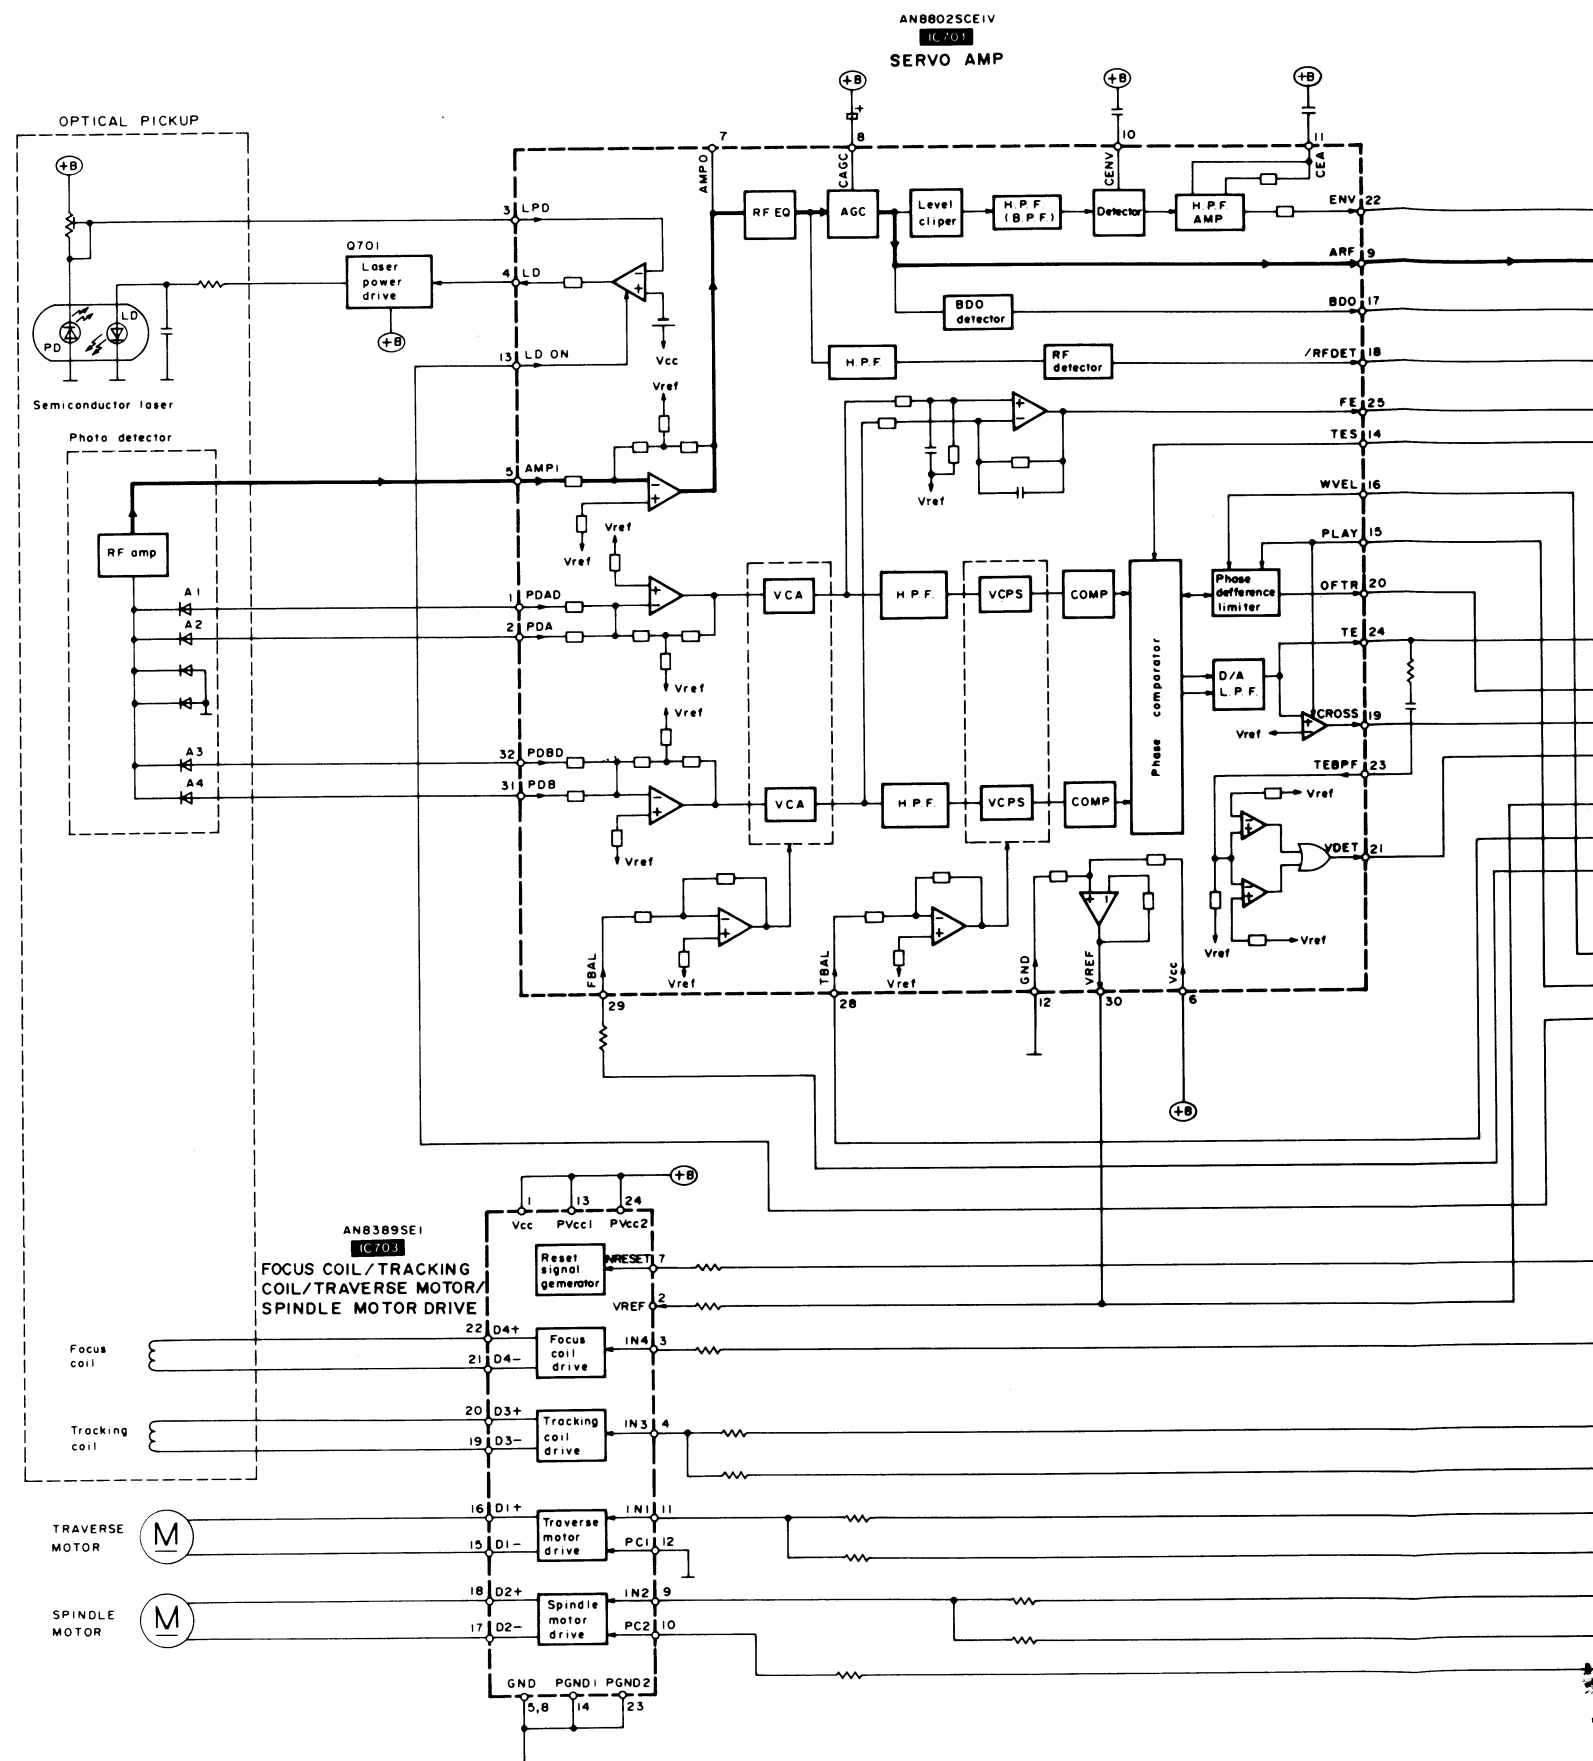

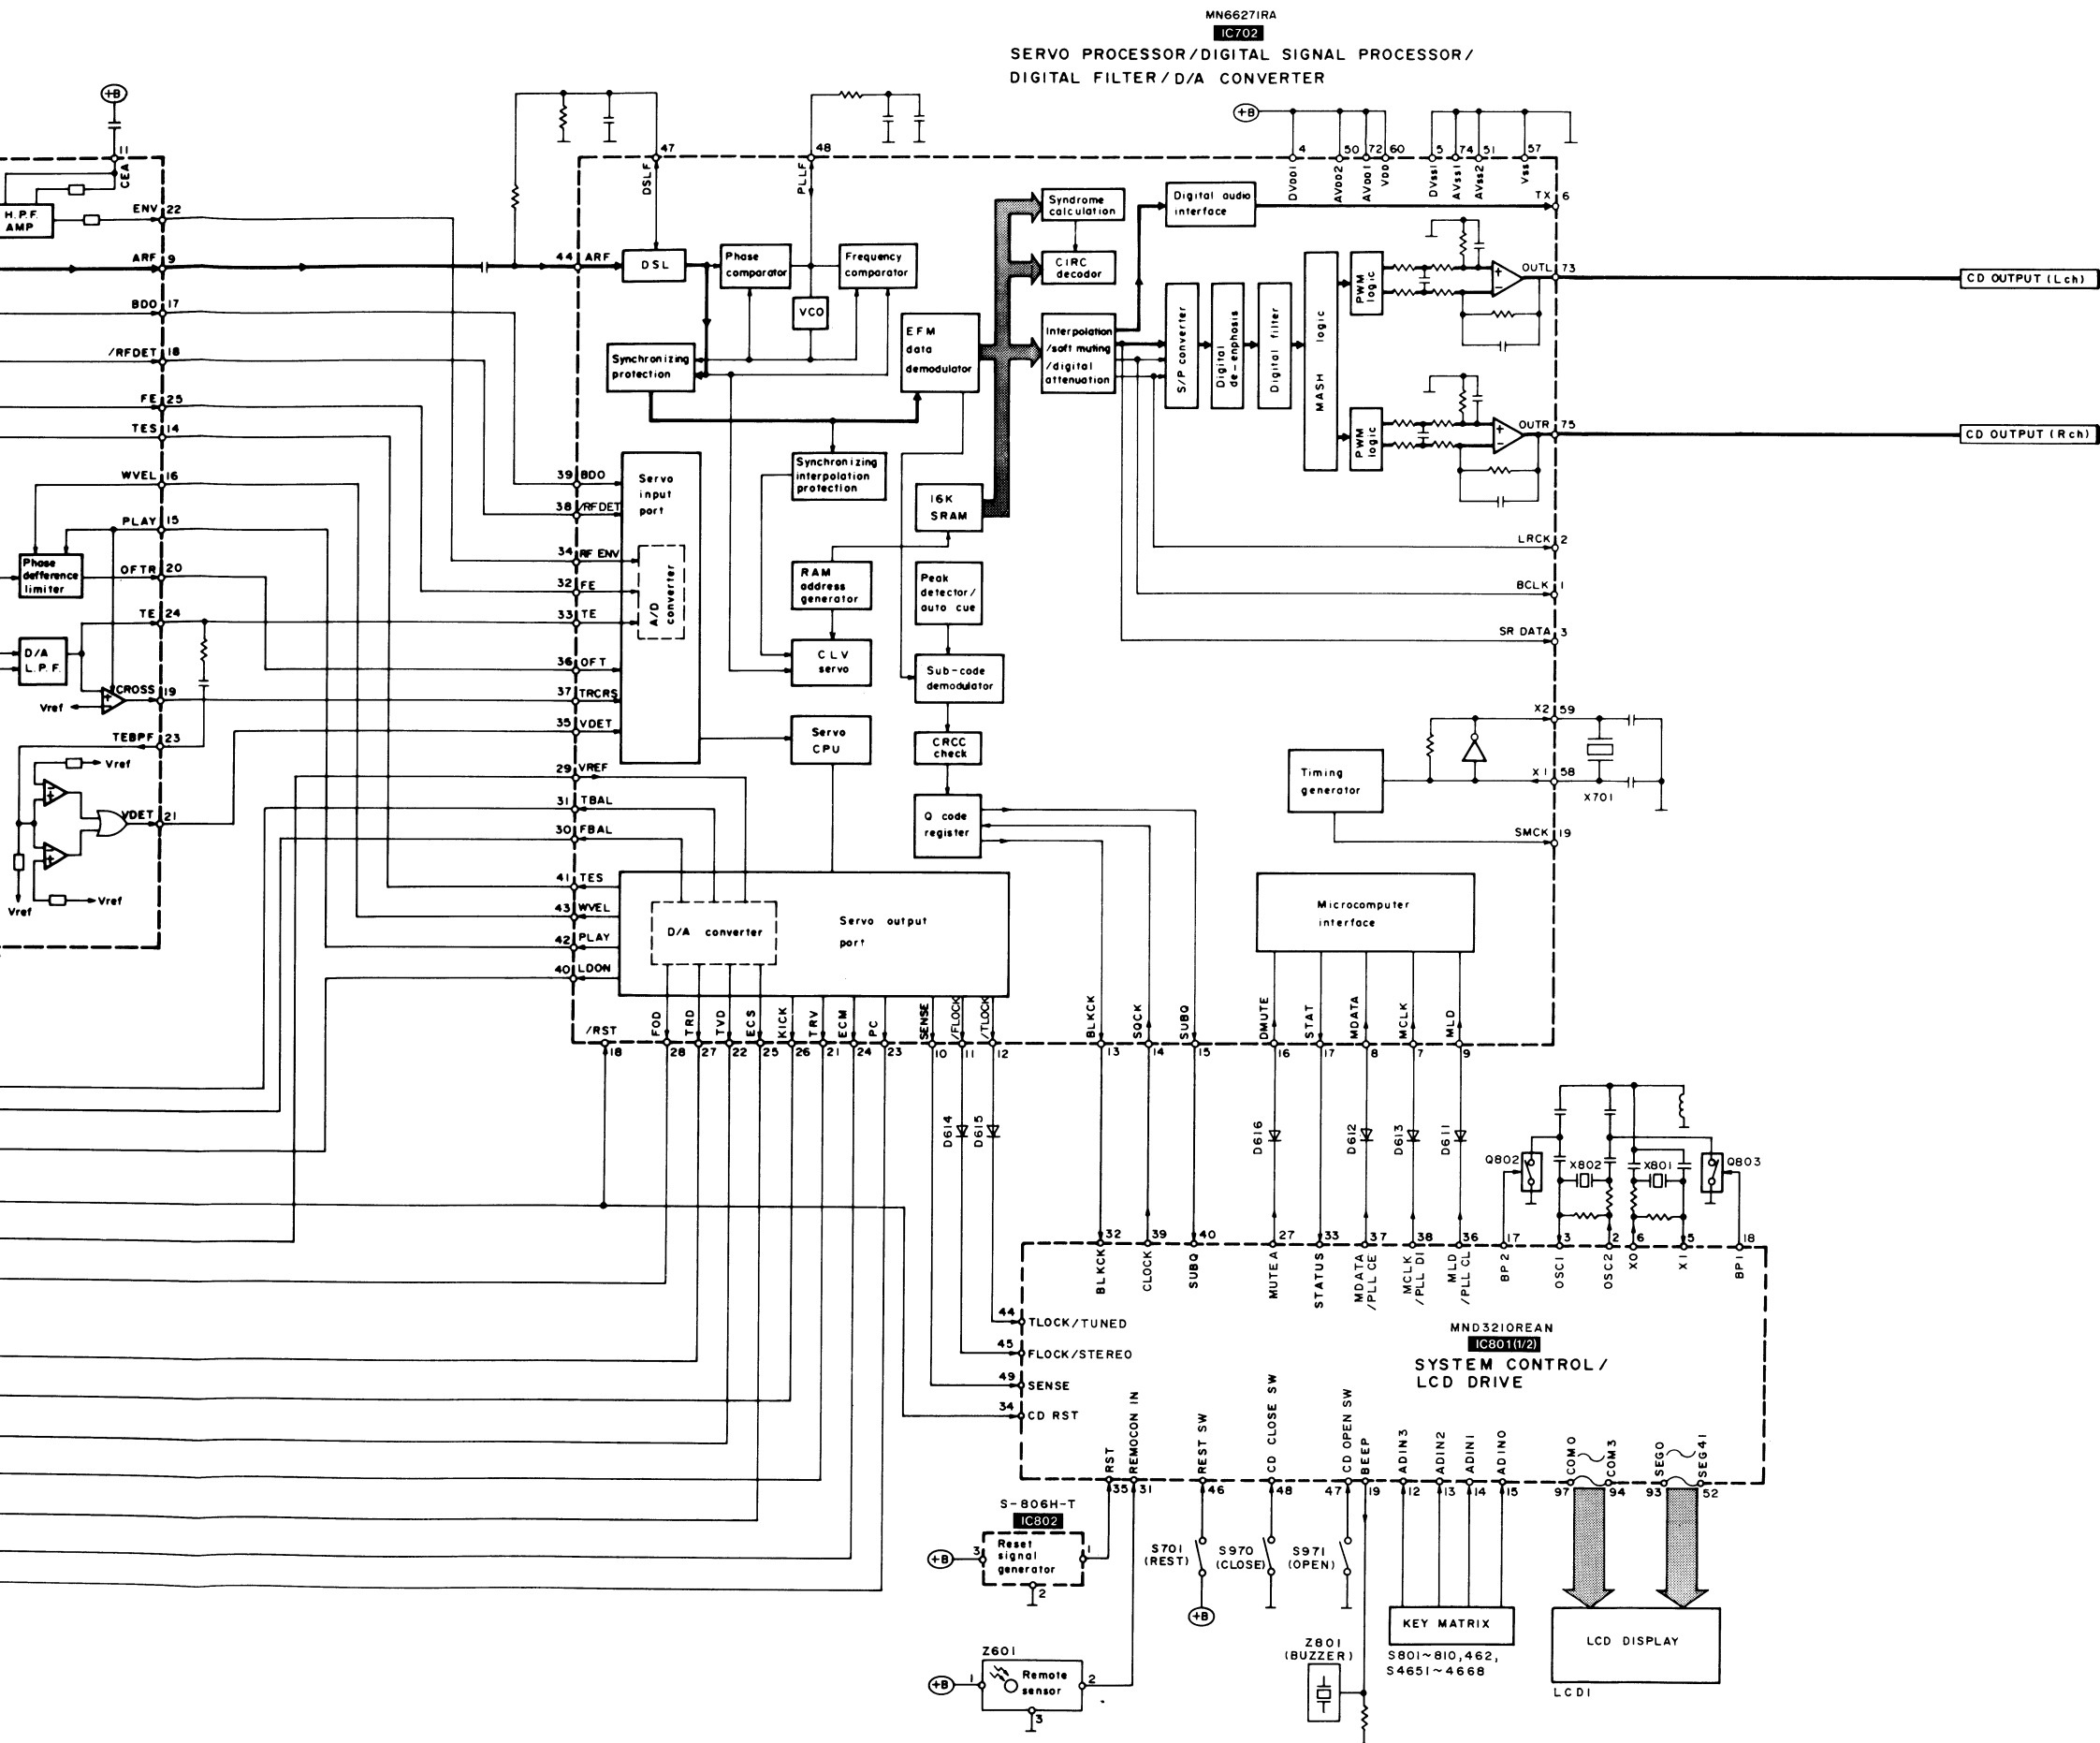


Block Diagram • Main circuit

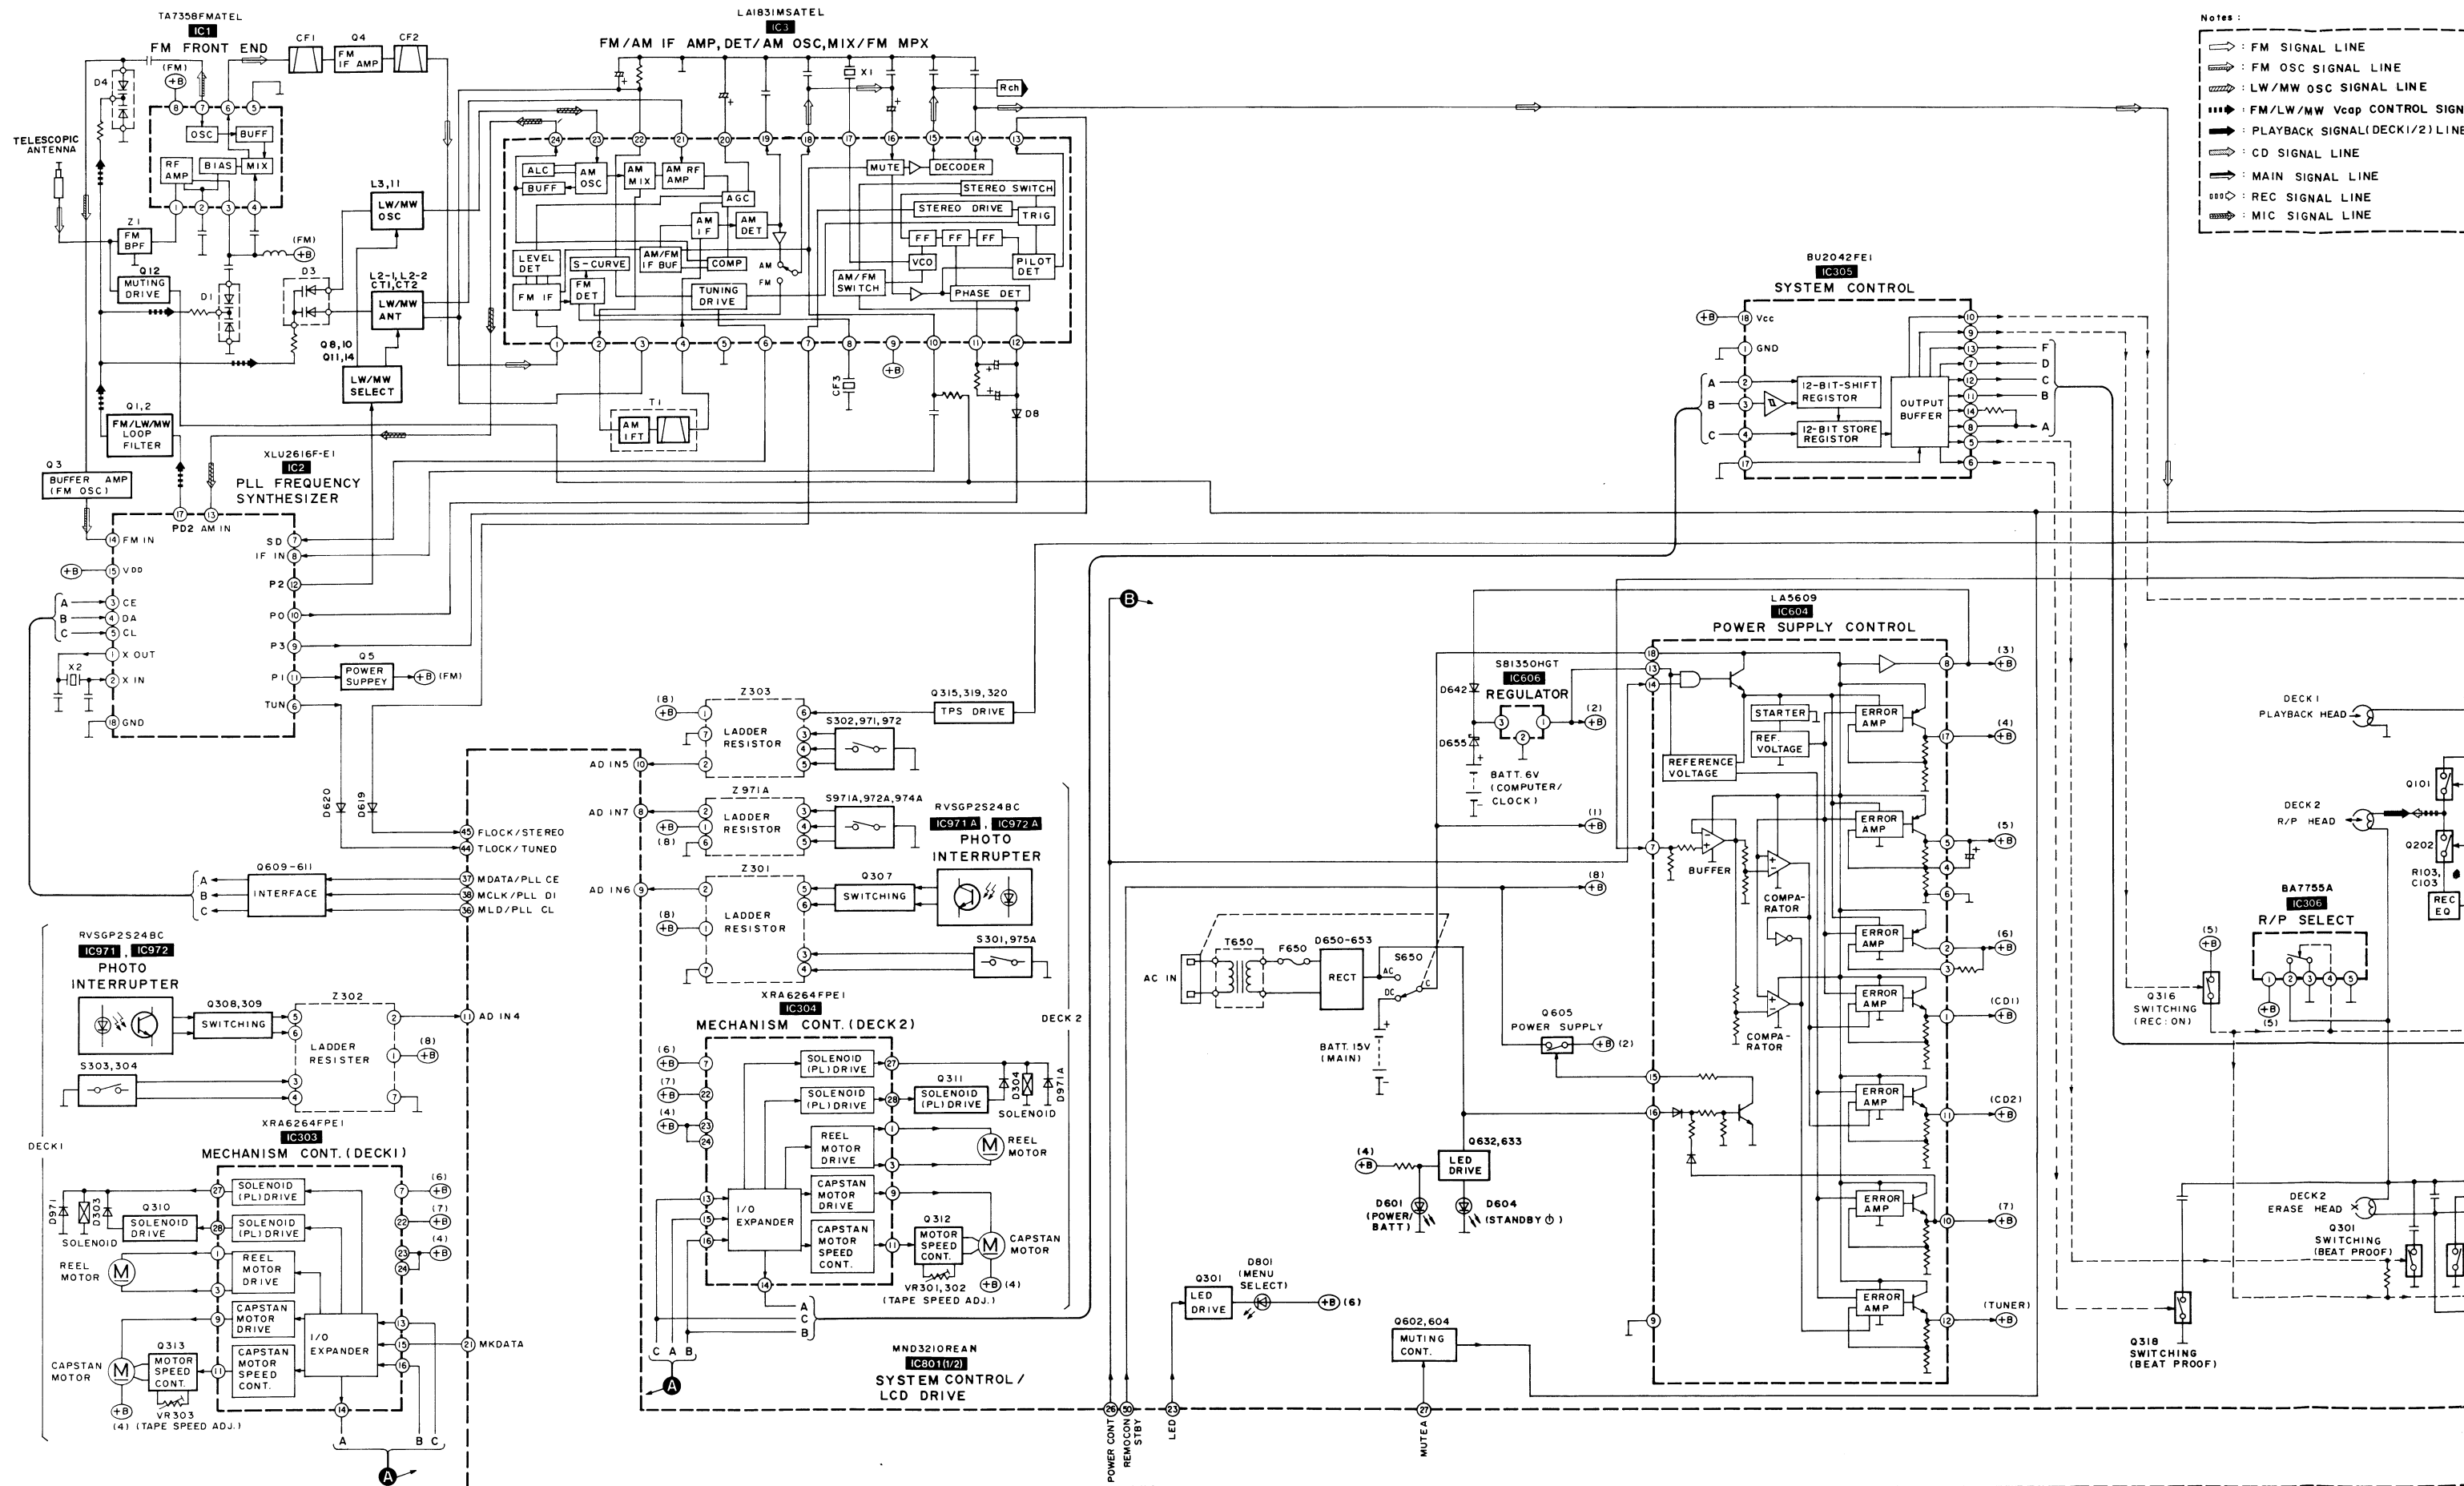

- Notes:
- FM SIGNAL LINE
 - FM OSC SIGNAL LINE
 - LW/MW OSC SIGNAL LINE
 - FM/LW/MW Vcap CONTROL SIGNAL LINE
 - PLAYBACK SIGNAL (DECK1/2) LINE
 - CD SIGNAL LINE
 - MAIN SIGNAL LINE
 - REC SIGNAL LINE
 - MIC SIGNAL LINE

- Notes :
- : FM SIGNAL LINE
 - : FM OSC SIGNAL LINE
 - : LW/MW OSC SIGNAL LINE
 - : FM/LW/MW Vcap CONTROL SIGNAL LINE
 - : PLAYBACK SIGNAL (DECK1/2) LINE
 - : CD SIGNAL LINE
 - : MAIN SIGNAL LINE
 - : REC SIGNAL LINE
 - : MIC SIGNAL LINE

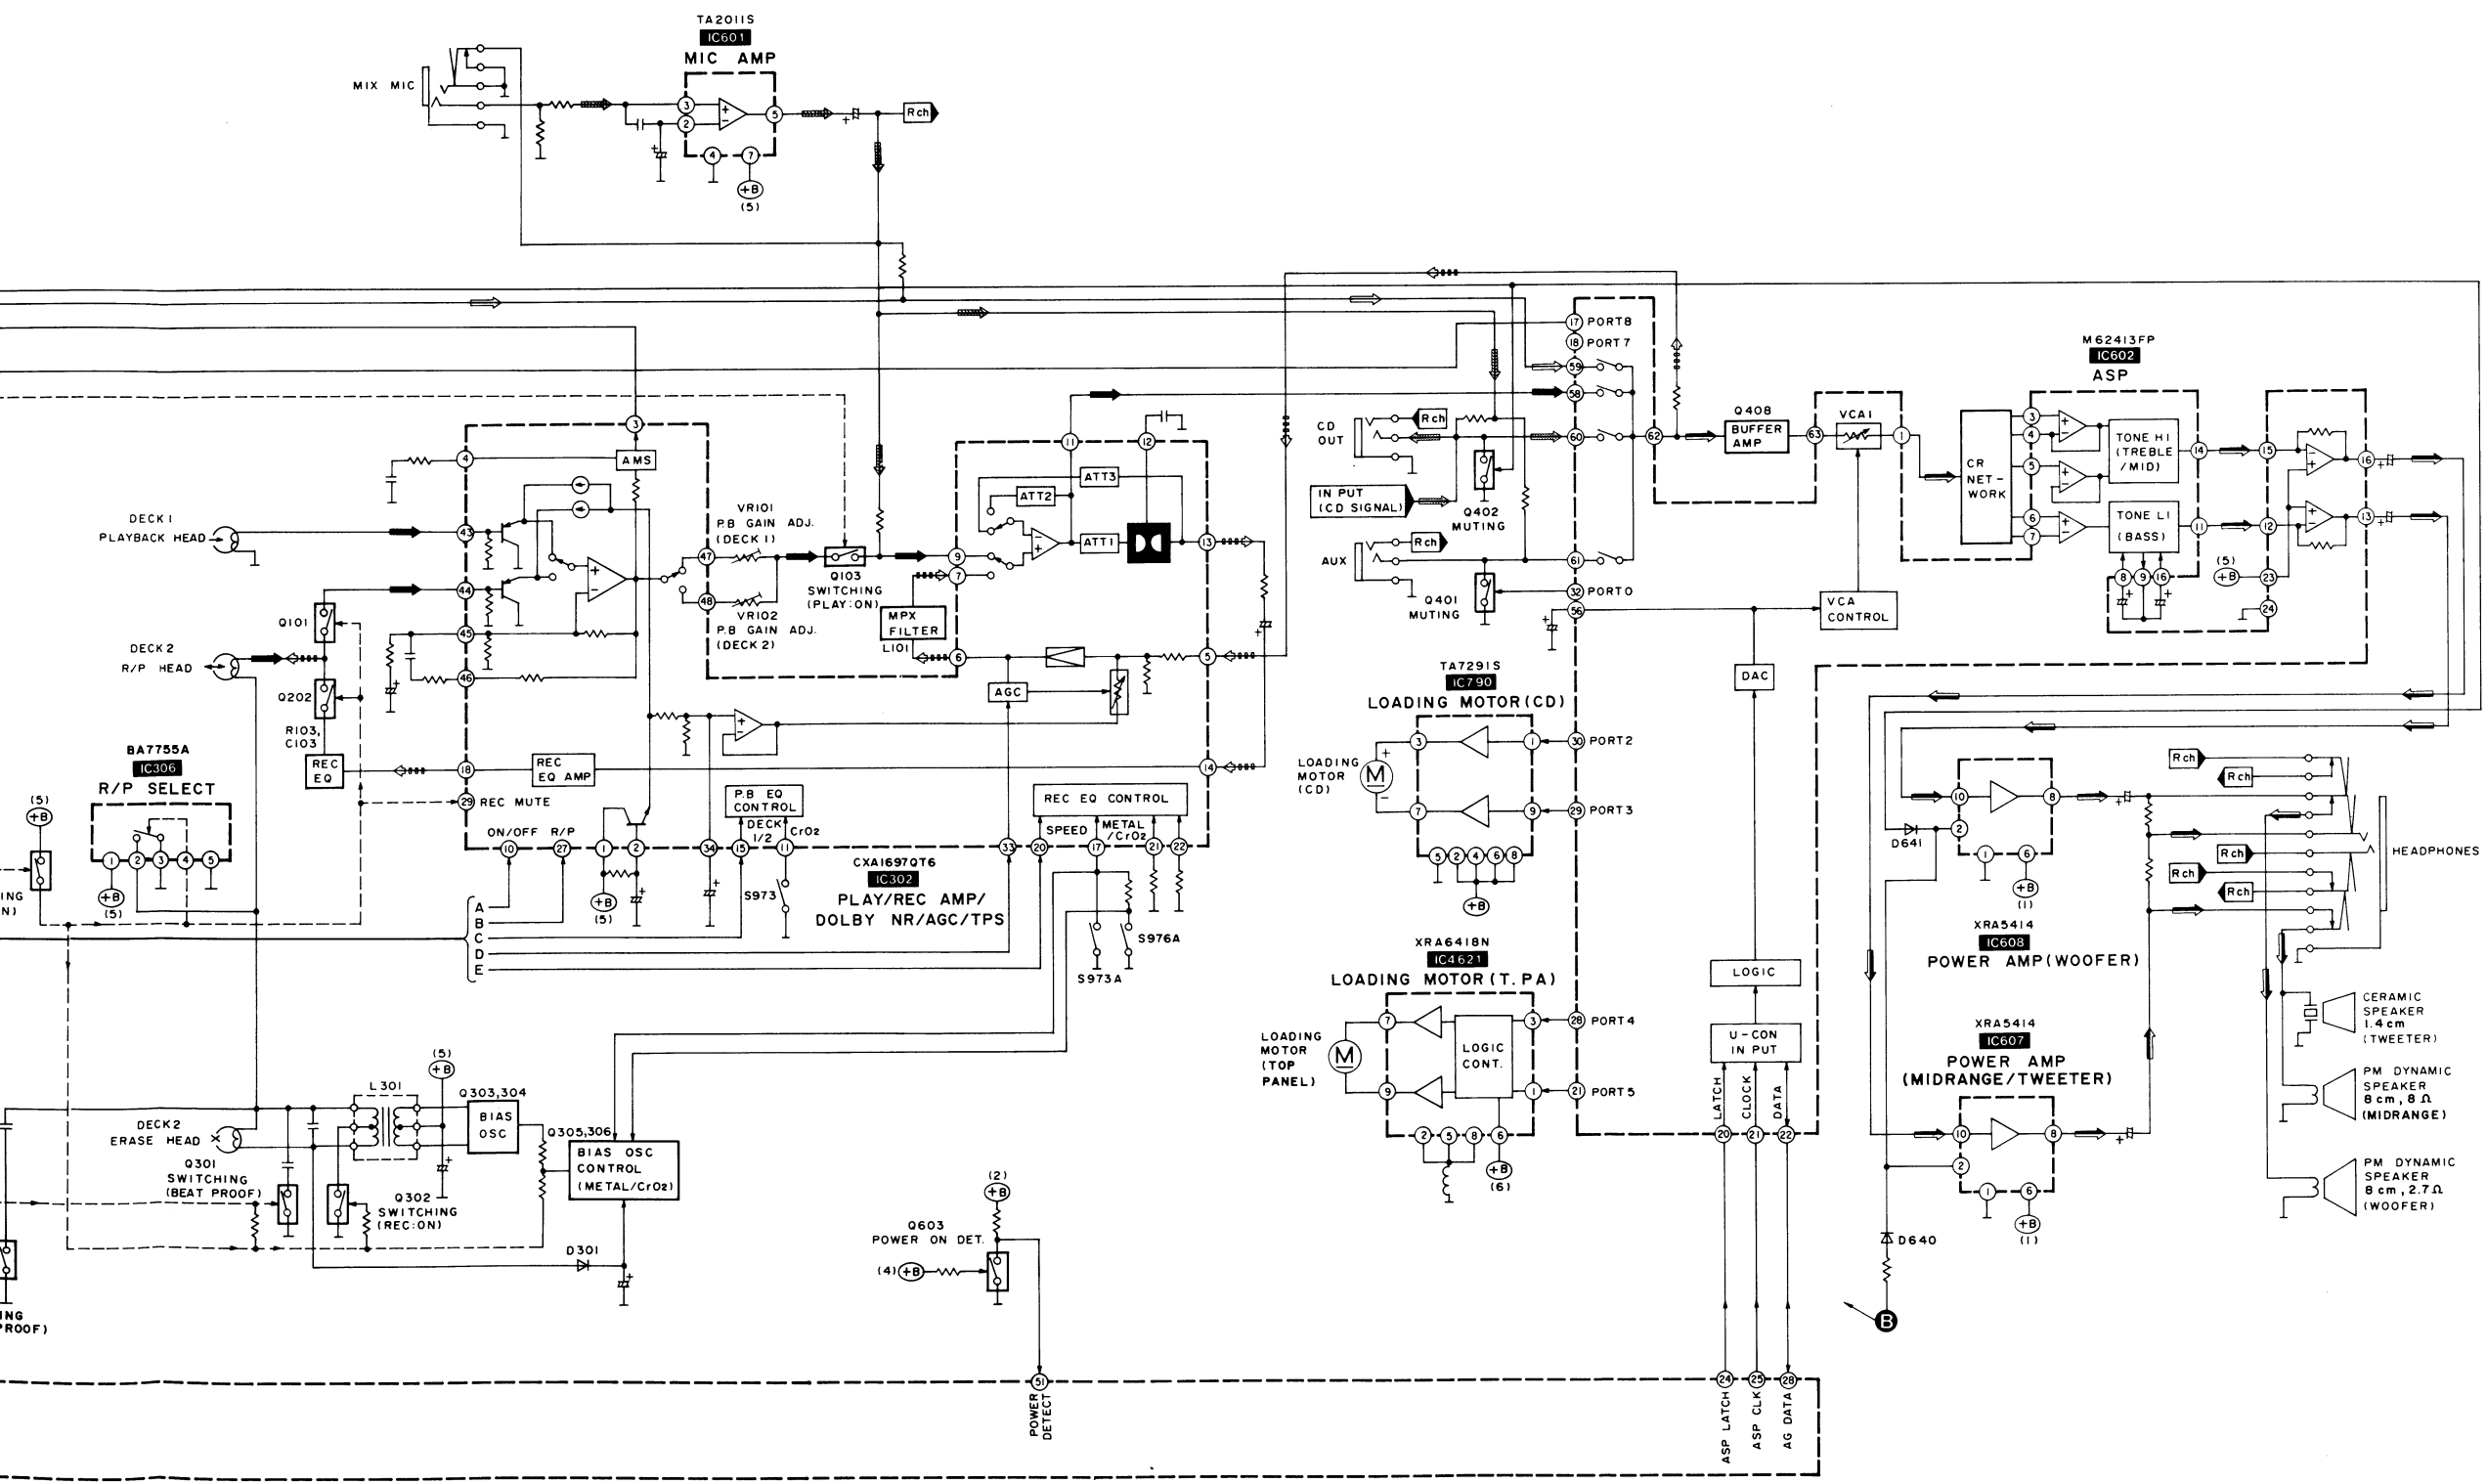

Replacement Parts List

Notes: *Important safety notice:
 Components identified by Δ mark have special characteristics important for safety.
 Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.
 When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.
 *The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)
 Parts without these indications can be used for all areas.
 *Remote Control Ass'y: Supply period for three years from termination of production.
 *Warning: This product uses a laser diode. Refer to caution statements on page 3.
 *ACHTUNG: Die Lasereinheit nicht zerlegen.
 Die Lasereinheit darf nur gegen eine vom Hersteller spezifizierte Einheit ausgetauscht werden.
 *The "(SF)" mark denotes the standard part.

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		INTEGRATED CIRCUIT(S)		Q303, 304	2SD1450RTA	TRANSISTOR	
				Q305	XN1210TX	TRANSISTOR	
				Q306	2SD1819RTX	TRANSISTOR	
IC1	TA7358FMATEL	FM FRONT END		Q307	XN1501TX	TRANSISTOR	
IC2	XLU2616F-E1	PLL FREQ. SYNTH		Q308, 309	2SD1819RTX	TRANSISTOR	
IC3	LA1831MSATEL	FM/AM IF AMP		Q310	2SD1450RTA	TRANSISTOR	
IC302	CXA1697QT6	DOLBY NR		Q311	2SD2436STXRA	TRANSISTOR	
IC303, 304	XRA6264FPE1	MECHA CONT.		Q312, 313	2SB1218RTX	TRANSISTOR	
IC305	BU2042FE1	SYSTEM CONT.		Q315	2SD1819RTX	TRANSISTOR	
IC306	BA7755A	R/P SELECT.		Q316	UN5114TX	TRANSISTOR	
IC601	TA2011S	MIC AMP		Q318	2SC2389SSTA	TRANSISTOR	
IC602	M62413FP	ASP		Q319, 320	2SD1819RTX	TRANSISTOR	
IC604 Δ	LA5609	POWER SUPPLY CONT.		Q401, 402	2SC3311AIRTA	TRANSISTOR	
IC606 Δ	S81350HG	REGULATOR		Q408	2SC3312S	TRANSISTOR	
IC607, 608	XRA5414	POWER AMP		Q501, 502	2SC3311AIRTA	TRANSISTOR	
IC701	AN8802SCE1V	SERVO AMP		Q508	2SC3312S	TRANSISTOR	
IC702	MN66271RA	SERVO PROCESSOR		Q602	UN4214TA	TRANSISTOR	
IC703	AN8389SE1	MOTOR DRIVE		Q603	2SC3311AIRTA	TRANSISTOR	
IC790	TA7291S	MOTOR DRIVE (CD)		Q604	UN411FTA	TRANSISTOR	
IC801	MND3210REAN	SYSTEM CONT.		Q605	RVTDTA123JST	TRANSISTOR	
IC802	S-806H-T	RESET		Q607	2SA1309AIRTA	TRANSISTOR	
IC971	RVSGP2S24BC	PHOTO COUPLER		Q609-611	RVTDTA143EST	TRANSISTOR	
IC971A	RVSGP2S24BC	PHOTO COUPLER		Q621	2SC3311AIRTA	TRANSISTOR	
IC972	RVSGP2S24BC	PHOTO COUPLER		Q632	2SC3311AIRTA	TRANSISTOR	
IC972A	RVSGP2S24BC	PHOTO COUPLER		Q633	UN4214TA	TRANSISTOR	
IC4621	XRA6418N	MOTOR DRIVE		Q635	2SA1309AIRTA	TRANSISTOR	
		TRANSISTOR(S)		Q701	2SB709S	TRANSISTOR	
				Q801	DTC114EST	TRANSISTOR	
				Q802, 803	2SC3311AIRTA	TRANSISTOR	
Q1, 2	2SC3311R	TRANSISTOR					
Q3	2SC2786LTA	TRANSISTOR				DIODE(S)	
Q4	2SC3313B	TRANSISTOR		D1	KV1360NT	DIODE	
Q5	UN411FTA	TRANSISTOR		D2 Δ	MA4082MTA	DIODE	
Q8	2SC3311R	TRANSISTOR		D3	KV1583BMTL	DIODE	
Q10	UN411FTA	TRANSISTOR		D4	KV1360NT	DIODE	
Q11	2SD1450RTA	TRANSISTOR		D8, 9	MA165	DIODE	
Q12	2SC3313B	TRANSISTOR		D10	MA165	DIODE	
Q14	2SC3311R	TRANSISTOR		D11	RVD1SS135TA	DIODE	
Q101	2SJ40CDTA	TRANSISTOR		D301	MA165	DIODE	
Q102	2SK664TX	TRANSISTOR		D302	RVD1SR139TA	DIODE	
Q103	2SJ40CDTA	TRANSISTOR		D303, 304	MA188TA	DIODE	
Q201	2SJ40CDTA	TRANSISTOR		D305	MA165	DIODE	
Q202	2SK664TX	TRANSISTOR		D601	SLR-305MC	LED	
Q203	2SJ40CDTA	TRANSISTOR		D603 Δ	RVDMT28R2BTA	DIODE	
Q301	2SC2389SSTA	TRANSISTOR		D604	SLR-305VC	LED	
Q302	2SD2436STXRA	TRANSISTOR					

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
D608	MA165	DIODE		L607, 608	ELEXT2R2KA9	COIL	
D611-621	MA165	DIODE		L650, 651 Δ	RL1500050T-Y	COIL	
D640-642	MA165	DIODE		L804	ELEXT470KA9	COIL	
D643 Δ	RVDMT26R8BTA	DIODE		L4621, 4622	RLQZV101KT-D	COIL	
D644 Δ	MTZ10CTA	DIODE		L5001-5009	RL1500050T-Y	COIL	
D645, 646	RVD1SR139TA	DIODE				TRANSFORMER(S)	
D650-653 Δ	1N5402B-M21	DIODE					
D655	MA165QZ	DIODE		T1	RL12Z014-T	TRANSFORMER	
D801	LN873RPX-TA3	DIODE		T650 Δ	RTP1L1B005	POWER TRANSFORMER	
D802	MA4051MTA	DIODE					
D803	MA165	DIODE				FILTER(S)	
D971	RVD1SS133TA	DIODE					
D971A	RVD1SS133TA	DIODE		CF1, 2	RLFFETMLA02D	CERAMIC FILTER	
				CF3	RLFDFTD05M	CERAMIC FILTER	
		VARIABLE RESISTOR(S)					
						OSCILLATOR(S)	
VR101	RRN6B05B14TA	V. R. PLAYBACK LEVEL		X1	RSXZ456KM01	OSCILLATOR (456KHz)	
VR102	RRN6B05B14TA	V. R. PLAYBACK LEVEL		X2	RSXC7M20S04T	OSCILLATOR (7.2MHz)	
VR201	RRN6B05B14TA	V. R. PLAYBACK LEVEL		X701	RSXZ16M9M02T	OSCILLATOR (16.934MHz)	
VR202	RRN6B05B14TA	V. R. PLAYBACK LEVEL		X801	RSXD32K7S03	OSCILLATOR (32.7KHz)	
VR301	RRN6B05B24TA	V. R. TAPE SPEED-NORMAL		X802	RVBCSA3R9MGT	OSCILLATOR (3.9MHz)	
VR302	RRN6B05B14TA	V. R. TAPE SPEED-HIGH				FUSE(S)	
VR303	RRN6B05B53TA	V. R. TAPE SPEED-NORMAL					
		COMPONENT COMBINATION(S)		F650 Δ	XBA2C40TB0U	FUSE 125V 4A	
Z1	RXABPW6A	COMPONENT COMBINATION					
Z301-303	EXBF7L355SYV	COMPONENT COMBINATION				SWITCH(ES)	
Z401	RAT0010	TWEETER					
Z501	RAT0010	TWEETER		S301	RSH1A024-U	SW. CLOSE DET (DECK2)	
Z601	NJH32H367A	REMOTE SENSOR		S302	RSH1A024-U	SW. OPEN DET (DECK2)	
Z802	RAT0010	BUZZER		S303	RSH1A024-U	SW. CLOSE DET (DECK1)	
Z971A	EXBF6L306SYV	COMPONENT COMBINATION		S304	RSH1A024-U	SW. OPEN DET (DECK1)	
				S650 Δ	RJ11SE01-H	SW. AC/DC (JK650)	
		COIL(S)		S701	RSM006-P	SW. REST	
L2	RLV6C010-0	COIL		S790	RSH1A005	SW. CLOSE	
L3	RL02B011-T	COIL		S791	RSH1A005	SW. OPEN	
L5	RLQZP8R2JT-Y	COIL		S801	EVQ21405R	SW. PRESET EQ	
L8	ELEXT101KA9	COIL		S802	EVQ21405R	SW. TIMER	
L9	ELEXT150KA9	COIL		S803	EVQ21405R	SW. -/REV	
L11	RL01B004-T	COIL		S804	EVQ21405R	SW. FWD/+	
L101	RLM2B005-1M	COIL		S805	EVQ21405R	SW. SET	
L201	RLM2B005-1M	COIL		S806	EVQ21405R	SW. SUB MENU SELECT	
L301	RL08C006M-T	COIL		S807	EVQ21405R	SW. MAIN MENU SELECT	
L302	RLQZB470KT-D	COIL		S808	EVQ21405R	SW. AUTO CD RECORD	
L308	ELJPA470KF	COIL		S809	EVQ21405R	SW. TAPE EDIT	
L601	RLQZB8R2KT-D	COIL		S810	EVQ21405R	SW. REC PAUSE	
L602	RL1500050T-Y	COIL		S971	RSH1A018-U	SW. MODE (DECK1)	
L603	RLQB221JTA-Y	COIL		S971A	RSH1A018-U	SW. MODE (DECK2)	
L604	RLQB101JTA-Y	COIL		S972	RSH1A019-U	SW. HALF (DECK1)	
L605	RLQB221JTA-Y	COIL		S972A	RSH1A019-U	SW. HALF (DECK2)	

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
S973	RSH1A019-U	SW, CrO2 (DECK1)					
S973A	RSH1A019-U	SW, ATS/CrO2 (DECK2)				TRIMMER	
S974A	RSH1A019-U	SW, R. REC INH. (DECK2)					
S975A	RSH1A019-U	SW, F. REC INH. (DECK2)		CT1	RCV10AF1T-S	TRIMMER CAPACITOR	
S976A	RSH1A019-U	SW, ATS/METAL (DECK2)		CT2	ECRLA020E53R	VARIABLE CAPACITOR	
S4621	EVQWS001	SW, C. TOP OPEN/CLOSE/TIMING					
S4651	EVQ21405R	SW, +/F. SKIP				IC PROTECTOR (S)	
S4652	EVQ21405R	SW, -/R. SKIP					
S4653	EVQ21405R	SW, STOP/CLEAR		IP602 Δ	SRUN25	IC PROTECTOR	
S4654	EVQ21405R	SW, PLAY/PAUSE		IP603 Δ	SRUN10	IC PROTECTOR	
S4655	EVQ21405R	SW, TUNER/BAND					
S4657	EVQ21405R	SW, DECK 1/2				DISPLAY	
S4656	EVQ21405R	SW, FWD PLAY					
S4658	EVQ21405R	SW, STOP		LCD1	RSL5109-L	LCD	
S4659	EVQ21405R	SW, REV PLAY					
S4660	EVQ21405R	SW, FF				JACK(S)	
S4661	EVQ21405R	SW, REW					
S4662	EVQ21405R	SW, OPEN/CLOSE (DECK1)		JK601	RJJ1D25ZA-C	MIX MIC	
S4663	EVQ21405R	SW, OPEN/CLOSE (DECK2)		JK602	RJJ33T01	CD OUT	
S4664	EVQ21405R	SW, VOL -		JK603	RJJ33T01	AUX IN	
S4665	EVQ21405R	SW, POWER, STDBY/ON		JK604	RJJ3BT01-1H	HEADPHONES	
S4666	EVQ21405R	SW, VOL +		JK650 Δ	RJJ1SE01-H	AC IN (S650)	
S4667	EVQ21405R	SW, CD OPEN/CLOSE					
S4668	EVQ21405R	SW, TOP PANEL OPEN/CLOSE					
		CONNECTOR (S)					
CP1	RJT028W011-2	CONNECTOR (11P)					
CP13	RJT057W012-1	CONNECTOR (12P)					
CP305, 306	RJR0113	CONNECTOR (4P)					
CP602	RJP6G18ZA	CONNECTOR (6P)					
CP605	RJT060B08	CONNECTOR (8P)					
CP606	RJP2G18ZA	CONNECTOR (2P)					
CP650	RJT029W004	CONNECTOR (4P)					
CP651	RJT029W03V	CONNECTOR (3P)					
CP790	RJP6G17ZA	CONNECTOR (6P)					
CP3011	RJT071H11	CONNECTOR (11P)					
CP3021	RJT071H11	CONNECTOR (11P)					
CP4604	RJP4G18ZA	CONNECTOR (4P)					
CP9711	RJT071H11A	CONNECTOR (11P)					
CP9712	RJT071H09A	CONNECTOR (9P)					
CS11	RJU028W011-1	CONNECTOR (11P)					
CS12	RJU057W012	CONNECTOR (12P)					
CS301, 302	RJU071H11M	CONNECTOR (11P)					
CS303, 304	RJS2A0205M1S	CONNECTOR (5P)					
CS603	RJS1A6836	CONNECTOR (36P)					
CS801	RJS1A6836	CONNECTOR (36P)					
CS971	RJU071H09M	CONNECTOR (9P)					
CS971A	RJU071H11M	CONNECTOR (11P)					
CS7021	RJS1A6723-Q	CONNECTOR (23P)					
CN701	RJU035T016-1	CONNECTOR (16P)					
CN702	RJS1A6723-1Q	CONNECTOR (23P)					

Notes : * Capacity value are in microfarads (uF) unless specified otherwise, P=Pico-farads (pF) F=Farads (F)
 * Resistance values are in ohms, unless specified otherwise, 1K=1,000(OHM) , 1M=1,000k(OHM)

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
		RESISTORS	R106	ERJ6GEYJ223V	1/10W 22K	R328	ERJ6GEYJ105	1/10W 1M
			R107	ERJ6GEYJ820V	1/10W 82	R329	ERDS2TJ472	1/4W 4.7K
			R108	ERDS2TJ103	1/4W 10K	R330, 331	ERJ6GEYJ472V	1/10W 4.7K
R1	ERDS2TJ104	1/4W 100K	R109	ERJ6GEYJ104V	1/10W 100K	R332 Δ	ERDS1FVJ2R2T	1/2W 2.2
R2	ERDS2TJ332	1/4W 3.3K	R110	ERJ6GEYJ272V	1/10W 2.7K	R333	ERJ8GEYJ182V	1/8W 1.8K
R3	ERDS2TJ104	1/4W 100K	R111	ERDS2TJ223	1/4W 22K	R334	ERJ6GEYJ182V	1/10W 1.8K
R5	ERDS2TJ103	1/4W 10K	R112	ERJ6GEYJ683V	1/10W 68K	R335	ERJ6GEYJ103V	1/10W 10K
R6	ERDS2TJ152	1/4W 1.5K	R113	ERJ6GEYJ122V	1/10W 1.2K	R336	ERJ6GEYJ682V	1/10W 6.8K
R7	ERDS2TJ330	1/4W 33	R114	ERJ6GEYJ682V	1/10W 6.8K	R337	ERJ6GEYJ153V	1/10W 15K
R8	ERDS2TJ104	1/4W 100K	R115	ERJ6GEYJ222V	1/10W 2.2K	R338, 339	ERJ6GEYJ223V	1/10W 22K
R9	ERDS2TJ471	1/4W 470	R117	ERJ6GEYJ682V	1/10W 6.8K	R340, 341	ERJ6GEYJ273V	1/10W 27K
R10	ERDS2TJ102	1/4W 1K	R201	ERJ6GEYJ471V	1/10W 470	R342, 343	ERDS2TJ273	1/4W 27K
R11, 12	ERDS2TJ103	1/4W 10K	R203	ERJ6GEYJ682V	1/10W 6.8K	R344	ERDS2TJ822	1/4W 8.2K
R13	ERDS2TJ153	1/4W 15K	R204	ERJ6GEYJ104V	1/10W 100K	R345	ERJ6GEYJ153V	1/10W 15K
R14, 15	ERDS2TJ103	1/4W 10K	R205	ERJ6GEYJ472V	1/10W 4.7K	R346	ERDS2TJ562	1/4W 5.6K
R17, 18	ERDS2TJ103	1/4W 10K	R206	ERJ6GEYJ223V	1/10W 22K	R348	ERJ6GEYJ822V	1/10W 8.2K
R19	ERDS2TJ101	1/4W 100	R207	ERJ6GEYJ820V	1/10W 82	R349	ERJ6GEYJ153V	1/10W 15K
R20	ERDS2TJ151	1/4W 150	R208	ERJ6GEYJ103V	1/10W 10K	R350	ERJ6GEYJ822V	1/10W 8.2K
R22	ERDS2TJ331	1/4W 330	R209	ERJ6GEYJ104V	1/10W 100K	R352	ERJ6GEYJ222V	1/10W 2.2K
R24	ERDS2TJ471	1/4W 470	R210	ERJ6GEYJ272V	1/10W 2.7K	R353	ERJ6GEYJ472V	1/10W 4.7K
R25	ERDS2TJ104	1/4W 100K	R211	ERJ6GEYJ223V	1/10W 22K	R354, 355	ERJ8GEYJ472V	1/8W 4.7K
R26, 27	ERDS2TJ102	1/4W 1K	R212	ERJ6GEYJ683V	1/10W 68K	R356, 357	ERDS2TJ472	1/4W 4.7K
R28	ERDS2TJ334	1/4W 330K	R213	ERJ6GEYJ122V	1/10W 1.2K	R358	ERJ8GEYJ104V	1/8W 100K
R29	ERDS2TJ331	1/4W 330	R214	ERJ6GEYJ682V	1/10W 6.8K	R359	ERDS2TJ104	1/4W 100K
R30	ERDS2TJ332	1/4W 3.3K	R215	ERJ6GEYJ222V	1/10W 2.2K	R360	ERJ6GEYJ104V	1/10W 100K
R31	ERDS2TJ472	1/4W 4.7K	R217	ERJ6GEYJ682V	1/10W 6.8K	R361	ERJ6GEYJ182V	1/10W 1.8K
R36, 37	ERDS2TJ223	1/4W 22K	R301	ERJ6GEYJ102V	1/10W 1K	R362	ERJ6GEYJ273V	1/10W 27K
R40	ERDS2TJ105T	1/4W 1M	R302	ERDS2TJ222	1/4W 2.2K	R363	ERJ8GEYJ223V	1/8W 22K
R41	ERDS2TJ471	1/4W 470	R303	ERJ6GEYJ103V	1/10W 10K	R364	ERJ6GEYJ223V	1/10W 22K
R42	ERDS2TJ103	1/4W 10K	R304	ERJ6GEYJ123V	1/10W 12K	R365	ERJ8GEYJ104V	1/8W 100K
R43, 44	ERDS2TJ222	1/4W 2.2K	R305	ERJ6GEYJ105	1/10W 1M	R367	ERJ6GEYK1R8V	1/10W 1.8
R45	ERDS2TJ223	1/4W 22K	R306	ERDS2TJ1R0	1/4W 1.0	R368	ERJ6GEYJ472V	1/10W 4.7K
R47	ERDS2TJ332	1/4W 3.3K	R307, 308	ERJ6GEYJ273V	1/10W 27K	R369	ERJ8GEYK1R8V	1/8W 1.8
R49	ERDS2TJ223	1/4W 22K	R309	ERDS2TJ331	1/4W 330	R371-373	ERDS2TJ222	1/4W 2.2K
R52	ERDS2TJ223	1/4W 22K	R310	ERJ6GEYJ103V	1/10W 10K	R401	ERDS2TJ563	1/4W 56K
R54	ERDS2TJ222	1/4W 2.2K	R311, 312	ERJ6GEYJ152V	1/10W 1.5K	R402	ERDS2TJ103	1/4W 10K
R55, 56	ERDS2TJ223	1/4W 22K	R313	ERJ8GEYJ334V	1/8W 330K	R403	ERDS2TJ104	1/4W 100K
R57	ERDS2TJ103	1/4W 10K	R314	ERJ6GEYJ103V	1/10W 10K	R405	ERDS2TJ393	1/4W 39K
R59	ERDS2TJ471	1/4W 470	R315	ERJ6GEYJ102V	1/10W 1K	R406	ERDS2TJ563	1/4W 56K
R61	ERDS2TJ103	1/4W 10K	R316	ERDS2TJ180T	1/4W 18	R407	ERDS2TJ472	1/4W 4.7K
R62	ERDS2TJ471	1/4W 470	R317, 318	ERDS2TJ150T	1/4W 15	R408	ERDS2TJ103	1/4W 10K
R63	ERDS2TJ105T	1/4W 1M	R319	ERJ6GEYJ105	1/10W 1M	R409	ERDS2TJ104	1/4W 100K
R64	ERDS2TJ332	1/4W 3.3K	R320	ERJ6GEYJ273V	1/10W 27K	R410	ERDS2TJ223	1/4W 22K
R65	ERDS2TJ470	1/4W 47	R321	ERJ6GEYJ103V	1/10W 10K	R411	ERDS2TJ393	1/4W 39K
R66	ERDS2TJ332	1/4W 3.3K	R322	ERDS2TJ183T	1/4W 18K	R412	ERDS2TJ562	1/4W 5.6K
R101	ERJ6GEYJ471V	1/10W 470	R323	ERDS2TJ472	1/4W 4.7K	R413	ERDS2TJ824	1/4W 820K
R103	ERJ6GEYJ682V	1/10W 6.8K	R324	ERJ6GEYJ221V	1/10W 220	R414	ERDS2TJ471	1/4W 470
R104	ERJ6GEYJ104V	1/10W 100K	R325, 326	ERJ8GEYK1R8V	1/8W 1.8	R416, 417	ERDS2TJ562	1/4W 5.6K
R105	ERJ6GEYJ472V	1/10W 4.7K	R327	ERJ6GEYJ334V	1/10W 330K	R418	ERDS2TJ103	1/4W 10K

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
R419	ERDS2TJ124T	1/4W 120K	R615	ERDS2TJ391	1/4W 390	R723	ERJ6GEYJ182V	1/10W 1.8K
R420	ERDS2TJ472	1/4W 4.7K	R618	ERDS2TJ103	1/4W 10K	R724	ERJ6GEYJ333V	1/10W 33K
R421	ERDS2TJ222	1/4W 2.2K	R619	ERDS2TJ123	1/4W 12K	R725	ERJ6GEYJ472V	1/10W 4.7K
R424	ERDS2TJ102	1/4W 1K	R620	ERDS2TJ103	1/4W 10K	R726	ERJ6GEYJ473V	1/10W 47K
R425	ERDS2TJ222	1/4W 2.2K	R621	ERDS2TJ821	1/4W 820	R727	ERJ6GEYJ103V	1/10W 10K
R426, 427	ERDS2TJ681	1/4W 680	R622	ERDS2THD2702	1/4W 27K	R728	ERJ6GEYJ392V	1/10W 3.9K
R428, 429	ERDS2TJ2R7T	1/4W 2.7	R623-625	ERDS2TJ104	1/4W 100K	R730	ERJ6GEYJ331V	1/10W 330
R431, 432	ERDS2TJ331	1/4W 330	R627	ERDS2THD5601	1/4W 5.6K	R731	ERJ6GEYJ392V	1/10W 3.9K
R433	ERDS2TJ123	1/4W 12K	R629	ERDS2TJ103	1/4W 10K	R734-736	ERJ6GEYJ101V	1/10W 100
R434	ERDS2TJ393	1/4W 39K	R630	ERDS2TJ101	1/4W 100	R738	ERJ6GEYJ223V	1/10W 22K
R441	ERDS2TJ564	1/4W 560K	R631	ERDS2TJ102	1/4W 1K	R739	ERJ6GEYJ681V	1/10W 680
R490, 491	ERDS2TJ103	1/4W 10K	R632	ERDS2TJ333	1/4W 33K	R741-743	ERJ6GEYJ562V	1/10W 5.6K
R492, 493	ERDS2TJ102	1/4W 1K	R633	ERDS2TJ152	1/4W 1.5K	R744	ERJ6GEYJ103V	1/10W 10K
R501	ERDS2TJ563	1/4W 56K	R634	ERDS2TJ681	1/4W 680	R745	ERJ6GEYJ155V	1/10W 1.5M
R502	ERDS2TJ103	1/4W 10K	R635	ERDS2TJ222	1/4W 2.2K	R748	ERJ6GEYJ182V	1/10W 1.8K
R503	ERDS2TJ104	1/4W 100K	R636	ERDS2TJ472	1/4W 4.7K	R749	ERJ6GEYJ103V	1/8W 10K
R505	ERDS2TJ393	1/4W 39K	R638-641	ERDS2TJ103	1/4W 10K	R801	ERDS2TG103T	1/4W 10K
R506	ERDS2TJ563	1/4W 56K	R642, 643	ERDS2TJ102	1/4W 1K	R802	ERDS2TJ102	1/4W 1K
R507	ERDS2TJ472	1/4W 4.7K	R644, 645	ERDS2TJ103	1/4W 10K	R803	ERDS2TG103T	1/4W 10K
R508	ERDS2TJ103	1/4W 10K	R646, 647	ERDS2TJ472	1/4W 4.7K	R804	ERDS2TJ102	1/4W 1K
R509	ERDS2TJ104	1/4W 100K	R648-650	ERDS2TJ474	1/4W 470K	R805	ERDS2TJ122	1/4W 1.2K
R510	ERDS2TJ223	1/4W 22K	R651	ERDS2TJ101	1/4W 100	R806	ERDS2TJ152	1/4W 1.5K
R511	ERDS2TJ393	1/4W 39K	R653	ERDS2TJ103	1/4W 10K	R807	ERDS2TJ182	1/4W 1.8K
R512	ERDS2TJ562	1/4W 5.6K	R661-664	ERDS2TJ472	1/4W 4.7K	R808	ERDS2TJ272T	1/4W 2.7K
R513	ERDS2TJ824	1/4W 820K	R665	ERDS2TJ1R8T	1/4W 1.8	R809	ERDS2TJ392T	1/4W 3.9K
R514	ERDS2TJ471	1/4W 470	R674, 675	ERDS2TJ103	1/4W 10K	R810	ERDS2TJ562	1/4W 5.6K
R516, 517	ERDS2TJ562	1/4W 5.6K	R676	ERDS2TJ183T	1/4W 18K	R815	ERDS2TJ124T	1/4W 120K
R518	ERDS2TJ103	1/4W 10K	R680	ERDS2TJ472	1/4W 4.7K	R816	ERDS2TJ103	1/4W 10K
R519	ERDS2TJ124T	1/4W 120K	R681-683	ERDS2TJ103	1/4W 10K	R817	ERDS2TJ104	1/4W 100K
R520	ERDS2TJ472	1/4W 4.7K	R690	ERDS2TJ182	1/4W 1.8K	R818	ERDS2TJ222	1/4W 2.2K
R521	ERDS2TJ222	1/4W 2.2K	R692	ERDS2TJ103	1/4W 10K	R821, 822	ERDS2TJ332	1/4W 3.3K
R524	ERDS2TJ102	1/4W 1K	R694	ERDS2TJ472	1/4W 4.7K	R823	ERDS2TJ334	1/4W 330K
R525	ERDS2TJ222	1/4W 2.2K	R695	ERDS2TJ473	1/4W 47K	R824	ERDS2TJ222	1/4W 2.2K
R526, 527	ERDS2TJ681	1/4W 680	R696	ERDS2TJ103	1/4W 10K	R825	ERDS2TJ102	1/4W 1K
R528, 529	ERDS2TJ2R7T	1/4W 2.7	R697	ERDS2TJ473	1/4W 47K	R826	ERDS2TJ106T	1/4W 10M
R531, 532	ERDS2TJ331	1/4W 330	R698	ERDS2TJ474	1/4W 470K	R828	ERDS2TJ222	1/4W 2.2K
R533	ERDS2TJ123	1/4W 12K	R699	ERDS2TJ103	1/4W 10K	R829	ERDS2TJ105T	1/4W 1M
R534	ERDS2TJ393	1/4W 39K	R701	ERJ6GEYJ100	1/10W 10	R830	ERDS2TJ223	1/4W 22K
R541	ERDS2TJ564	1/4W 560K	R702	ERJ6GEYJ471V	1/10W 470	R831	ERDS2TJ222	1/4W 2.2K
R590, 591	ERDS2TJ103	1/4W 10K	R703	ERJ6GEYJ823	1/10W 82K	R832	ERDS2TJ823T	1/4W 82K
R592, 593	ERDS2TJ102	1/4W 1K	R704	ERJ6GEYJ102A	1/10W 1K	R833	ERDS2TJ104	1/4W 100K
R601	ERDS2TJ222	1/4W 2.2K	R705	ERJ6GEYJ103V	1/10W 10K	R834	ERDS2TJ823T	1/4W 82K
R602	ERDS2TJ472	1/4W 4.7K	R706	ERJ6GEYJ102A	1/10W 1K	R843, 844	ERDS2TJ104	1/4W 100K
R603	ERDS2TJ105T	1/4W 1M	R707	ERJ6GEYJ473V	1/10W 47K	R846	ERDS2TJ470	1/4W 47
R604	ERDS2TJ471	1/4W 470	R708	ERJ6GEYJ104V	1/10W 100K	R849	ERDS2TJ104	1/4W 100K
R605	ERDS2TJ102	1/4W 1K	R709	ERJ6GEYJ683V	1/10W 68K	R852	ERDS2TJ470	1/4W 47
R608	ERDS2THD5601	1/4W 5.6K	R711	ERJ6GEYJ154V	1/10W 150K	R853-855	ERDS2TJ472	1/4W 4.7K
R609, 610	ERDS2TJ103	1/4W 10K	R712	ERJ6GEYJ221V	1/10W 220	R860	ERDS2TJ102	1/4W 1K
R611	ERDS2TJ183T	1/4W 18K	R714	ERJ6GEYOR00A	1/10W 0.00	R971	ERDS2TJ221	1/4W 220
R612	ERDS2TJ391	1/4W 390	R717-720	ERJ6GEYJ102A	1/10W 1K	R971A	ERDS2TJ221	1/4W 220
R613	ERDS2TJ183T	1/4W 18K	R721	ERJ6GEYJ101V	1/10W 100	R973	ERDS2TJ393	1/4W 39K
R614	ERDS2TJ331	1/4W 330	R722	ERJ6GEYJ563V	1/10W 56K	R973A	ERDS2TJ393	1/4W 39K

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
R974	ERDS2TJ393	1/4W 39K	C22-24	RCBS1H102KBY	50V 1000P	C115	ECEA1EKA4R7I	25V 4.7U
R974A	ERDS2TJ393	1/4W 39K	C25	ECBT1H150JC5	50V 15P	C116	ECEA1EKS4R7I	25V 4.7U
R4621	ERDS2TJ103	1/4W 10K	C26	ECBT1H6R8KC5	50V 6.8P	C117, 118	ECEA1EKA4R7I	25V 4.7U
R4622	ERDS2TJ153	1/4W 15K	C27	ECBT1H4R7KC5	50V 4.7P	C119	ECUV1H681KBN	50V 680P
R4651	ERDS2TJ563	1/4W 56K	C28, 29	RCBS1H102KBY	50V 1000P	C120	ECUV1H682KBN	50V 6800P
R4652	ERDS2TJ183T	1/4W 18K	C31	RCBS1H102KBY	50V 1000P	C122	ECUV1H471KBN	50V 470P
R4653	ERDS2TJ103	1/4W 10K	C32, 33	ECBT1H101KB5	50V 100P	C202	ECUV1H331KBN	50V 330P
R4654	ERDS2TJ562	1/4W 5.6K	C34	ECBT1H680J5	50V 68P	C203	ECUV1H681KBN	50V 680P
R4655	ERDS2TJ392T	1/4W 3.9K	C35	ECBT1H1R5M5	50V 1.5P	C204	ECEA1EKS4R7I	25V 4.7U
R4656	ERDS2TJ272T	1/4W 2.7K	C36, 37	RCBS1H102KBY	50V 1000P	C205	ECEA0GKS470I	6.3V 47U
R4657	ERDS2TJ182	1/4W 1.8K	C38	ECBT1H331KB5	50V 330P	C206	ECUV1E183KBN	25V 0.018U
R4658	ERDS2TJ152	1/4W 1.5K	C39, 40	ECBT1C103MS5	16V 0.01U	C207, 208	ECEA1EKA4R7I	25V 4.7U
R4659	ERDS2TJ122	1/4W 1.2K	C44	ECEA1AU101	10V 100U	C209	ECEA1EKS4R7I	25V 4.7U
R4660	ERDS2TJ102	1/4W 1K	C47	ECFR1C223MR	16V 0.022U	C210	ECUV1H331KBM	50V 330P
R4661	ERDS2TJ470	1/4W 47	C48	ECEA0JU101B	6.3V 100U	C211	ECUV1C104KBN	16V 0.1U
R4662	ERDS2TJ152	1/4W 1.5K	C51	ECEA1HKA010B	50V 1U	C212	ECEA1EKA4R7I	25V 4.7U
R4663	ERDS2TJ182	1/4W 1.8K	C52	ECFR1C473MR	16V 0.047U	C213	ECUV1H102KBN	50V 1000P
R4664	ERDS2TJ392T	1/4W 3.9K	C58	ECBT1H470J5	50V 47P	C214	ECEA1HKA010I	50V 1U
R4665	ERDS2TJ562	1/4W 5.6K	C60	ECEA1CKA100B	16V 10U	C215-218	ECEA1EKA4R7I	25V 4.7U
R4666	ERDS2TJ103	1/4W 10K	C61	ECBT1C332MR5	16V 3300P	C219	ECUV1H681KBN	50V 680P
R4667	ERDS2TJ122	1/4W 1.2K	C62	RCBS1H102KBY	50V 1000P	C220	ECUV1H682KBN	50V 6800P
R4668	ERDS2TJ272T	1/4W 2.7K	C63	ECBA1H681KB5	50V 680P	C222	ECUV1H471KBN	50V 470P
			C64	ECFR1C473MR	16V 0.047U	C301	ECUV1H471KBN	50V 470P
		CHIP JUMPER (S)	C65	ECBT1H470J5	50V 47P	C302	ECBT1H471KB5	50V 470P
			C66	ECBT1H4R7KC5	50V 4.7P	C303, 304	ECEA0JKA470I	6.3V 47U
RJ701-704	ERJ8GEYOR00A	1/8W 0.00	C67	ECFR1C223MR	16V 0.022U	C305	ECUV1E223MBN	25V 0.022U
RJ707-709	ERJ8GEYOR00A	1/8W 0.00	C68	ECEA1HKA010B	50V 1U	C306	ECEA1AKA101I	10V 100U
RJ714-717	ERJ8GEYOR00A	1/8W 0.00	C69, 70	ECFR1C183MR	16V 0.018U	C307	ECEA1AKS101I	10V 100U
RJ721	ERJ8GEYOR00A	1/10W 0.00	C71	ECEA1HKA2R2B	50V 2.2U	C308	ECUV1H472KBN	50V 4700P
RJ724-726	ERJ8GEYOR00A	1/10W 0.00	C72	ECEA1HKA010B	50V 1U	C309	ECEA0JKA470I	6.3V 47U
			C74	ECBT1H471KB5	50V 470P	C310	ECEA1EKA4R7I	25V 4.7U
		TEST JUMPER (S)	C75-77	ECEA1HKA010B	50V 1U	C312	ECUV1H471KBN	50V 470P
			C80, 81	ECBT1H331KB5	50V 330P	C313	ECEA1HKA0R1I	50V 0.1U
TJ701, 702	EYF8CU		C82	ECBT1H150JC5	50V 15P	C314	ECUV1C104KBN	16V 0.1U
			C83	ECBT1H331KB5	50V 330P	C315	ECEA2AN2R2S1	100V 2.2U
		CAPACITORS	C84	ECBT1C103MS5	16V 0.01U	C316	ECQP2A821JZT	100V 820P
			C86	ECBT1H331KB5	50V 330P	C317	ECQP2E472JZT	250V 4700P
C4	RCBS1H102KBY	50V 1000P	C87	ECBT1C103MS5	16V 0.01U	C318	ECQB1H393JF3	50V 0.039U
C5	ECBT1H2R2KC5	50V 2.2P	C88	RCBS1H102KBY	50V 1000P	C319	ECEA1AKA101I	10V 100U
C6	RCBS1H102KBY	50V 1000P	C89	ECBT1H101KB5	50V 100P	C320	ECUV1H103MBN	50V 0.01U
C9	ECEA1HKN010B	50V 1U	C102	ECUV1H331KBN	50V 330P	C321	ECEA1HKA0R1I	50V 0.1U
C10	ECBT1C332MR5	16V 3300P	C103	ECUV1H681KBN	50V 680P	C322, 323	ECUV1H102KBN	50V 1000P
C11	ECEA1AKA101B	10V 100U	C104	ECEA1EKS4R7I	25V 4.7U	C324, 325	ECUV1H103MBN	50V 0.01U
C12	ECFR1C473MR	16V 0.047U	C105	ECEA0JKA470I	6.3V 47U	C326	ECUV1H332MBN	50V 3300P
C13	ECFR1C103MR	16V 0.01U	C106	ECUV1E183KBN	H 25V 0.018U	C327	ECEA0JKA470I	6.3V 47U
C14	ECBT1C103MS5	16V 0.01U	C107, 108	ECEA1EKA4R7I	25V 4.7U	C328	ECEA1AKA101I	10V 100U
C15	ECBT1H6R8KC5	50V 6.8P	C109	ECEA1EKS4R7I	25V 4.7U	C329	ECEA1CKA101	16V 100U
C16, 17	RCBS1H102KBY	50V 1000P	C110	ECUV1H331KBN	50V 330P	C330	ECUV1H104ZFN	50V 0.1U
C18	ECBT1H200JC5	50V 20P	C111	ECUV1C104KBM	16V 0.1U	C331	ECEA1CKA101	16V 100U
C19	ECBT1H220JC5	50V 22P	C112	ECEA1EKA4R7I	25V 4.7U	C332	ECEA1AKA101I	10V 100U
C20	RCBS1H102KBY	50V 1000P	C113	ECUV1H102KBM	50V 1000P	C333	ECUV1H104ZFN	50V 0.1U
C21	ECEA1AKA101B	10V 100U	C114	ECEA1HKA010I	50V 1U	C334	ECBT1H104ZF5	50V 0.1U


Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
C335, 336	ECUV1H103MBN	50V 0.01U	C521	ECEA1AU101	10V 100U	C709	ECUE1C473KBN	16V 0.047U
C337, 338	ECUV1H102KBN	50V 1000P	C523	ECEA1AU222E	10V 2200U	C710	ECUE1H152KBN	50V 1500P
C339	ECEA1AKS101I	10V 100U	C524	ECEA1AU101	10V 100U	C711, 712	ECUZ1E104MBN	25V 0.1U
C341, 342	ECUV1H471KBN	50V 470P	C526	ECEA1HU010	50V 1U	C713	ECUV1C104MBM	16V 0.1U
C343	ECUV1H471KBM	50V 470P	C527	ECBT1H101KB5	50V 100P	C714	ECEAOJKA101I	6.3V 100U
C344	ECUV1H103MBN	50V 0.01U	C528	ECEA1HUR22	50V 0.22U	C715	ECEAOJKA470I	6.3V 47U
C345	ECQP2A122JZT	100V 1200P	C535	ECQV1H104JM3	50V 0.1U	C716	ECUE1H561KBN	50V 560P
C367	ECEA1EKS4R7I	25V 4.7U	C551	ECFR1C473KR	16V 0.047U	C717	ECUZ1E104MBN	25V 0.1U
C368	ECEAOJKA470I	6.3V 47U	C552	ECFR1C104KR	16V 0.1U	C718	ECUV1C224KBM	16V 0.22U
C401	ECEA1CU100	16V 10U	C553	ECFR1C223MR	16V 0.022U	C721, 722	ECUE1H270JCN	50V 27P
C402	ECBT1C472MR5	16V 4700P	C554	ECBT1H102KB5	50V 1000P	C723	ECEA1AKA221I	10V 220U
C403, 404	ECFR1C104KR	16V 0.1U	C601	ECEA1AU101	10V 100U	C724	ECUV1C104MBM	16V 0.1U
C405	ECEA1CU100	16V 10U	C602	ECEA1CKA100B	16V 10U	C725, 726	ECUE1H102KBN	50V 1000P
C406	ECEA1HUR22	50V 0.22U	C603	ECBT1H471KB5	50V 470P	C727, 728	ECEA1HPM101	50V 1U
C407	ECEA1HKAR15B	50V 0.15U	C604	ECEA1HU010	50V 1U	C730	ECUZ1E104MBN	25V 0.1U
C408	ECEA1HU010	50V 1U	C605, 606	ECEA1AU101	10V 100U	C731, 732	ECEAOJK221I	6.3V 220U
C409	ECBT1C332MR5	16V 3300P	C609	ECA1AKF820B	10V 82U	C733	ECUZ1E104MBN	25V 0.1U
C410	ECEA1EU4R7	25V 4.7U	C610	ECEA1HU010	50V 1U	C734	ECEA1AKA221I	10V 220U
C411	ECEA1HU010	50V 1U	C611, 612	ECA1AKF820B	10V 82U	C735	ECUZNE104MBN	25V 0.1U
C412	ECBT1H101KB5	50V 100P	C613	ECEA1AU220B	10V 22U	C736	ECUZ1E104MBN	25V 0.1U
C413	ECEA1HUR47B	50V 0.47U	C614-616	ECEA1CU100	16V 10U	C737	ECUZNE104MBN	25V 0.1U
C415, 416	ECEA1AU101	10V 100U	C617	ECEA1AU101	10V 100U	C738	ECUV1C154KBN	16V 0.15U
C417, 418	ECBT1C222MR5	16V 2200P	C620	ECEA1CU100	16V 10U	C742	ECUV1E273KBN	25V 0.027U
C419	ECQV1H104JM3	50V 0.1U	C623	ECEAOJU221	6.3V 220U	C743	ECUZ1E104MBN	25V 0.1U
C420	ECEA1CU100	16V 10U	C624	ECBT1H471KB5	50V 470P	C744	ECUE1E822KBN	25V 8200P
C421	ECEA1AU101	10V 100U	C626	ECEA1AU220B	10V 22U	C745	ECUE1C473MBN	16V 0.047U
C423	ECEA1AU222E	10V 2200U	C629, 630	ECEA1CU221	16V 220U	C746	ECUE1H050DCN	50V 5P
C424	ECEA1AU101	10V 100U	C631 Δ	ECA1EM472E	25V 4700U	C747	ECUE1H222KBN	50V 2200P
C426	ECEA1HU010	50V 1U	C632-635	ECBT1H102KB5	50V 1000P	C748	ECUV1H471KBM	50V 470P
C427	ECBT1H101KB5	50V 100P	C636	ECBT1H330J5	50V 33P	C790	ECA1AKF820E	10V 82U
C428	ECEA1HUR22	50V 0.22U	C637	ECFR1C104KR	16V 0.1U	C801	ECBT1H561KB5	50V 560P
C435	ECQV1H104JM3	50V 0.1U	C642	ECEA1EU4R7	25V 4.7U	C802	ECBT1H102KB5	50V 1000P
C451	ECFR1C473KR	16V 0.047U	C643	ECEA1CKA100B	16V 10U	C804	ECEAOJKA470	6.3V 47U
C452	ECFR1C104KR	16V 0.1U	C644	ECA1AKF820B	10V 82U	C805	ECBT1H102KB5	50V 1000P
C453	ECFR1C223MR	16V 0.022U	C645	ECEA1CKA100B	16V 10U	C806	ECEAOJKS101B	6.3V 100U
C454	ECBT1H102KB5	50V 1000P	C646	ECEA1AU101	10V 100U	C807, 808	ECBT1H102KB5	50V 1000P
C501	ECEA1CU100	16V 10U	C663	ECBT1H101KB5	50V 100P	C809	ECBT1C103MS5	16V 0.01U
C502	ECBT1C472MR5	16V 4700P	C666	ECBT1C103MS5	16V 0.01U	C810	ECBT1H820KB5	50V 82P
C503, 504	ECFR1C104KR	16V 0.1U	C675	ECEAOJKA220B	6.3V 22U	C811	ECBT1H470J5	50V 47P
C505	ECEA1CU100	16V 10U	C676	ECBT1H102KB5	50V 1000P	C812	ECBT1H180JC5	50V 18P
C506	ECEA1HUR22	50V 0.22U	C677	ECA1EFQ390B	25V 39U	C813	ECBT1H220JC5	50V 22P
C507	ECEA1HKAR15B	50V 0.15U	C678	ECEA1CKA101B	16V 100U	C814, 815	ECBT1H101KB5	50V 100P
C508	ECEA1HU010	50V 1U	C680-683	ECQV1H184JM3	50V 0.18U	C816	ECBT1H561KB5	50V 560P
C509	ECBT1C332MR5	16V 3300P	C684	ECKR1H473ZF5	50V 0.047U	C821-824	ECBT1H561KB5	50V 560P
C510	ECEA1EU4R7	25V 4.7U	C701	ECEAOJKA220	6.3V 22U	C825-827	ECBT1H331KB5	50V 330P
C511	ECEA1HU010	50V 1U	C702	ECEA1HKA010I	50V 1U	C828-830	ECBT1H471KB5	50V 470P
C512	ECBT1H101KB5	50V 100P	C703	ECEAOJKA101I	6.3V 100U	C831	ECBT1C103MS5	16V 0.01U
C513	ECEA1HUR47B	50V 0.47U	C704	ECUZ1E104MBN	25V 0.1U	C4621	ECBT1H561KB5	50V 560P
C515, 516	ECEA1AU101	10V 100U	C705	ECEA1HKA010I	50V 1U	C4622	ECEA1AU101BG	10V 100U
C517, 518	ECBT1C222MR5	16V 2200P	C706	ECUE1H101JCN	50V 100P	C4651	ECBT1H561KB5	50V 560P
C519	ECQV1H104JM3	50V 0.1U	C707	ECUV1E273KBN	25V 0.027U	C5601, 5602	ECBT1H102KB5	50V 1000P
C520	ECEA1CU100	16V 10U	C708	ECUE1H472KBN	50V 4700P			

Ref. No.	Part No.	Part Name & Description	Remarks
		LOADING MECHANISM	
101	RFKJLCH505BK	TRAVERSE CHASSIS ASS'Y	
101-1	RDG0142	LOADING GEAR	
101-2	RDG0193	LOADING GEAR(1)	
101-3	RDPO065	PULLEY	
102	REMO019	MOTOR ASS'Y	
103	RMA0339	HOLDER	
104	RME0063	LOCK LEVER SPRING	
105	RME0087	SPRING	
106	RMG0158	BELT	
107	RML0177	LEVER	
108	RML0178-1	LOCK LEVER	
109	RMM0059-1	SLIDE PLATE (2)	
110	RMM0079	SLIDE PLATE (1)	
111	XTN26+6G	SCREW	
112	XYN2+F6FZ	SCREW	
113	RDB0036	GUIDE HOLDER	
114	RHD20010	SCREW	
115	RMU0046	GUIDE SHAFT	
116	RHM245ZA	MAGNET	
117	RMA0327-1	DISC CLAMPER	
118	RMRO334	MAGNET HOLDER	
119	RXQ0123	DISC HOLDER	
120	RFKNLPG440-K	DRIVE RACK ASS'Y	
121	RGQ0088-K1	DISC TRAY	
122	RHD20009-1	SCREW	
123	XTB3+25GFZ	SCREW	
124	XTN26+6G	SCREW	
125	XTN3+8JFZ	SCREW	
126	RAE0113Z	TRAVERSE UNIT ASS'Y	
126-1	SHGD112	RUBBER(A)	
126-2	SHGD113-1	RUBBER(B)	
126-3	XQS2+A35FZ	SCREW	
127	RME0109	SPRING	
128	RME0142	SPRING	
129	RMS0123-1	PIN(A)	
130	RMS0350	PIN(B)	
131	RMRO698-K	CHASSIS	
132	XTV2+6G	SCREW	

■ Loading Unit Parts Location


Note:
When changing mechanism parts, apply the specified grease to areas marked "XX" as shown in the drawing.

Ref. No.	Part No.
①	RFKXEM30L


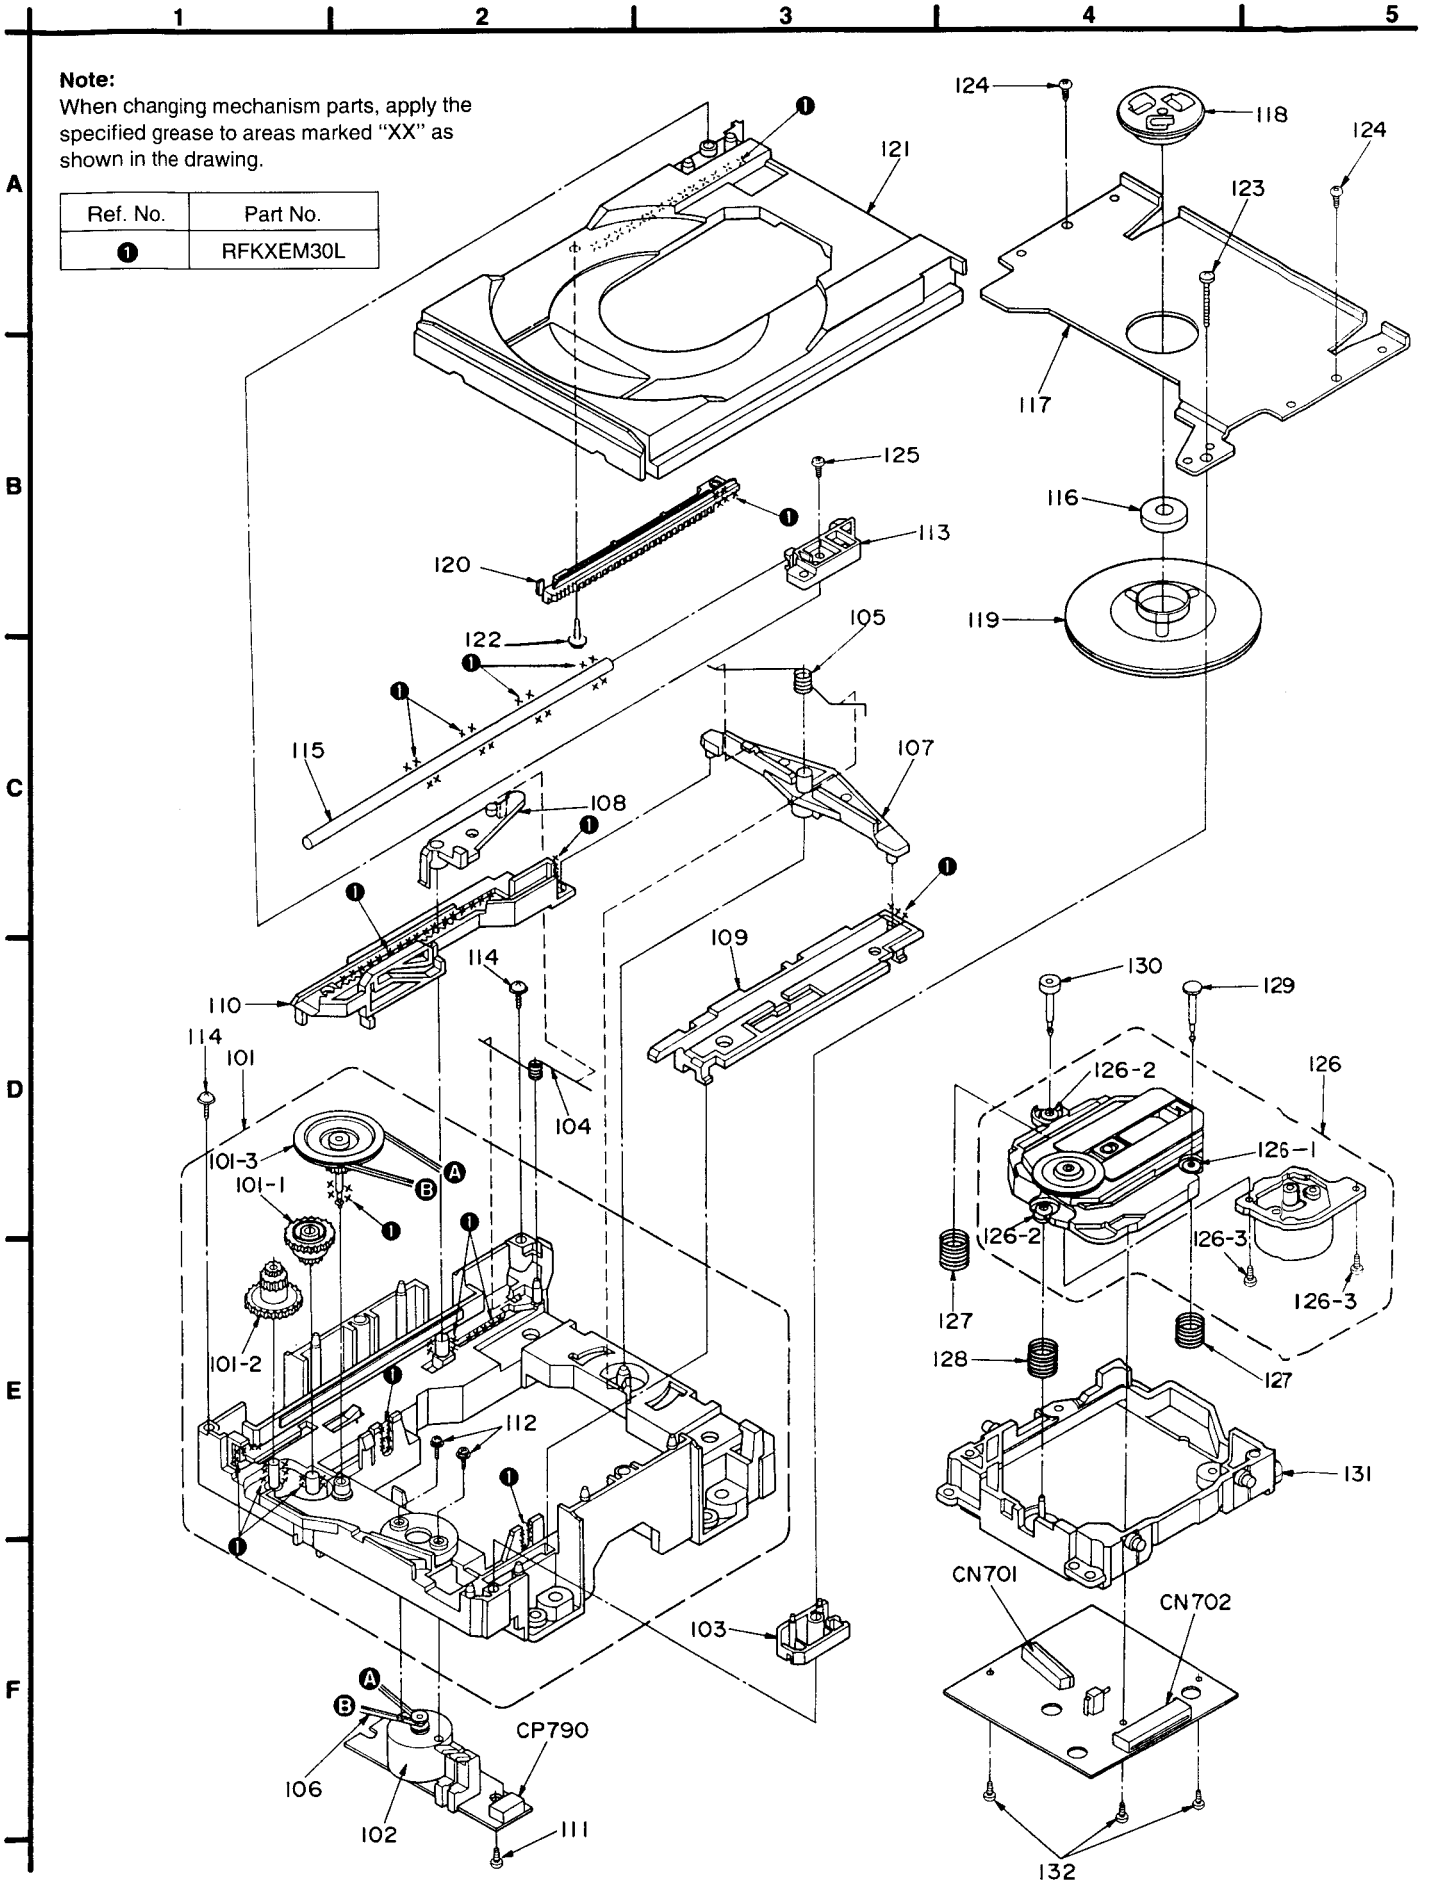


Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET PARTS		50	EAS8PL159A	SPEAKER (WOOFER)	
				51	REX0519Y	CABLE ASS' Y	
				52	RHD30044	SCREW	
1	RGH0581-K	ORNAMENT, CD TRAY		53	RKP0026-W	SPEAKER COVER	
2	RKK0041-K	BATTERY COVER		54	RKP0027-W	SPEAKER COVER	
3	RKQ0150-K	TOP PANEL		55	RMK0213	FRAME	
4	XTV3+12G	SCREW		56	RKS0154E-K	REAR CABINET	(EG)
5	XTN3+40GY	SCREW		56	RKS0154F-K	REAR CABINET	(EB)
6	REE0523	FPC		57	RYH0013-K	HANDLE	
7	EYF52BC	FUSE HOLDER (FH601, 602)		58	XEARR175ED-Y	TELESCOPIC ANTENNA	
8	REX0514	WIRE ASS' Y (W653)		59	XYN3+F12FY	SCREW	
9	RJC5112B	BATT. SPRING		61	RSC0326	SHIELD PLATE	
10	RJC7512A	BATT. SPRING (BACK UP)		62	RFKXDT75E-K	FRONT CABINET ASS' Y	
11	RJC9312C	BATT. SPRING		62-1	RFKXDT75E-K	PANEL ASS' Y	
12	REX0517Y	CABLE ASS' Y (CW790)		62-2	RGL0213	LEADING LIGHT PANEL	
13	REX0515	CABLE ASS' Y (W650)		62-3	XTV26+8G	SCREW	
14	REX0516Y	CABLE ASS' Y (CW601)		63	RFKXDT75AK	SLIP GEAR ASS' Y	
15	RWJ4706100MM	FLAT CABLE (W601)		64	RMK0215	CHASSIS	
16	XTV3+10F	SCREW		65	RYF0260-K	CASSETTE LID (DECK1)	
17	RMG0355-K	RUBBER		66	RYF0261-K	CASSETTE LID (DECK2)	
18	RGU0947C-K	BUTTON, FRONT OPERATION		67	RFKPXDT75-K	MOTOR ASS' Y	
19	RGU0948-K	BUTTON, TOP OPERATION		68	RFKBXDT75AK	BATT. P. C. B. (MAIN)	
20	RHD30006	SCREW		69	RFKBXDT75BK	BATT. P. C. B. (CLOCK/MEMO)	
21	RJR0111	ANT. TERMINAL		70	RMR0763-K	SPACER	
22	RMK0214	CHASSIS		71	RSC0374	SHIELD PLATE	
23	RMK0217	CHASSIS		72	RMN0229	LCD HOLDER	
24	RSC0330	SHIELD PLATE		73	RSL5109-L	LCD (LCD1)	
25	RXA0138	SHIELD PLATE ASS' Y		74	RGPO343B-Q	LCD PANEL	
26	RDB0056	HOLDER		75	XTW2+8P	SCREW	
27	RDB0057	HOLDER		76	RMCO161	SPRING	
28	REE0524	FPC		77	RMG0349-K	RUBBER	
29	RGU0949-K	BUTTON, MANU CONT.		79	RMBO346	SPRING	
30	RGU0950-K	BUTTON, DECK CONT.		80	RMRO727-W	WASHER	
31	RKF0329B-K	DISPLAY PANEL (OUTER)		81	RAT0010	TWEETER (Z401, Z501)	
32	RKF0330-K	DISPLAY PANEL (INNER)					
33	RKQ0151-K	DISPLAY PANEL HOLDER					
34	RMBO318	SPRING					
35	RMG0249-K1	RUBBER CAP					
36	RMRO699-K	PANEL ROCK					
37	RMS0330	GEAR					
38	RDG0250	GEAR					
39	RDG0251	GEAR					
40	REX0517Y	CABLE ASS' Y (CW4602)					
41	RWJ4703080QQ	FLAT CABLE (W4605)					
42	RMK0216	CHASSIS					
43	RMRO700-W	ANGLE					
44	RSC0331	SHIELD PLATE					
45	XSN26+3	SCREW					
46	XTV26+12F	SCREW					
47	XTV26+8G	SCREW					
48	XTN26+8GFZ	SCREW					
49	EAS8PH64C	SPEAKER (MID)					

Cabinet Parts Location

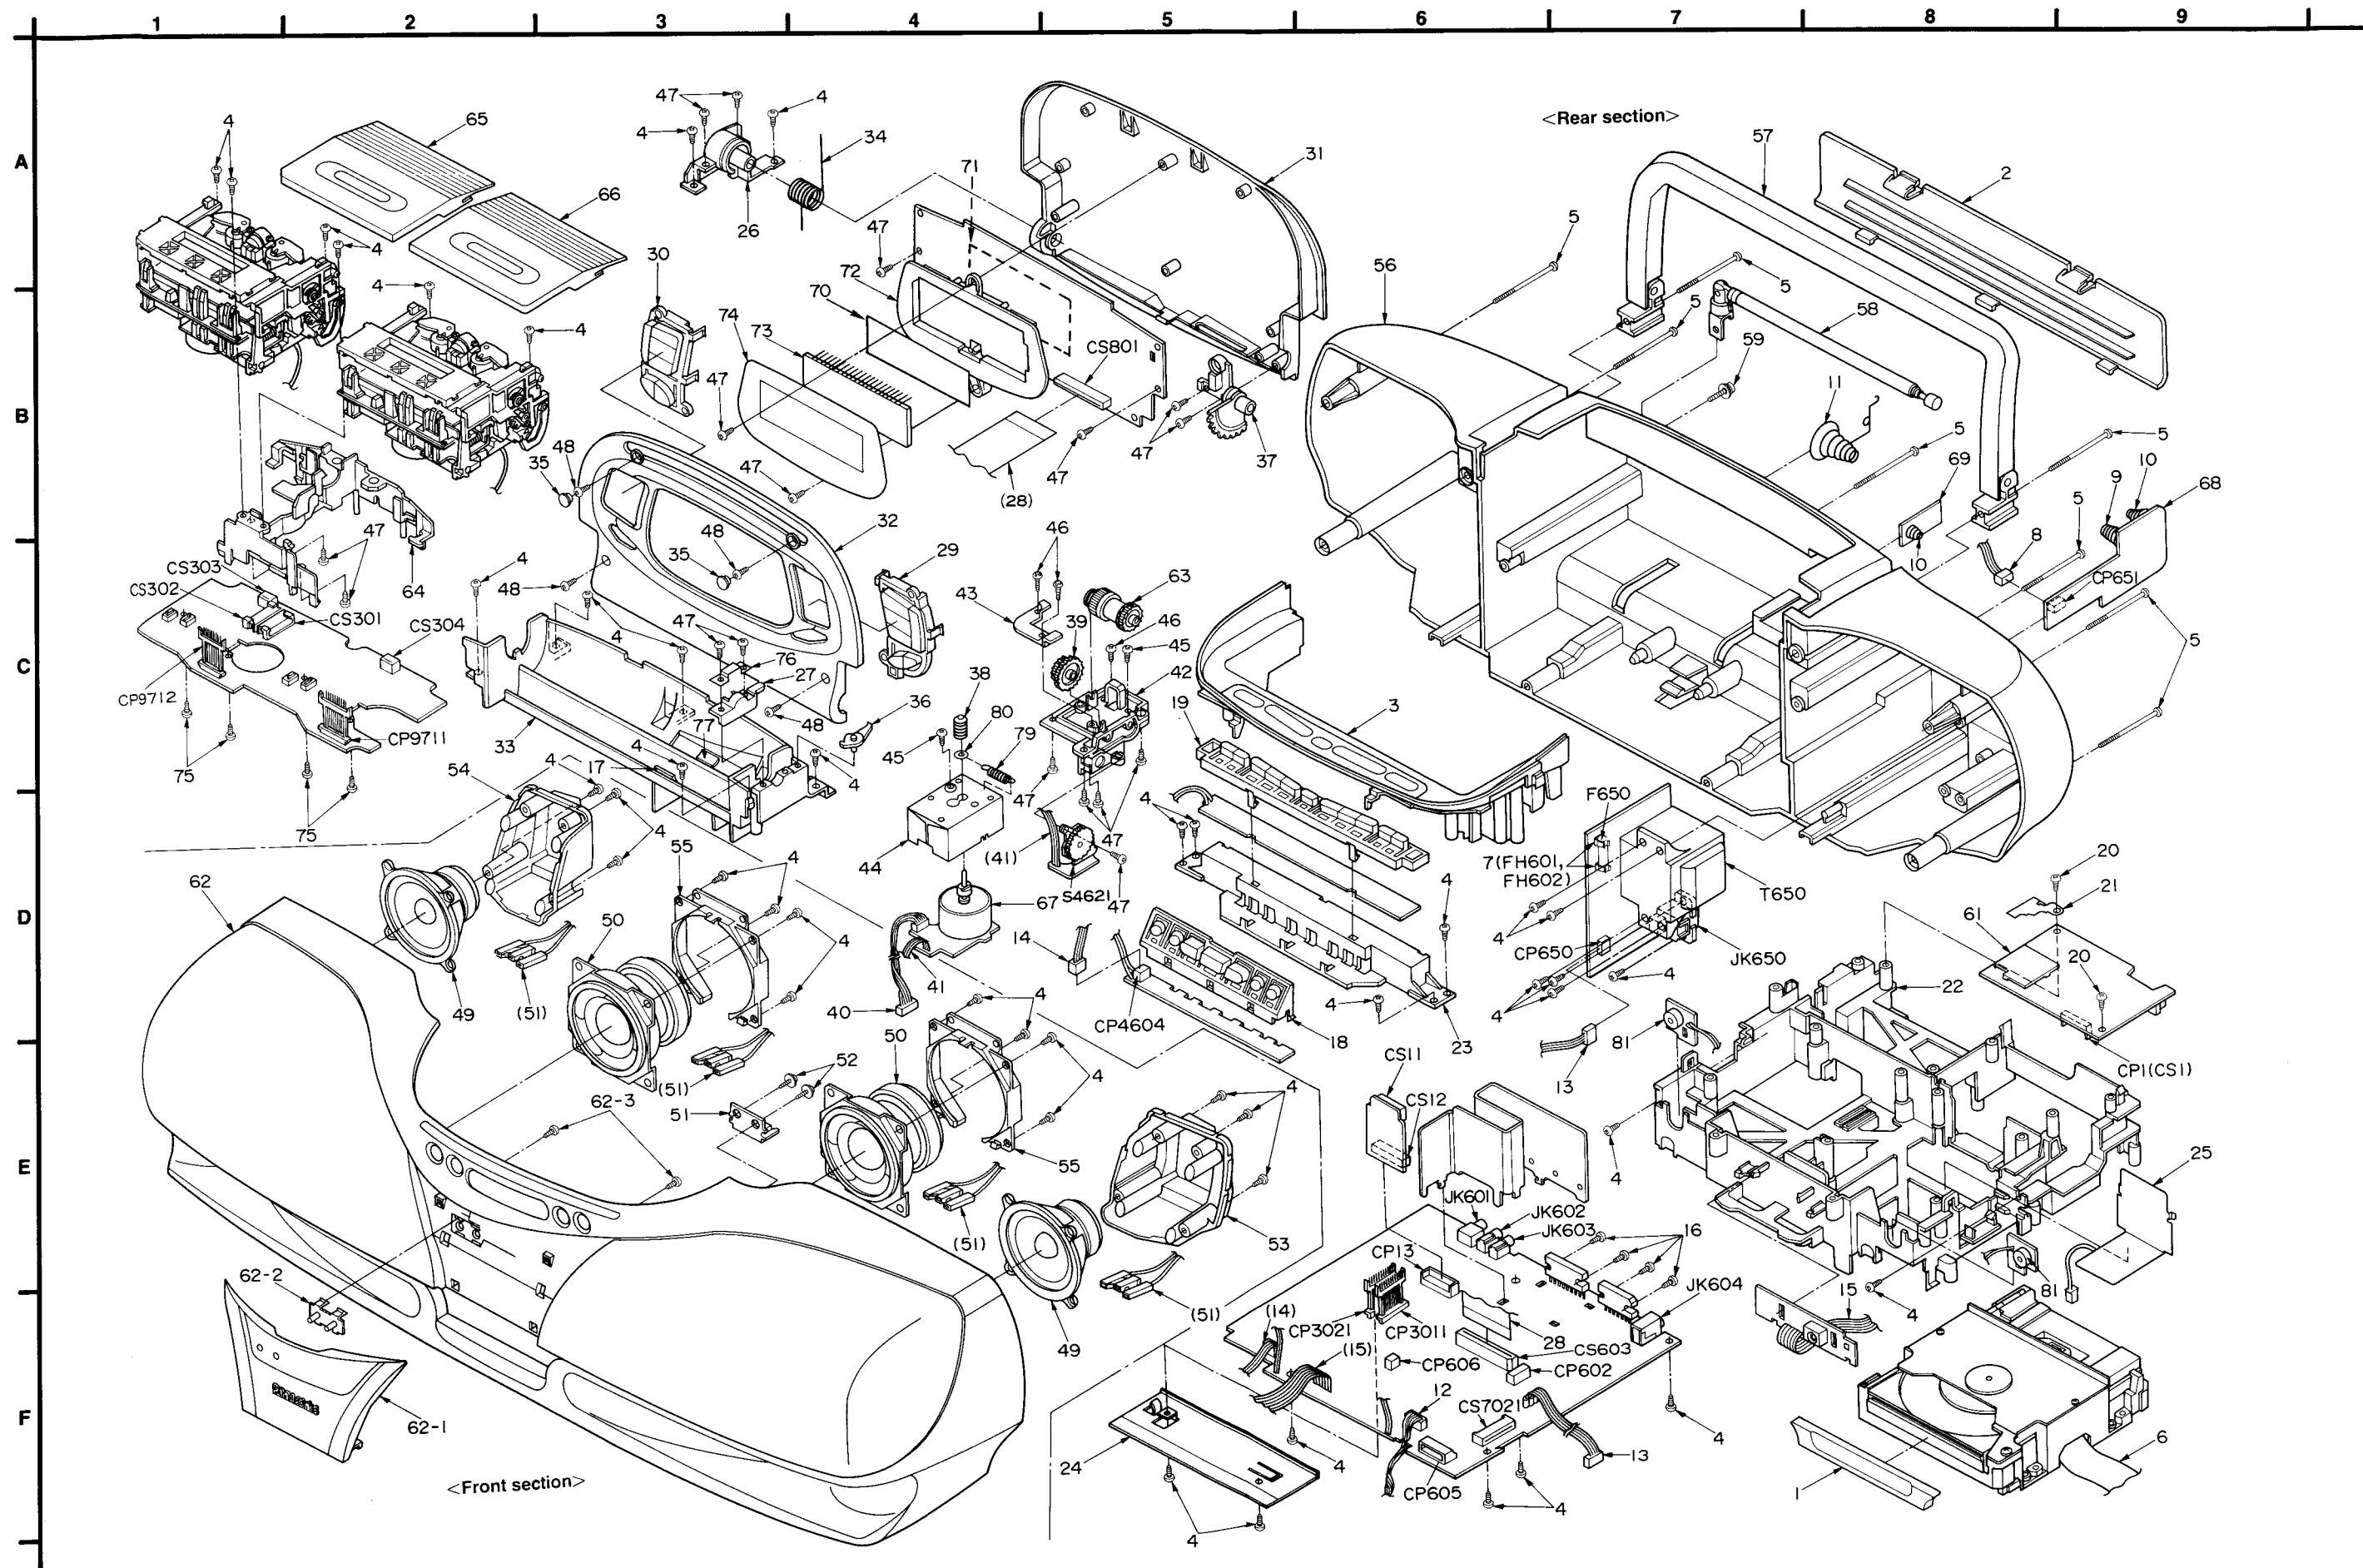


■ Mechanism Parts Location • DECK1 (PLAYBACK)

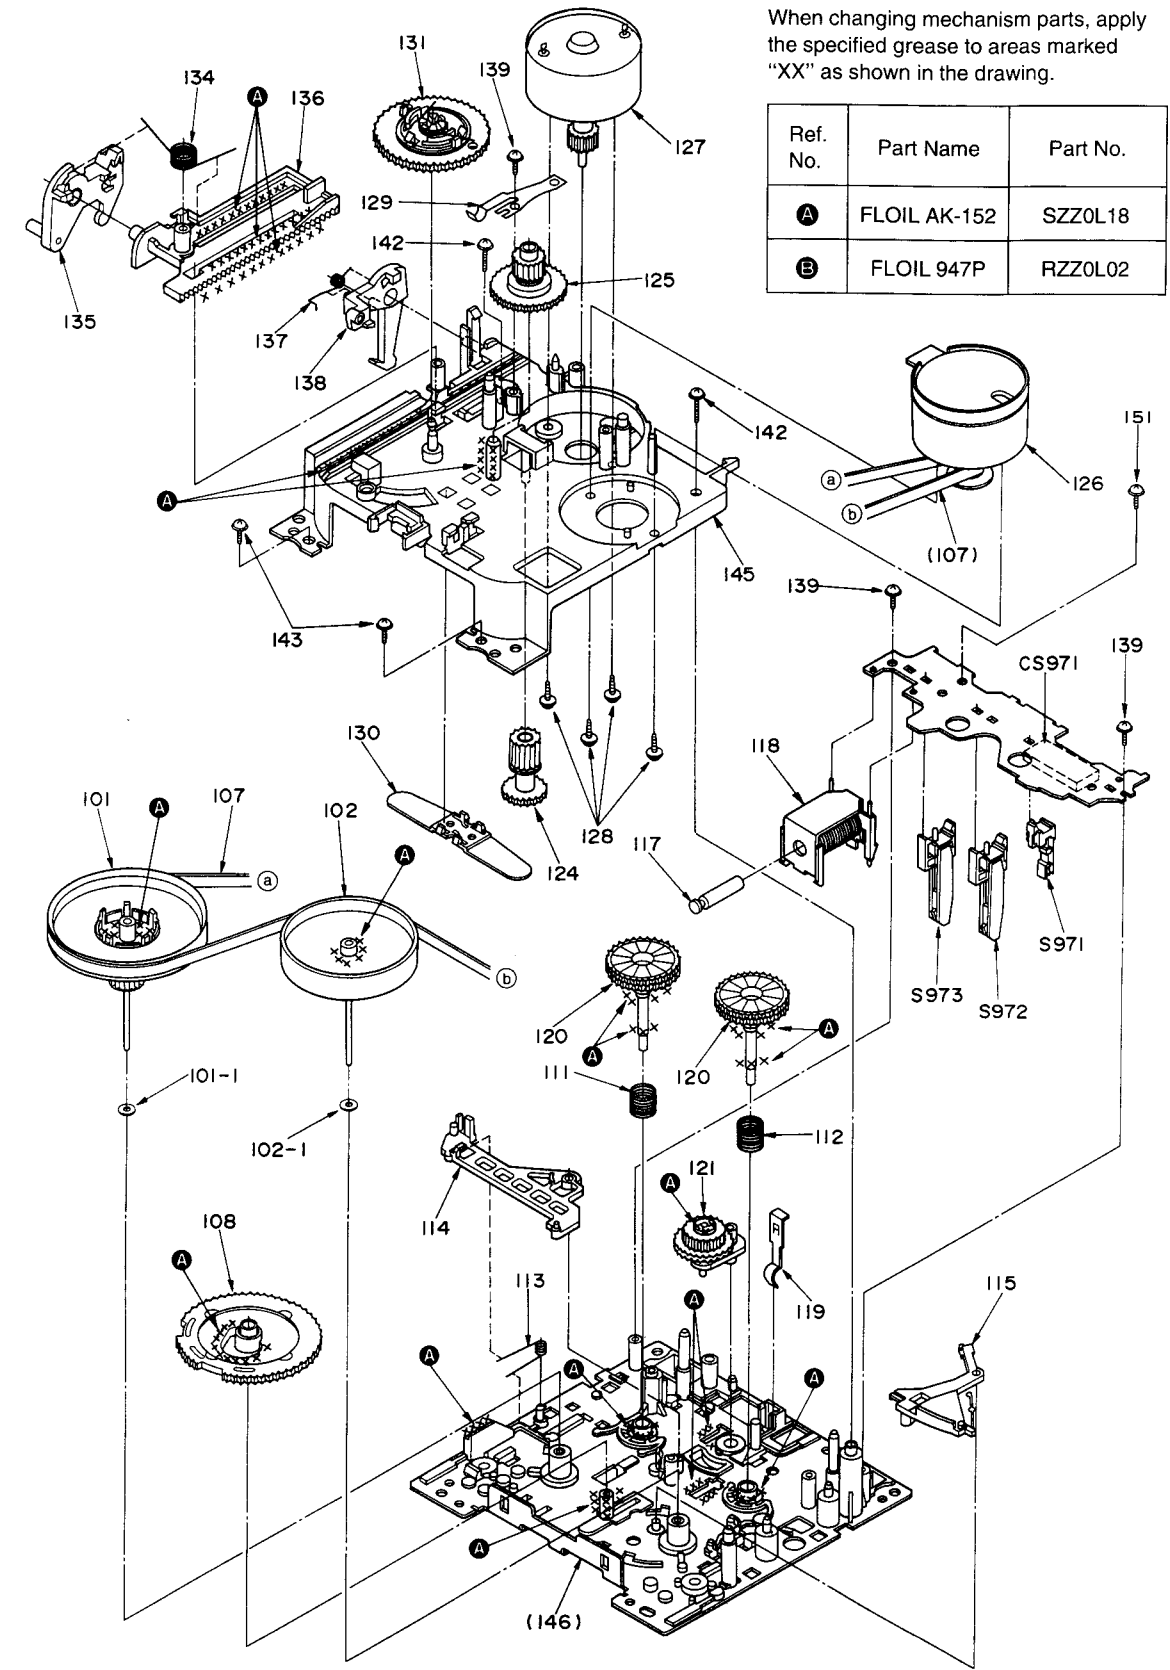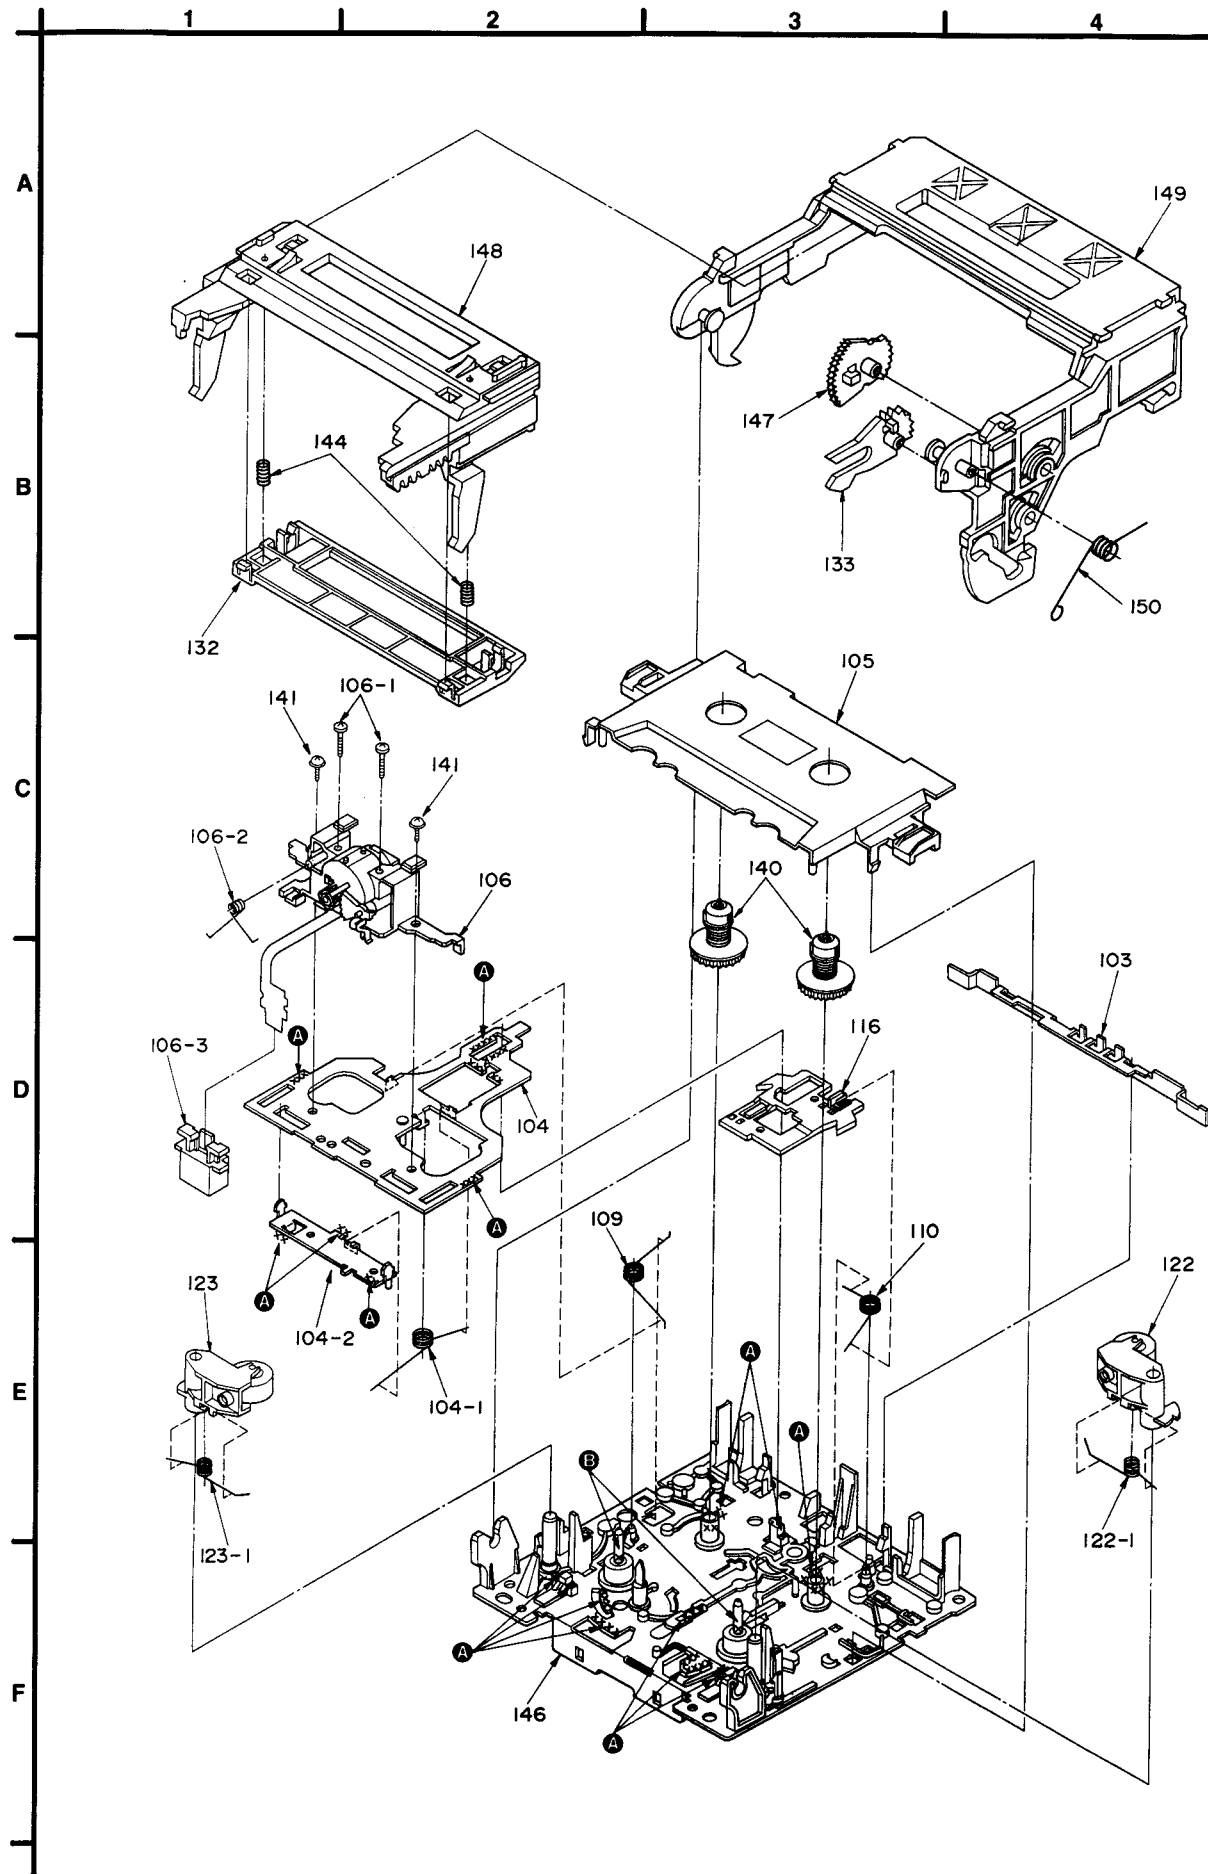

Note:
When changing mechanism parts, apply the specified grease to areas marked "XX" as shown in the drawing.

Ref. No.	Part Name	Part No.
A	FLOIL AK-152	SZZ0L18
B	FLOIL 947P	RZZ0L02

■ Mechanism Parts Location • DECK2 (RECORD/PLAYBACK)

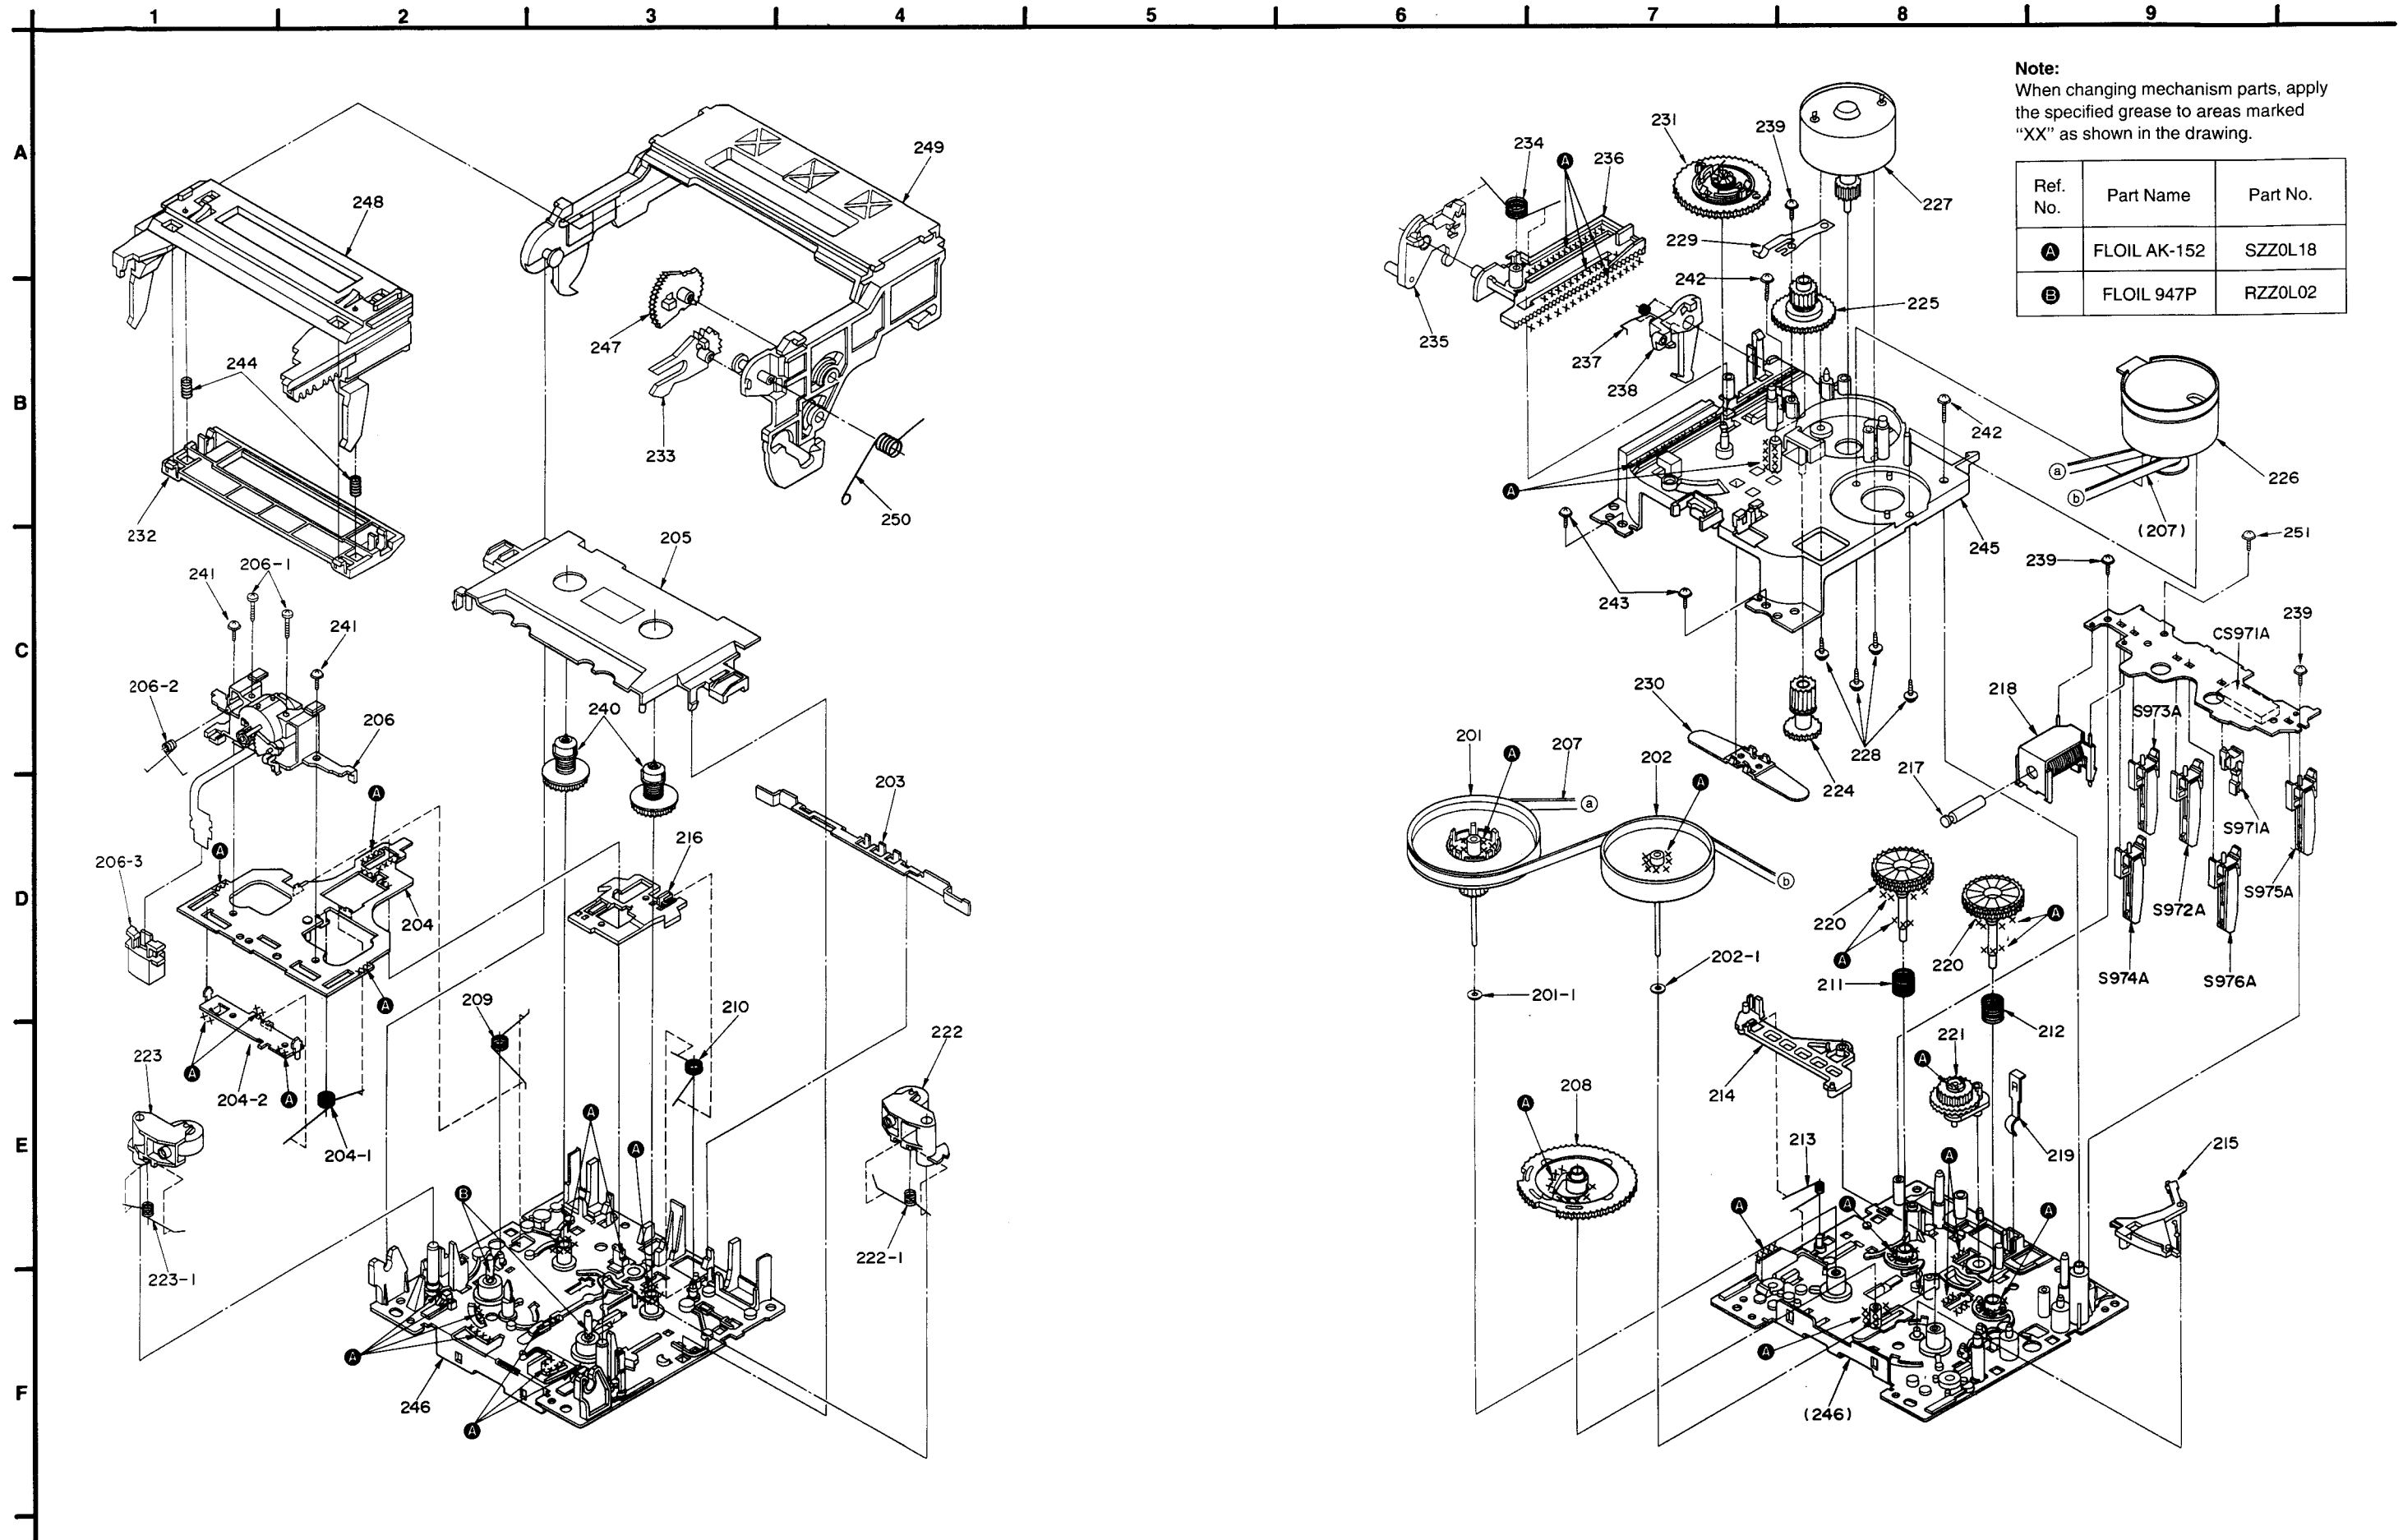

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		MECHANISM PARTS		141	XTW2+5L	SCREW	
		DECK1 (P. B)		142	XTW26+12S	SCREW	
				143	XTW26+6L	SCREW	
				144	RMB0324	SPRING	
101	RXF0045	FLYWHEEL (F) ASS' Y		145	RFKJSCH404AK	SUB CHASSIS ASS' Y	
101-1	RMQ0420	WASHER		146	RFKJSCH404BK	CHASSIS ASS' Y	
102	RXF0046	FLYWHEEL (R) ASS' Y		147	RDG0212A	LIFT GEAR	
102-1	RMQ0421	WASHER		148	RGQ0121-K	LIFT	
103	RML0272	SWITCH LEVER		149	RKF0334-K	CASSETTE HOLDER	
104	RXQ0265	HEAD BASE		150	RME0143	SPRING	
104-1	RMB0266-1	SPRING		151	XYC2+JF16	SCREW	
104-2	RXM0036	ROD				DECK2 (R/P)	
105	RGK0582-K	ORNAMENT PLATE					
106	RXQ0312-1	HEAD ASS' Y (P/B)		201	RXF0045	FLYWHEEL (F) ASS' Y	
106-1	RHD17015	AZIMUTH ADJUSTMENT SCREW		201-1	RMQ0420	WASHER	
106-2	RMB0352	SPRING		202	RXF0046	FLYWHEEL (R) ASS' Y	
106-3	RMQ0360A	CONNECTOR HOLDER		202-1	RMQ0421	WASHER	
107	RDV1082A	BELT		203	RML0272	SWITCH LEVER	
109	RDK0019A	SPRING		204	RXQ0265	HEAD BASE	
110	RMB0262	SPRING		204-1	RMB0266-1	SPRING	
111	RMB0263	SPRING		204-2	RXM0036	ROD	
112	RMB0264	SPRING		205	RGK0582-K	ORNAMENT PLATE	
113	RUW1472A	SPRING		206	RXQ0316-1	HEAD ASS' Y (R/P)	
114	RML0267A	LEVER		206-1	RHD17015	AZIMUTH ADJUSTMENT SCREW	
115	RML0268A	LEVER		206-2	RMB0352	SPRING	
116	RMD091A	BRAKE ROD		206-3	RMQ0360A	CONNECTOR HOLDER	
117	RMS0398	PLUNGER		207	RDV1082A	BELT	
118	RSJ0003	SOLENOID		208	RDK0019A	MAIN GEAR	
119	RUS6092C	SPRING		209	RMB0261	SPRING	
120	RXG0036	REEL TABLE		210	RMB0262	SPRING	
121	RXL0106	IDLER LEVER		211	RMB0263	SPRING	
122	RXP0052	PINCH ROLLER (F)		212	RMB0264	SPRING	
122-1	RMB0259	SPRING		213	RUW1472A	SPRING	
123	RXP0053	PINCH ROLLER (R)		214	RML0267A	LEVER	
123-1	RMB0260	SPRING		215	RML0268A	LEVER	
124	RDG0206A-1	GEAR		216	RMD091A	BRAKE ROD	
125	RDG0209A	GEAR		217	RMS0398	PLUNGER	
126	REM0036-1	CAPSTAN MOTOR		218	RSJ0003	SOLENOID	
127	REM0043	REEL MOTOR		219	RUS6092C	SPRING	
128	RHD26013	SCREW		220	RXG0036	REEL TABLE	
129	RMC0169	SPRING		221	RXL0106	IDLER LEVER	
130	RMQ0314A	SPACER		222	RXP0052	PINCH ROLLER (F)	
131	RXG0037	GEAR		222-1	RMB0259	SPRING	
132	RMQ0401A	STABILIZER		223	RXP0053	PINCH ROLLER (R)	
133	RML0275A	LIFT ARM		223-1	RMB0260	SPRING	
134	RMB0269	SPRING		224	RDG0206A-1	GEAR	
135	RML0270A-1	LEVER		225	RDG0209A	GEAR	
136	RMQ0312A	DRIVE GEAR		226	REM0036-1	CAPSTAN MOTOR	
137	RMB0268	SPRING		227	REM0043	REEL MOTOR	
138	RML0271A	LEVER		228	RHD26013	SCREW	
139	XTW2+6S	SCREW		229	RMC0169	SPRING	
140	RXR0018	REEL TABLE					

Ref. No.	Part No.	Part Name & Description	Remarks
230	RMQ0314A	SPACER	
231	RXG0037	GEAR	
232	RMQ0401A	STABILIZER	
233	RML0275A	LIFT ARM	
234	RMB0269	SPRING	
235	RML0270A-1	LEVER	
236	RMQ0312A	DRIVE GEAR	
237	RMB0268	SPRING	
238	RML0271A	LEVER	
239	XTW2+6S	SCREW	
240	RXR0018	REEL TABLE	
241	XTW2+5L	SCREW	
242	XTW26+12S	SCREW	
243	XTW26+6L	SCREW	
244	RMB0324	SPRING	
245	RFKJSCH404AK	SUB CHASSIS ASS' Y	
246	RFKJSCH404BK	CHASSIS ASS' Y	
247	RDG0212A	LIFT GEAR	
248	RGQ0121-K	LIFT	
249	RKF0334-K	CASSETTE HOLDER	
250	RME0143	SPRING	
251	XYC2+JF16	SCREW	

Ref. No.	Part No.	Part Name & Description	Remarks
		PACKING MATERIAL	
P1	RPG1882	GIFT BOX	(EB)
P1	RPG1881	GIFT BOX	(EG)
P2	RPN0724	PAD ASS' Y	
P3	RPH6532A	PROTECTION COVER	
		ACCESSORIES	
A1	RAK-RX135WH	REMOTE CONTROLLER	
A1-1	RKK0057-K	BATTERY COVER	
A2 Δ	RJA0019-2K	AC POWER CORD	(EG)
A2 Δ	VJA0733	AC POWER CORD	(EB)
A3	RQT2317-B	INSTRUCTIONS MANUAL	(EB)
A4	RQT2318-G	INSTRUCTIONS MANUAL	(EG)
A5	RQT2319-E	INSTRUCTIONS MANUAL	(EG)

■ Packaging

